
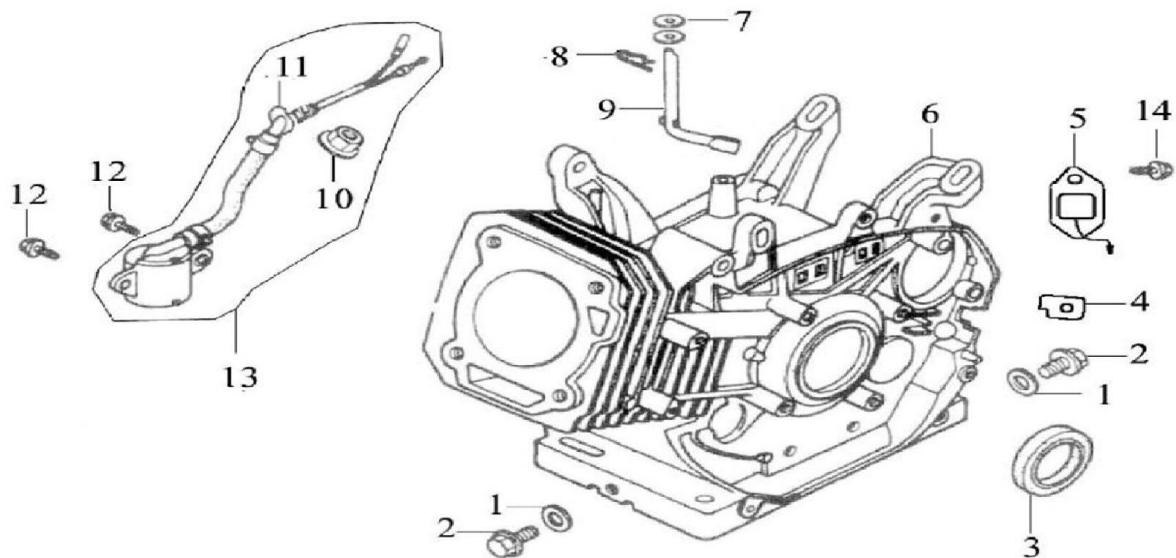


E-1 CRANKCASE ASSY.

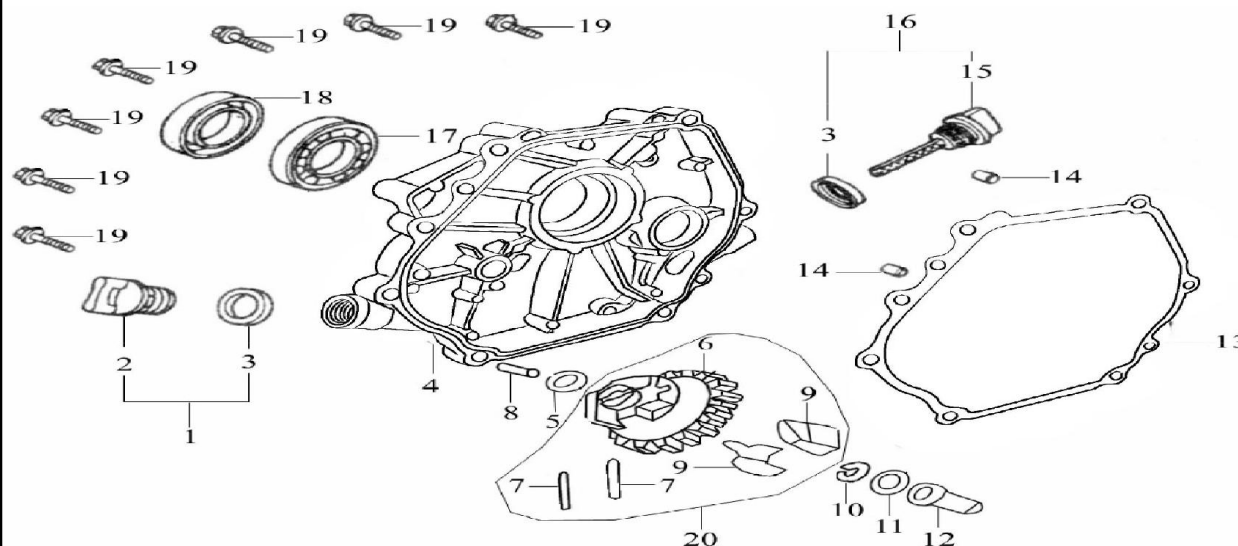


1		Washer	
2		Drain Plug	
3	990733	Oil Seal, Crankshaft	
4		Seal	
5	990680	Diode	
6	990634	Crankcase	
7		Washer	
8		Split pin	
9		Regulating Sway Bar	
10		Nut M10	
11		O-ring	
12		Bolt M6x14-F	
13	990691	Oil Sensor	
14		Bolt M6x12-F	

E-2 CRANKCASE COVER ASSY.


1	990777	Oil Plug With Seal	
2		Oil Plug	
3		Seal	
4	990652	Crankcase Cover	
5		Washer, Driven Gear	
6		Driven Gear, Regulator	
7		Pin	
8		Regulating Shaft	
9		Flying Block	
10		Snap Ring	
11		Washer	
12		Sliding Sleeve	
13	990702	Gasket, Crankcase	
14		Set pinØ8×12	
15		Dipstick	
16	990771	Dipstick With Seal	
17	990724	Bearing 6206	
18	990733	Oil seal, Crankshaft	
19		Bolt M8×35-F	
20	990711	Driven Gear, Regulator Assy	

E-3 CYLINDER HEAD & CYLINDER HEAD COVER ASSY

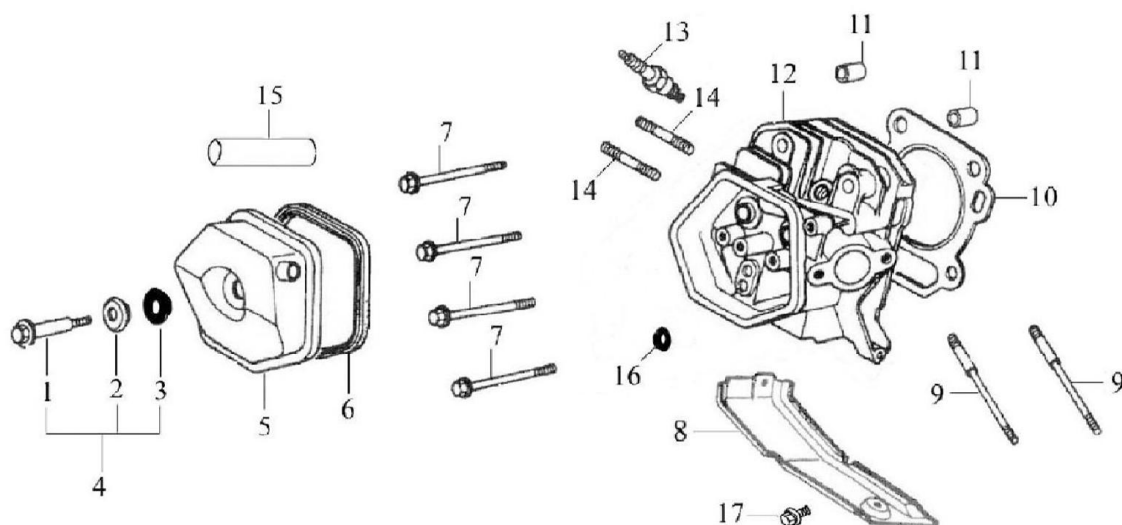


1		Bolt	
2		Washer	
3	990368	Rubber Seal	
4		Bolt	
5	990351	Cylinder Head Cover Assy	
6	990361	Gasket, Cylinder Head Cover	
7		Bolt	
8		Lead Wind Cover	
9	990401	Stud	
10	990372	Gasket, Cylinder Head	
11	990381	Set Pin	
12	990432	Cylinder Head Assy	
13	990420	Spark Plug F6RTC	
14	990411	Stud	
15		Air Duck	
16	990365	Seal	
17		Bolt: M6x12-F	

E-4 CRANKSHAFT, PISTON & CONNECTING

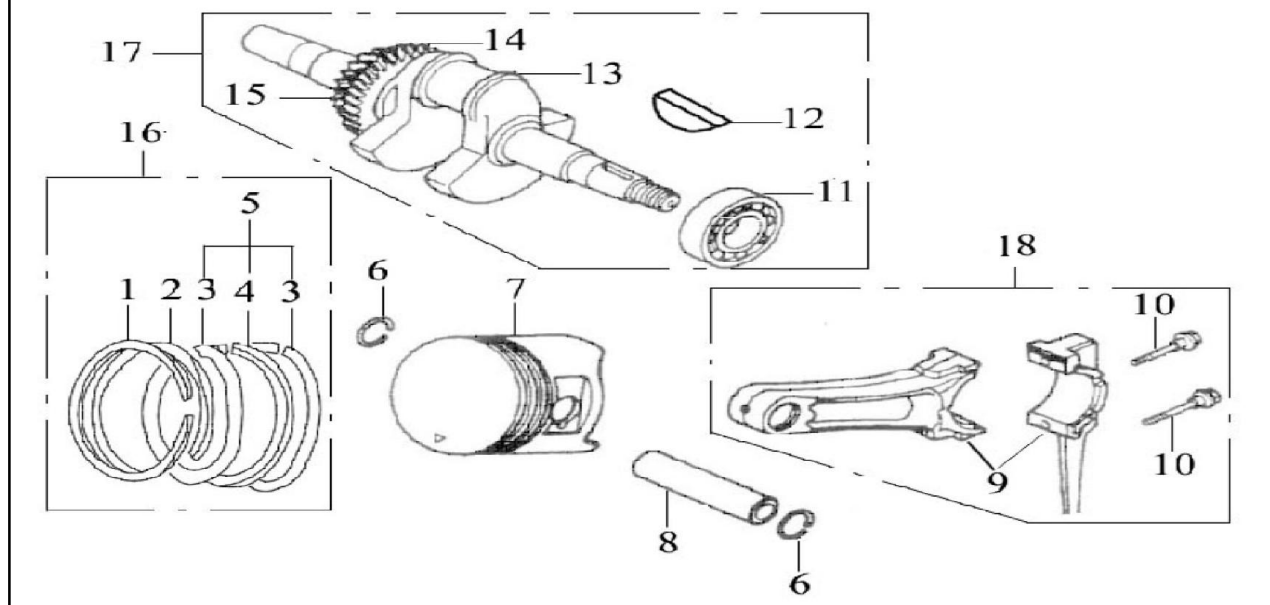


1		Piston Ring (I)	
2		Piston Ring (II)	
3		Side Rail	
4		Expander	
5		Scraper Ring Set	
6	990561	Piston Pin Circlip	
7	990573	Piston	
8	990582	Piston Pin	
9		Shank	
10		Bolt	
11	990724	Bearing 6206	
12		Woodruff Key	
13		Crankshaft	
14		Drive Gear	
15		Timing Driving Gear	
16	990553	Piston Ring Set	
17	990602	Crankshaft Assy	
18	990592	Connecting Rod Assy	

E-5 COMBINATION OF CAM SHAFT & VALVE ROCKER

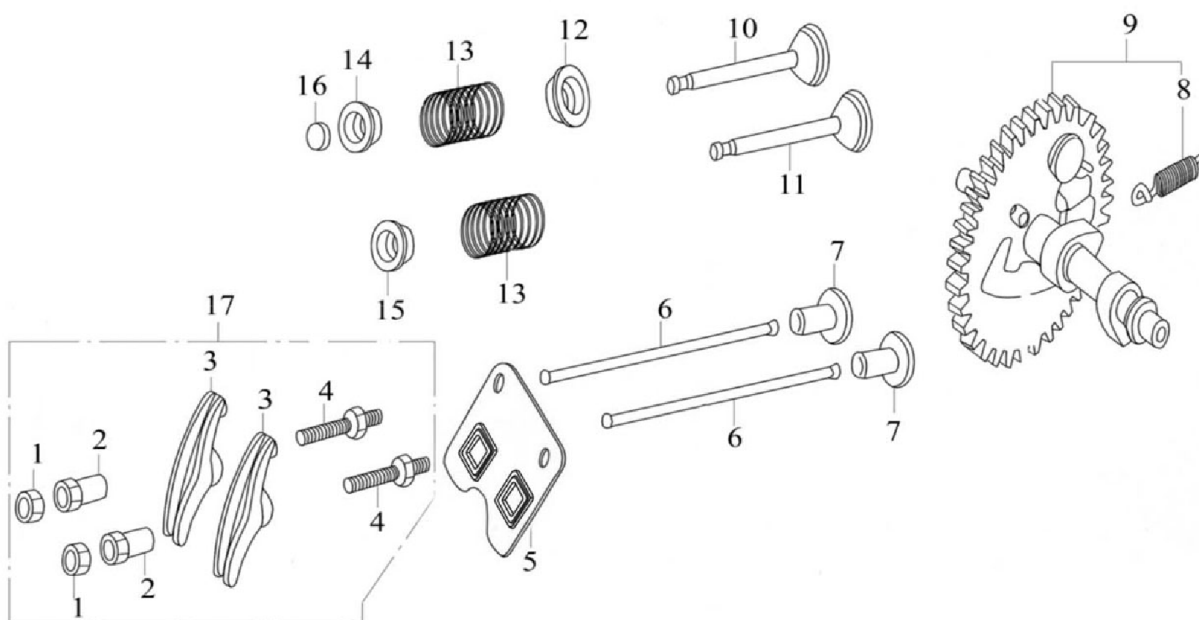

1		Lock Nut	
2		Sleeve	
3		Valve Rocker	
4		Adjusting Bolt For Valve Gap	
5	990452	Pusher Guide	
6	990462	Pusher	
7	990472	Tappet	
8		Extension Spring	
9	990482	Camshaft Assy	
10	990492	Exhaust Valve	
11	990502	Intake Valve	
12		Spring Retainer, Exhaust Valve	
13	990512	Valve Spring	
14	990532	Spring Seat, Exhaust Valve	
15	990522	Spring Seat, Intake Valve	
16	990541	Cap	
17	990441	Valve Rocker Assy	

E-6 CARBURETOR ASSY

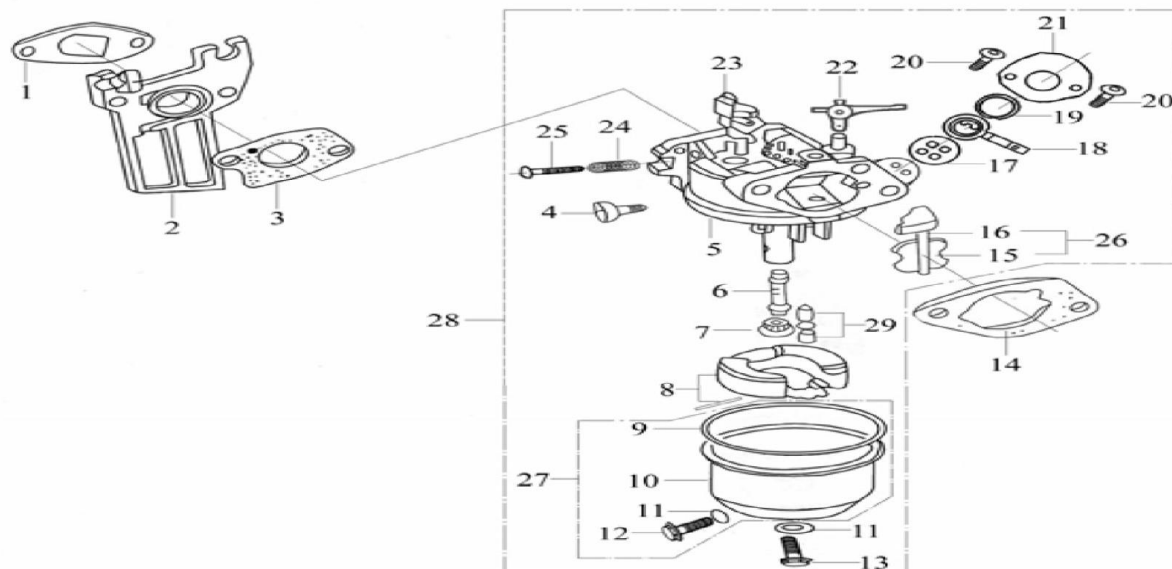


1	990241	Inlet Gasket	
2	990252	Connecting Block	
3	990261	Carburettor Gasket	
4		Idle Adjustment Screw	
5		Mixture Chamber Body	
6		Main Nozzle	
7		Main Jet	
8		Float	
9	990281	Float Chamber Gasket	
10		Float Chamber	
11		Washer	
12		Float Chamber Drain Screw	
13		Screw	
14	990271	Air Cleaner Gasket	
15		Choke	
16		Choke Stem	
17		Airproof Washer	
18		Throttle Lever	
19		Washer	
20		Screw	


This exploded view diagram illustrates the assembly of a pressure cooker. The components are numbered as follows:

- 1**: Small circular gasket or seal.
- 2**: Main body of the pressure cooker.
- 3**: Flange or base plate.
- 4**: Small screw or pin.
- 5**: Central vent or plug.
- 6**: Vent cap or seal.
- 7**: Vent assembly component.
- 8**: Vent assembly component.
- 9**: Inner pot or liner.
- 10**: Outer pot or body.
- 11**: Small circular gasket or seal.
- 12**: Small screw or pin.
- 13**: Small screw or pin.
- 14**: Flange or base plate.
- 15**: Gasket or seal.
- 16**: Gasket or seal.
- 17**: Gasket or seal.
- 18**: Gasket or seal.
- 19**: Gasket or seal.
- 20**: Gasket or seal.
- 21**: Gasket or seal.
- 22**: Vent assembly component.
- 23**: Vent assembly component.
- 24**: Vent assembly component.
- 25**: Vent assembly component.
- 26**: Gasket or seal.
- 27**: Inner pot or liner.
- 28**: Outer pot or body.


21		Cover	
22	990290	Choke Switch	
23		Throttle Unit	
24		Spring, Mixture Adjustment Screw	
25		Mixture Adjustment Screw	
26		Choke Unit	
27		Float Chamber	
28	990302	Carburettor Assy	
29		Float Needle	

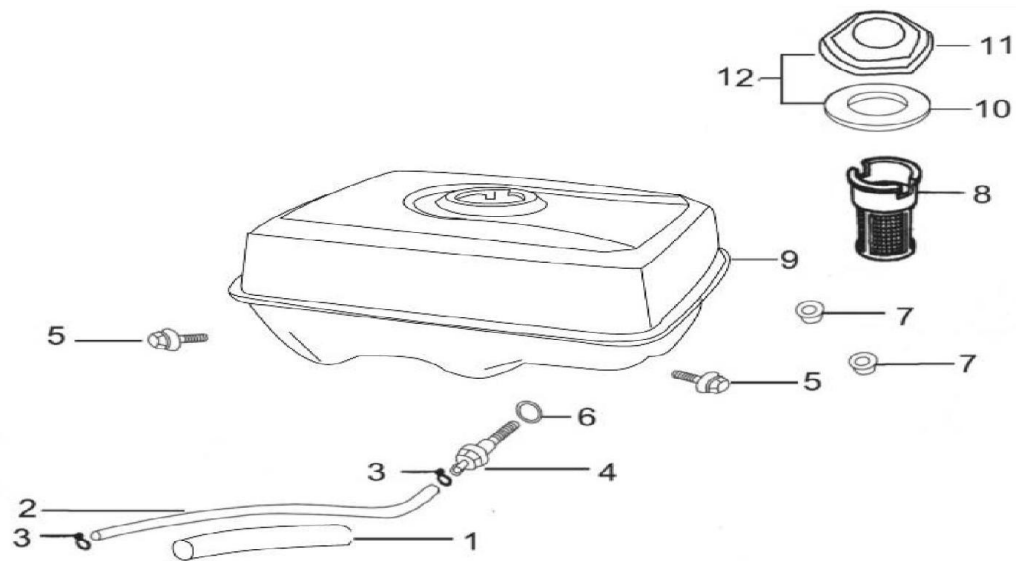E-7 FUEL TANK ASSY


1		Pipe	
2		Outlet Pipe	
3		Pipe Clamp	
4	990020	Connector	
5		Bolt M8×25	
6		Packing Ring	
7		Nut M8	
8		Filter Cup	
9	990003	Fuel Tank	
10		Packing Ring	
11		Fuel Filler Cap	
12	990010	Fuel Filler Cap With Packing Ring	

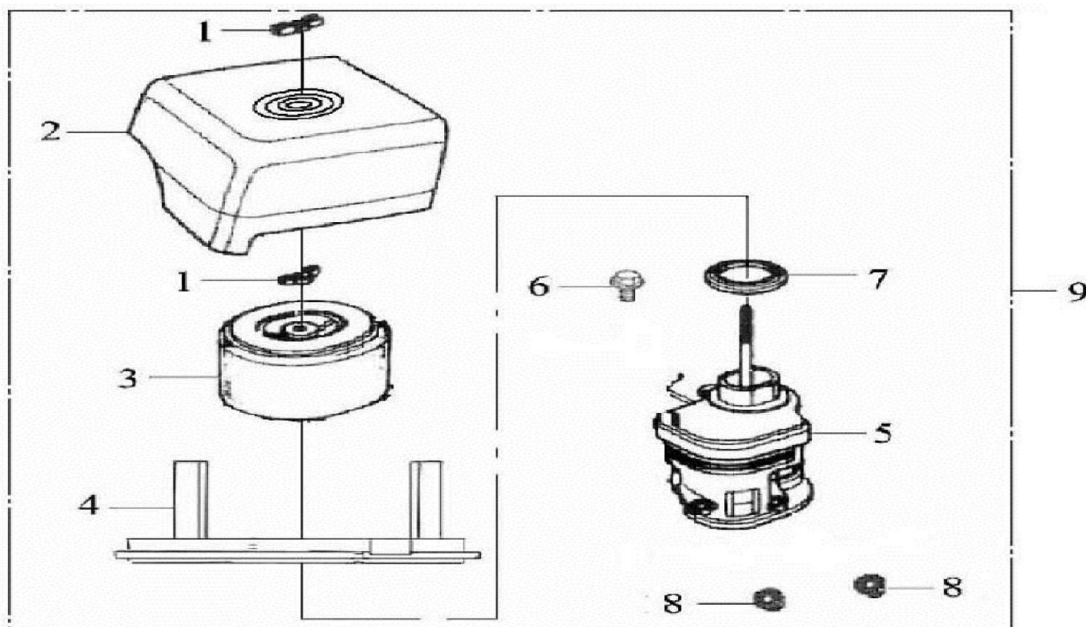E-8 AIR CLEANER ASSY

1	990030	Air Cleaner Cover Nut	
2		Air Cleaner Cover	
3	990042	Filter Element	
4		Air Cleaner Base	
5		Air Cleaner Housing Assy	
6		Bolt M6x22	
7		Washer	
8		Nut M6 (Flange)	
9	990052	Air Cleaner Assy	

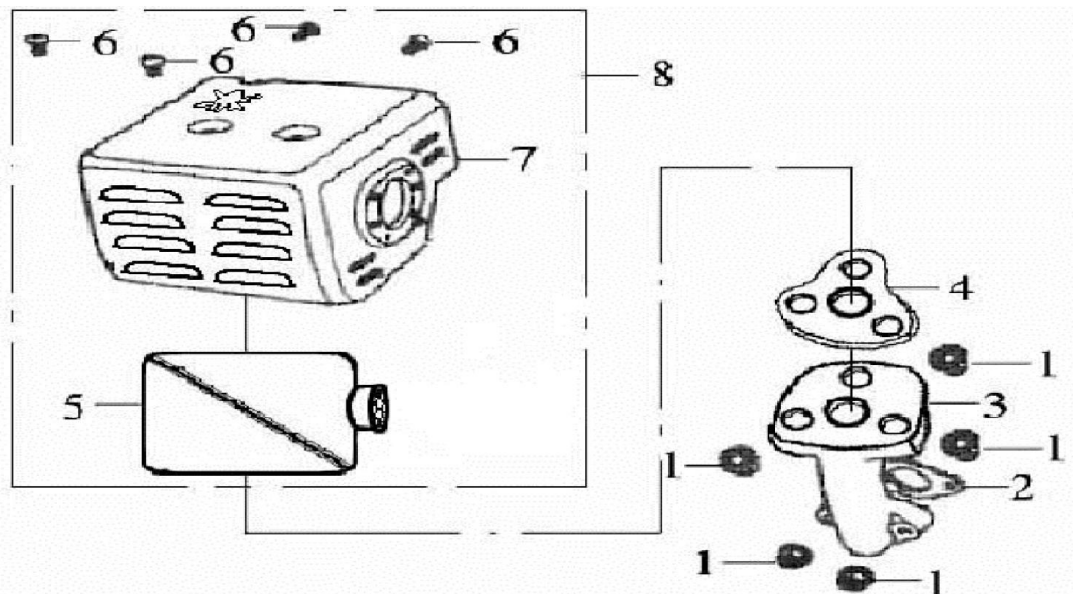
E-9 MUFFLER

1		Nut M8	
2	990070	Exhaust Pipe	
3	990061	Exhaust Pipe Gasket	
4	990066	Muffler Gasket	
5		Muffler	
6		Muffler Hood Assy	
7		Screw M5×8	
8	990082	Muffler Assy	

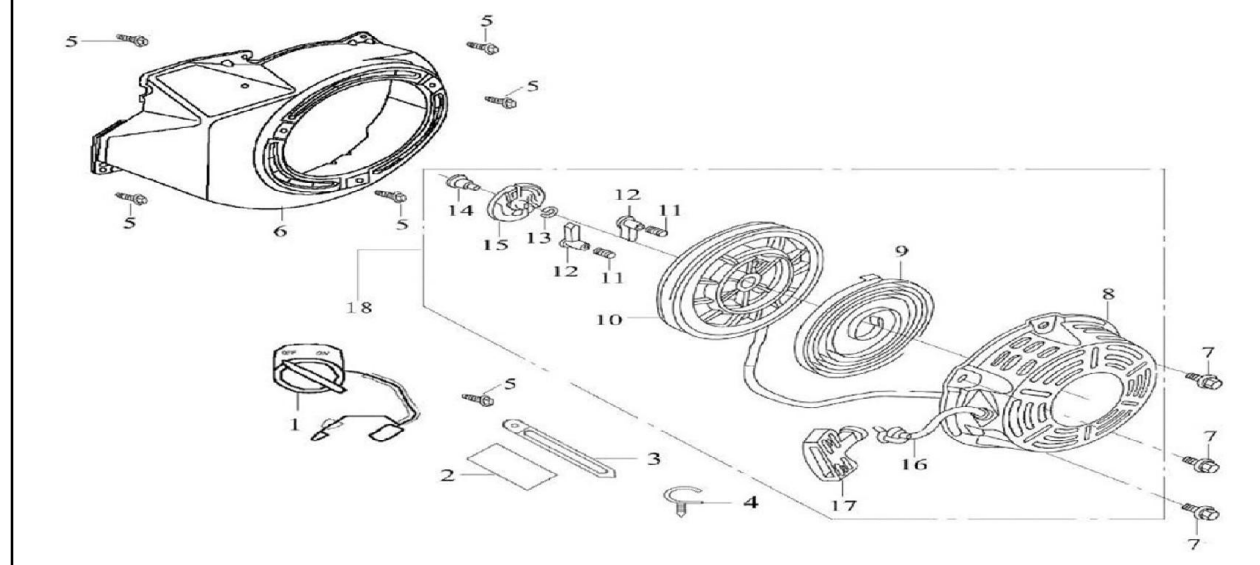
E-10 RECOIL STARTER

1	990110	Engine Switch	
2		Wire Grommet	
3		Clip	
4		Plastic Clip	
5	990102	Bolt M6×12-F	
6		Fan Hood Assy	
7	990100	Bolt M6×8-F	
8		Casing	
9	990120	Spiral Spring	
10	990131	Starter Rolls	
11	990121	Ratchet Spring	
12	990125	Ratchet	
13	990122	Friction Spring	
14	990103	Set Screw	
15	990126	Spring Lid	
16		Rope	
17	990108	Pulling Handle	
18	990152	Recoil Starter Assy	
19	990141	Recoil Starter	


E-11 REGULATING CONTROLS SYSTEM

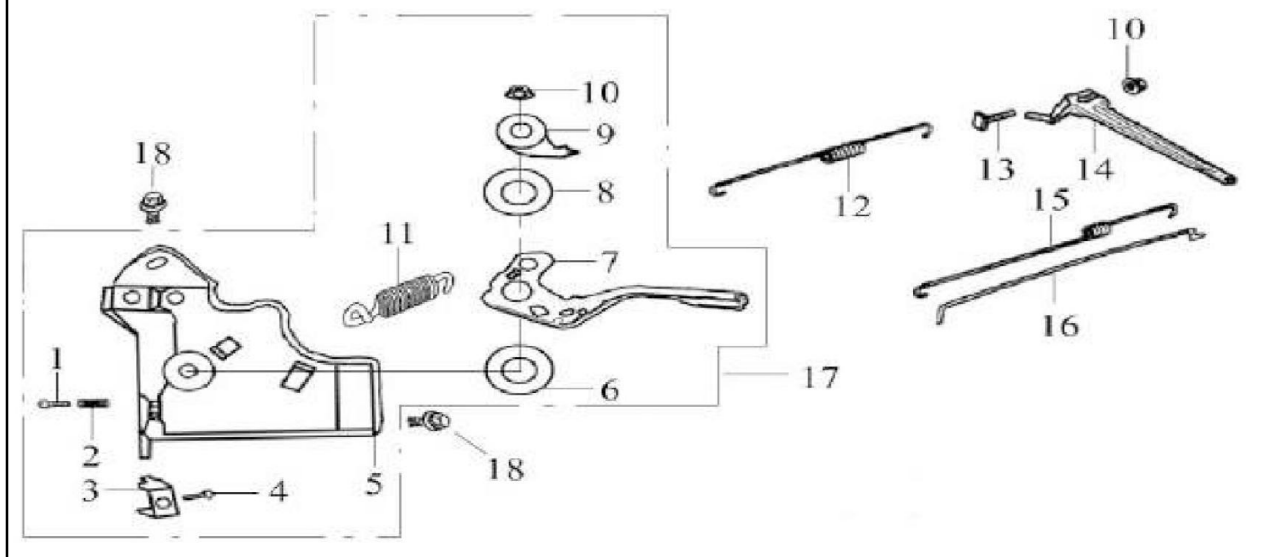

1		Bolt M5×35	
2		Regulating Spring	
3		Clamp	
4		Bolt M5×16	
5		Support Panel	
6		Washer	
7		Handgrip	
8		Spring Patch	
9		Setting Panel	
10		Nut M6(Flange)	
11		Spring	
12	990162	Back Spring	
13		Lock Bolt	
14		Regulating Arm	
15	990171	Fine Regulating Spring	
16	990182	Pulling Rod	
17	990192	Regulating Frame Assy	
18		Bolt M6×12-F	

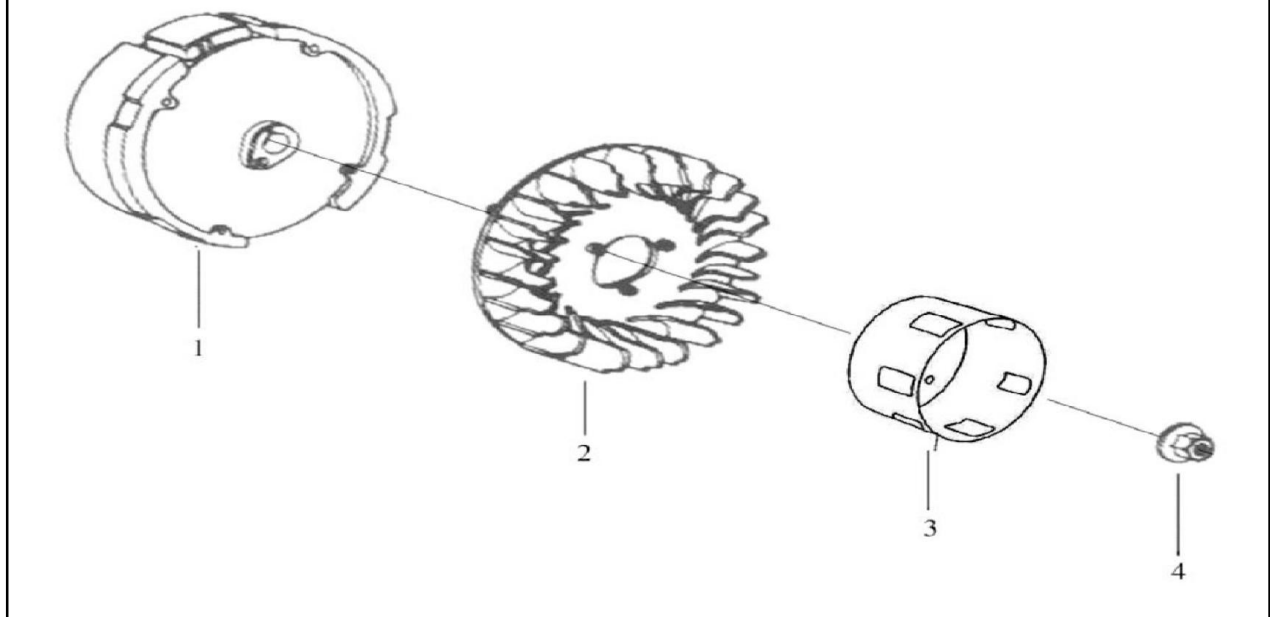E-12 FLYWHEEL

1	990231	Nut M16×1.25	
2	990222	Starting Flange	
3	990212	Flywheel Fan	
4	990202	Flywheel	

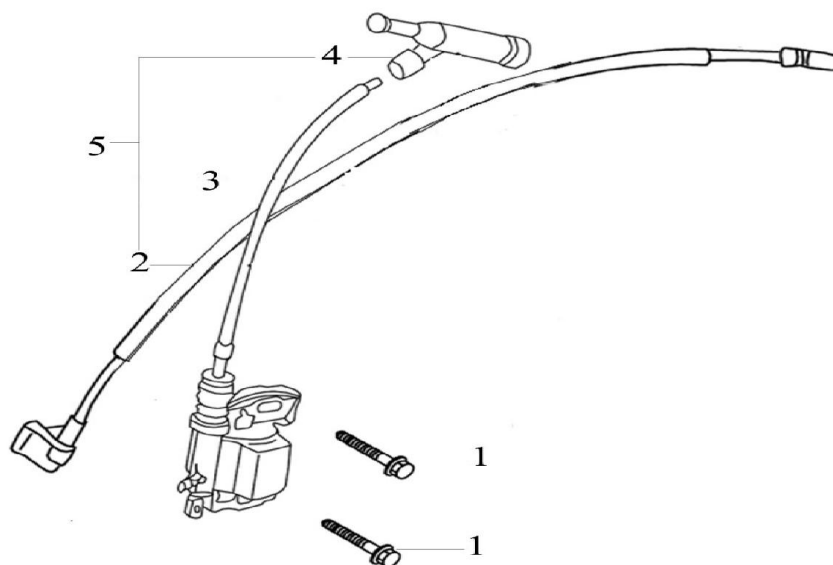E-13 IGNITION COIL

1		Screw M6×30-F	
2		Engine Stop Cable	
3		Ignition Coil	
4		Spark Plug Cap	
5	990671	Ignition Coil Assy	