
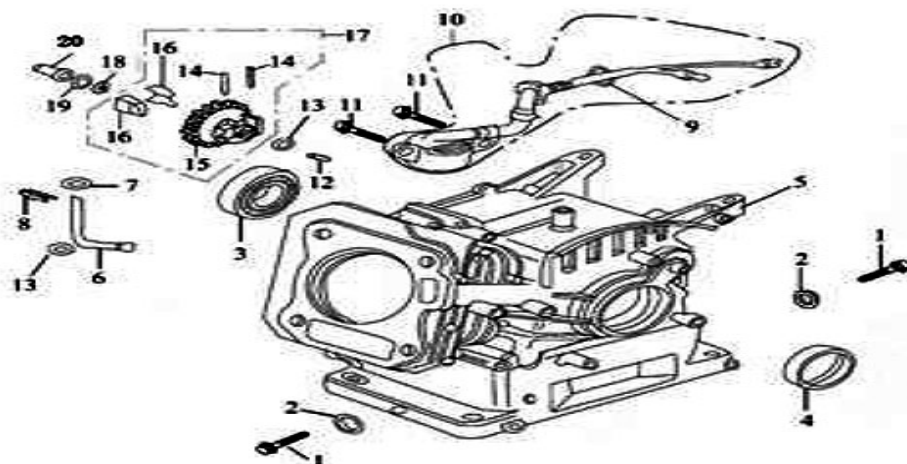


E-1 CRANKCASE ASSY.

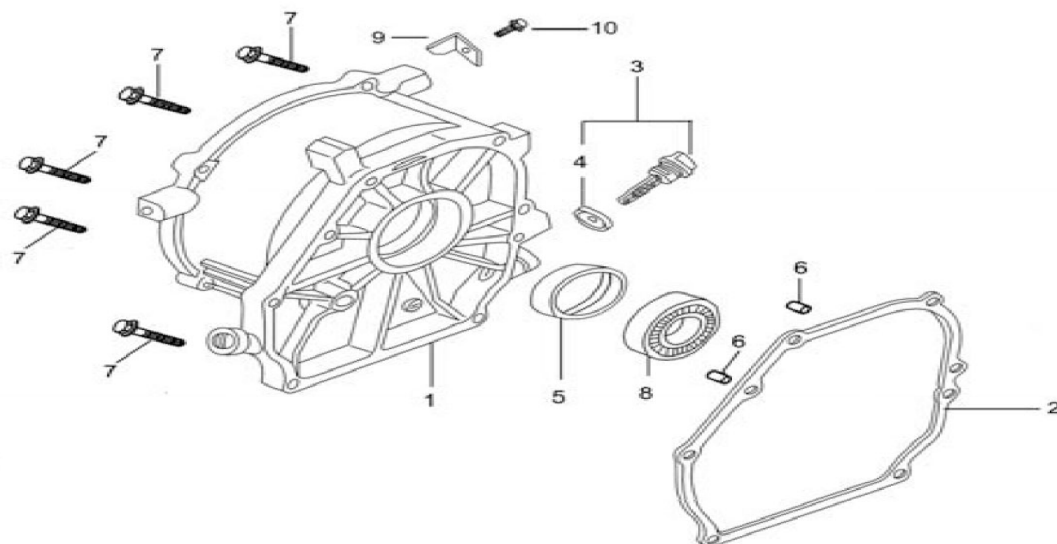


1		Drain plug	
2		Washer	
3	990723	Bearing 6205	
4	990732	Oil seal, crankshaft	
5	990631	Crankcase	
6		Regulating sway bar	
7		Washer	
8		Split pin	
9		Nut M10	
10	990690	Oil sensor	
11		Bolt M6×14	
12		Regulating shaft	
13		Washer, driven gear	
14		Pin	
15		Driven gear, regulator	
16		Flying block	
17	990710	Driven gear assy, regulator	
18		Snap ring	
19		Washer	
20		Sliding sleeve	

E-2 CRANKCASE COVER ASSY.


1	990655	Crankcase cover	
2	990701	Gasket, crankcase	
3	990770	Dipstick with seal	
4		Seal	
5	990732	Oil seal , crankshaft	
6		Set pin	
7		Bolt M8x32	
8	990723	Bearing 6205	
9		Dust plate	
10		Bolt M6x12	

E-3 CYLINDER HEAD & CYLINDER HEAD COVER ASSY

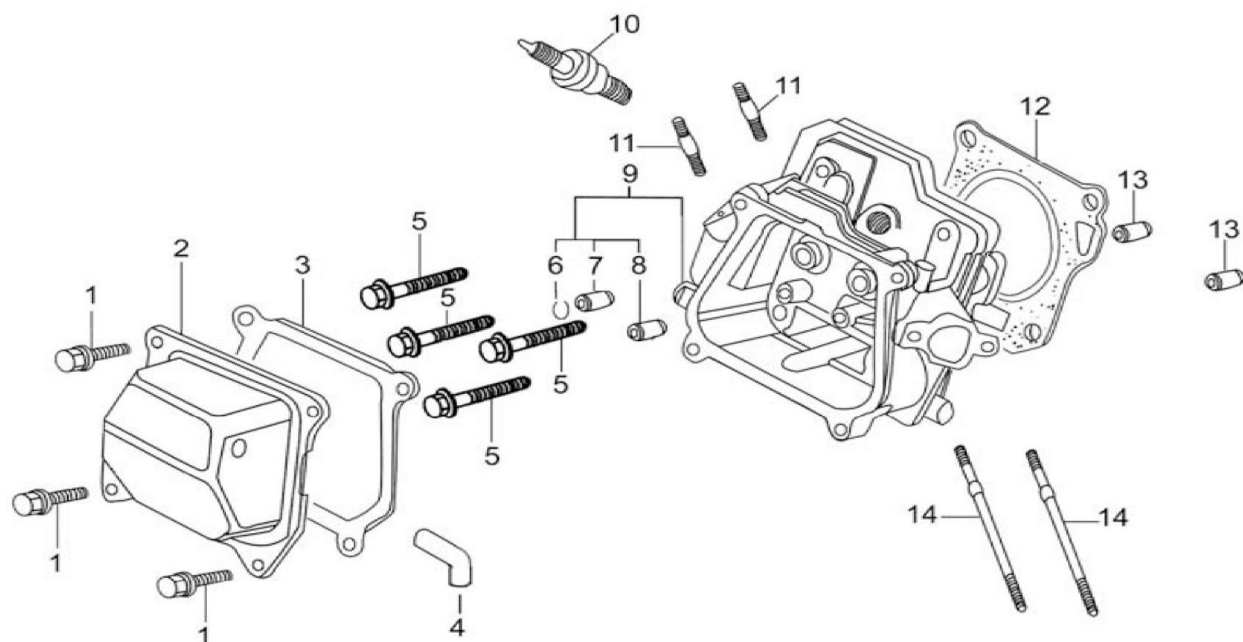


1		Bolt M6×12	
2	990350	Cylinder head cover Assy	
3	990360	Gasket, cylinder head cover	
4		Air duck	
5		Flange bolt	
6		Circip	
7	990390	Exhaust valve guide	
8		Intake valve guide	
9	990431	Cylinder head Assy	
10	990420	Spark plug F6RTC	
11	990410	Stud M8×34	
12	990371	Gasket, cylinder head	
13	990380	Set pinφ10×16	
14	990403	Stud M6×96	

E-4 CRANKSHAFT, PISTON & CONNECTING

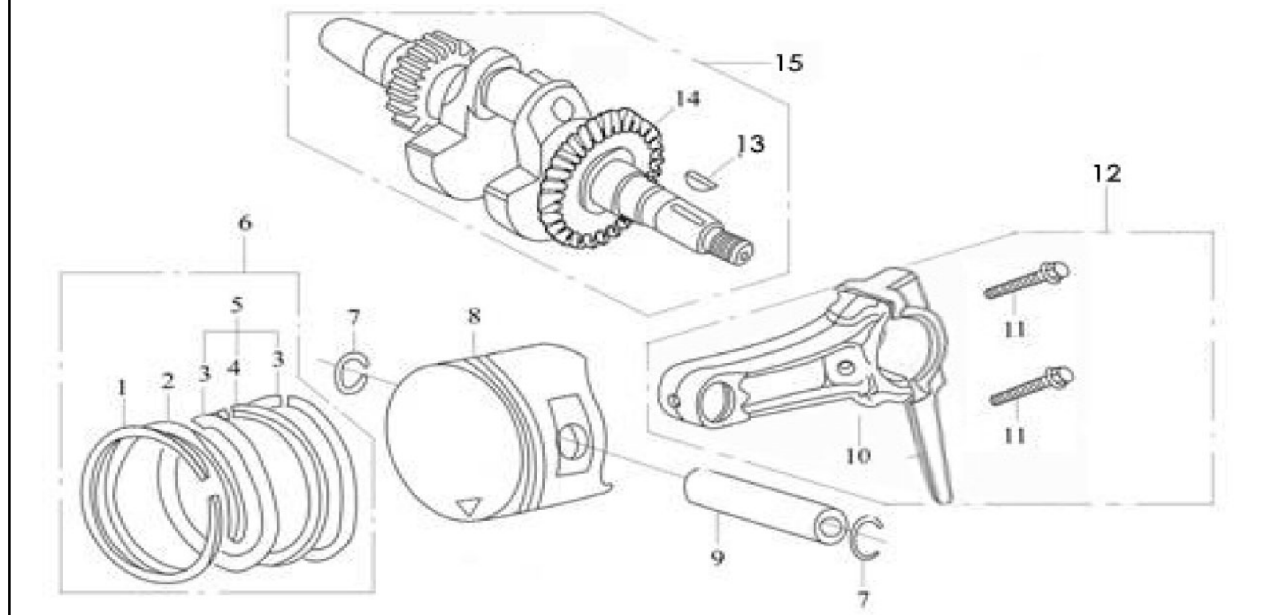


1		Piston ring (II)	
2		Piston ring (II)	
3		Side rail	
4		Expander	
5		Scraper ring set	
6	990551	Piston ring assy	
7	990561	Piston pin circlip	
8	990571	Piston	
9	990581	Piston pin	
10		Shank	
11		Bolt	
12	990591	Connecting rod assy	
13		Woodruff key	
14		Crankshaft	
15	990607	Crankshaft assy	

E-5 COMBINATION OF CAM SHAFT & VALVE ROCKER

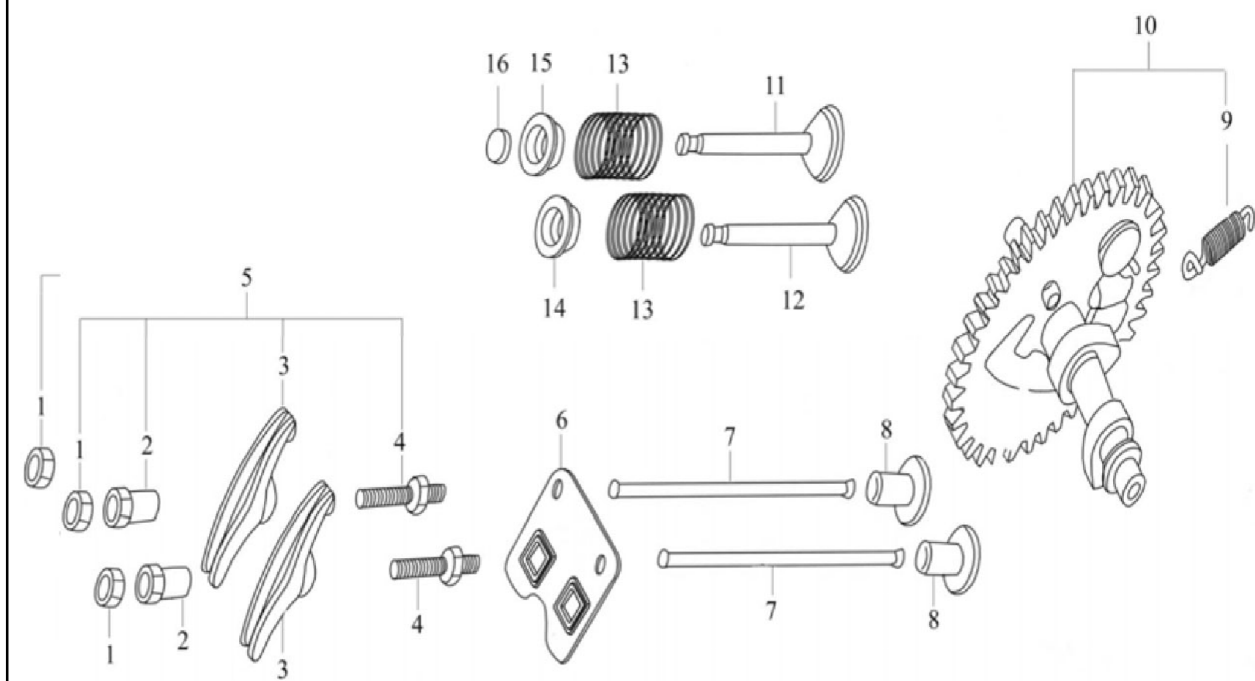


1		Lock nut	
2		Sleeve	
3		Valve rocker	
4		Adjusting bolt for valve gap	
5	990440	Valve rocker assy	
6	990451	Pusher guide	
7	990461	Pusher	
8	990470	Tappet	
9		Extension spring	
10	990481	Camshaft Assy	
11	990491	Exhaust valve	
12	990501	Intake valve	
13	990511	Valve spring	
14	990521	Spring seat, intake valve	
15	990531	Spring seat, exhaust valve	
16	990540	Cap	


E-6 CARBURETOR ASSY

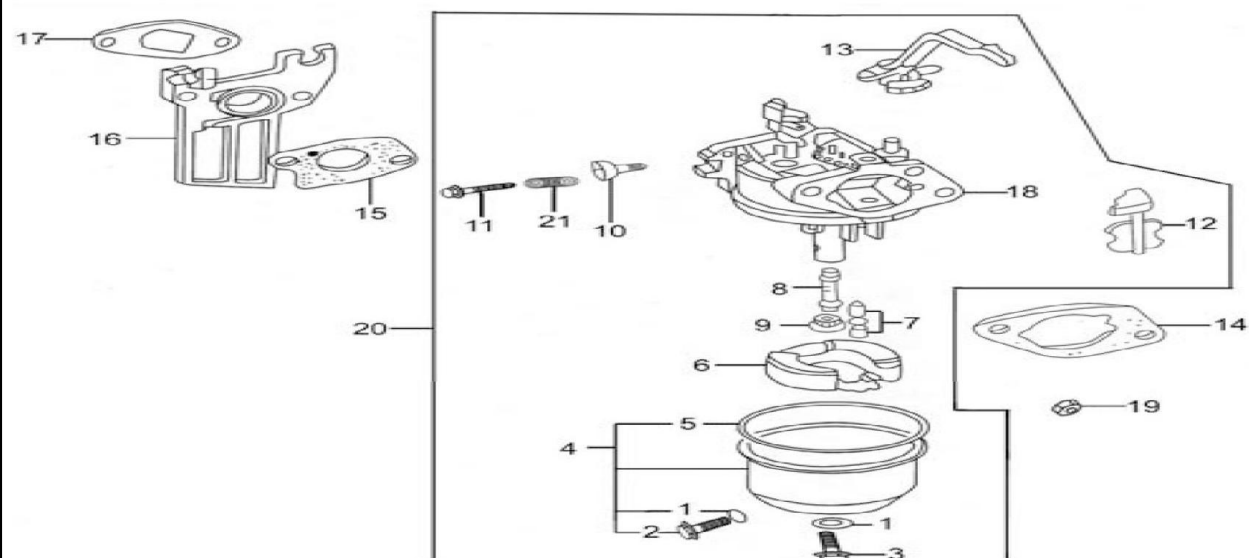

1		Washer	
2		Drain plug, float chamber	
3		Screw	
4		Float chamber	
5		Gasket, float chamber	
6		Float	
7		Float needle	
8		Pipe, main jet	
9		Main jet	
10		Idle adjustment screw	
11		Mixture adjustment screw	
12		Choke	
13	990291	Choke switch	
14	990270	Gasket, air cleaner	
15	990260	Gasket, Carburettor	
16	990251	Connecting block, Carburettor	
17	990240	Gasket, inlet	
18		Mixture chamber body	
19		Nut M6	
20	990305	Carburettor	
21		Spring, mixture adjustment screw	

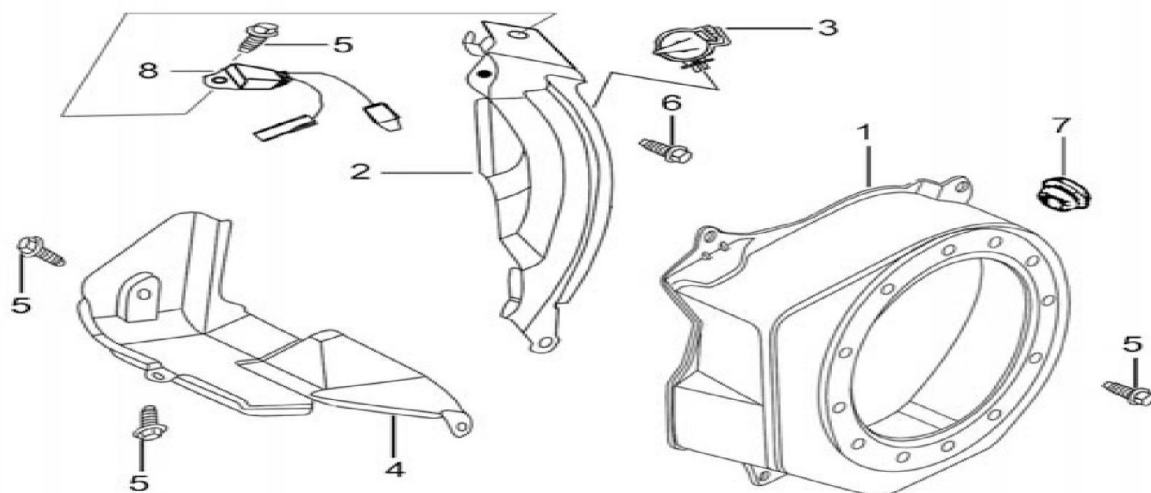
E-7 FAN COVER

1		Fan case	
2		Side plate weldment, crankcase	
3		Plastic clip	
4		Airhood	
5	990102	Screw M6x12	
6		Screw M6x22	
7		Grommet	
8	990680	Diode	

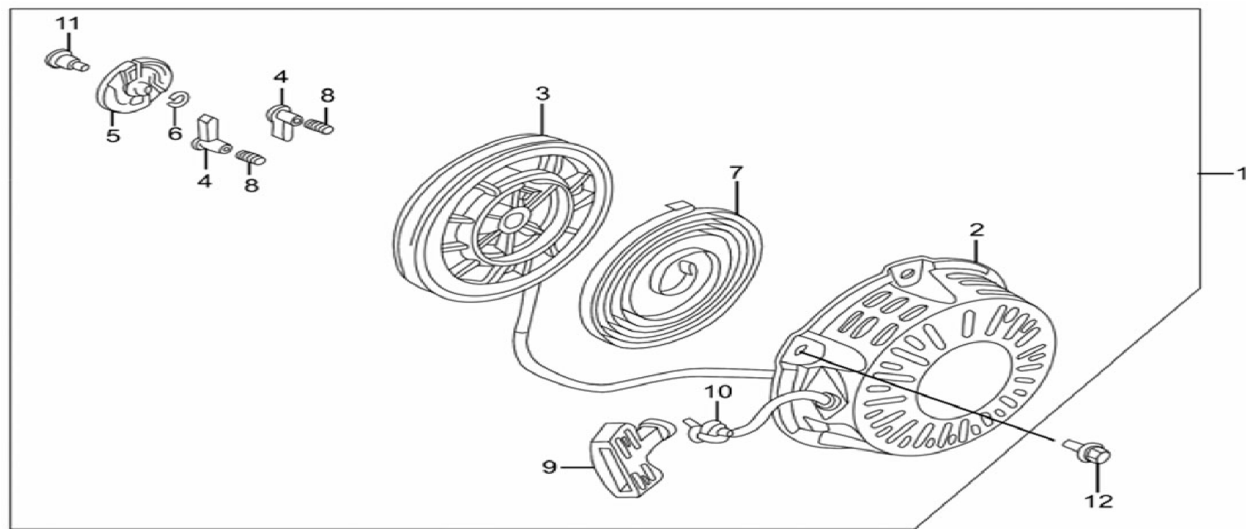
E-8 Kick Starter

1	990140	Kick-starter	
2		Housing	
3	990130	Starting roller	
4	990125	Ratchet	
5	990126	Spring lid	
6	990122	Friction spring	
7	990120	Spiral spring	
8	990121	Spring, ratchet	
9	990108	Handle	
10		Rope	
11	990103	Set screw	
12	990101	Screw M6x8	


E-9 Regulating Control System

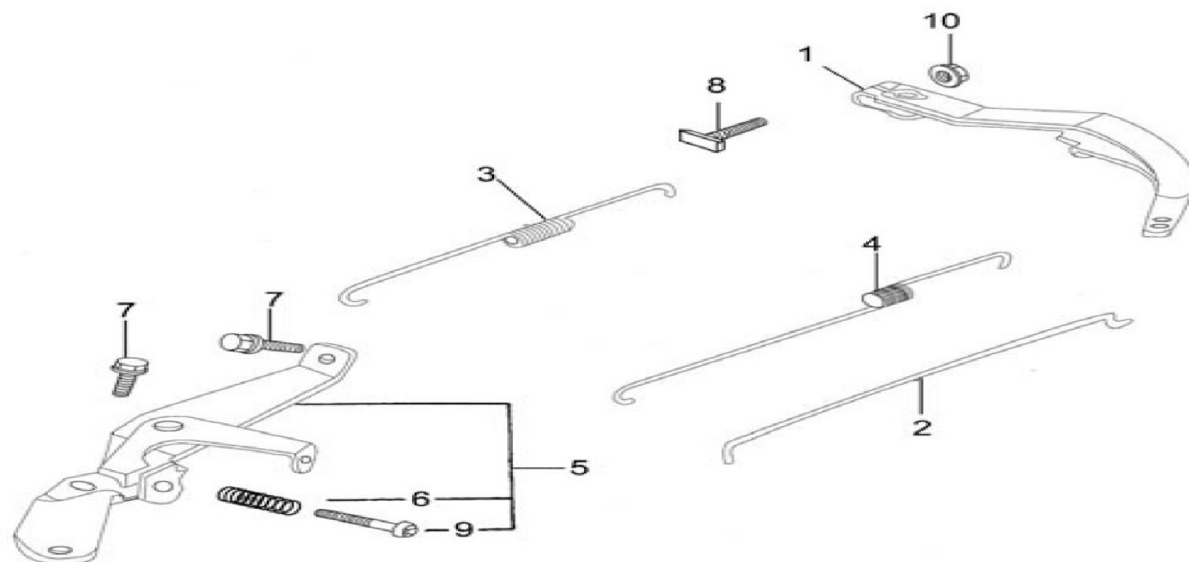


1		Regulating arm	
2	990181	Pulling rod	
3	990161	Back spring	
4	990170	Fine regulating spring	
5	990194	Regulating mount	
6		Regulating spring	
7		Bolt M6×12	
8		Lock bolt	
9		Screw M5×35	
10		Nut M6	

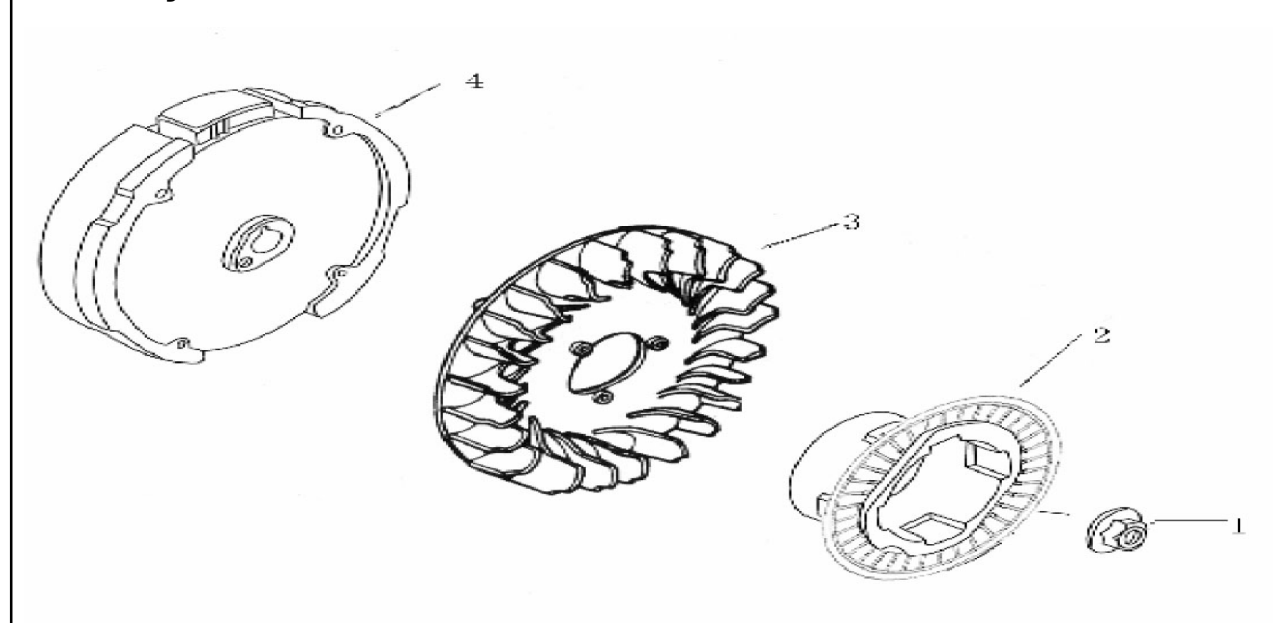E-10 Flywheel


1	990230	Nut M14×1.5	
2	990221	Starting flange	
3	990211	Flywheel fan	
4	990201	Flywheel	

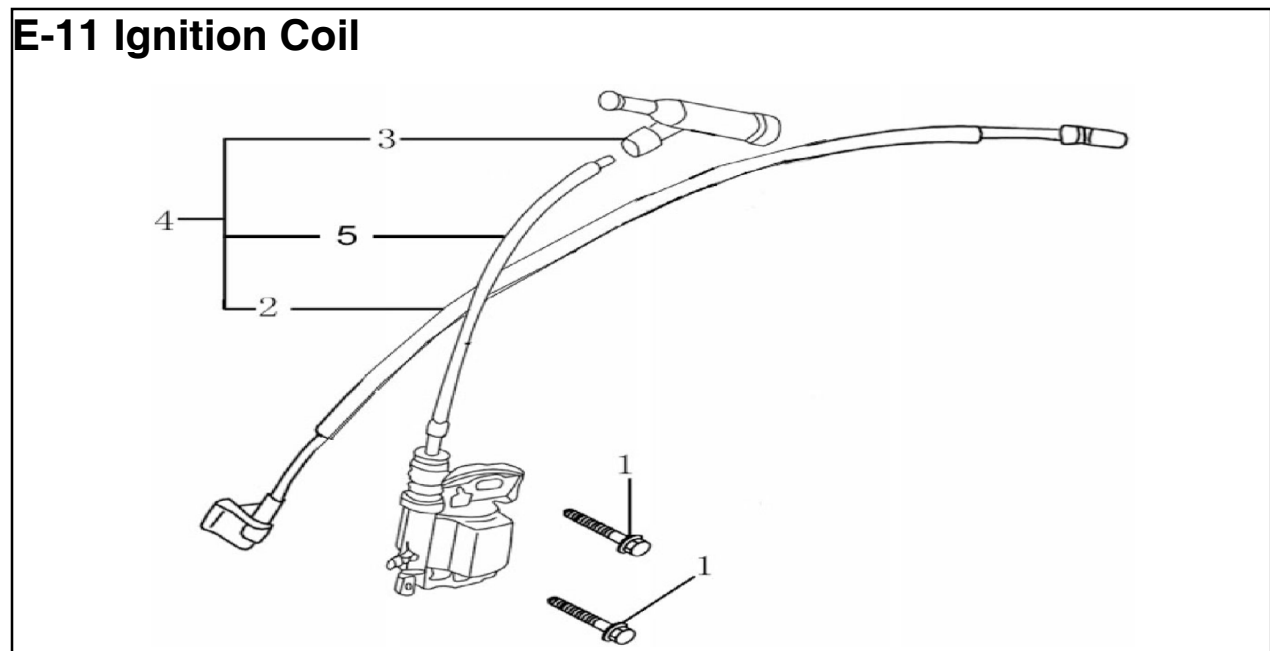E-11 Ignition Coil

1		Screw M6×22	
2		Extinguishing cable	
3		Spark plug cap	
4	990670	Ignition coil unit	
5		Ignition coil	

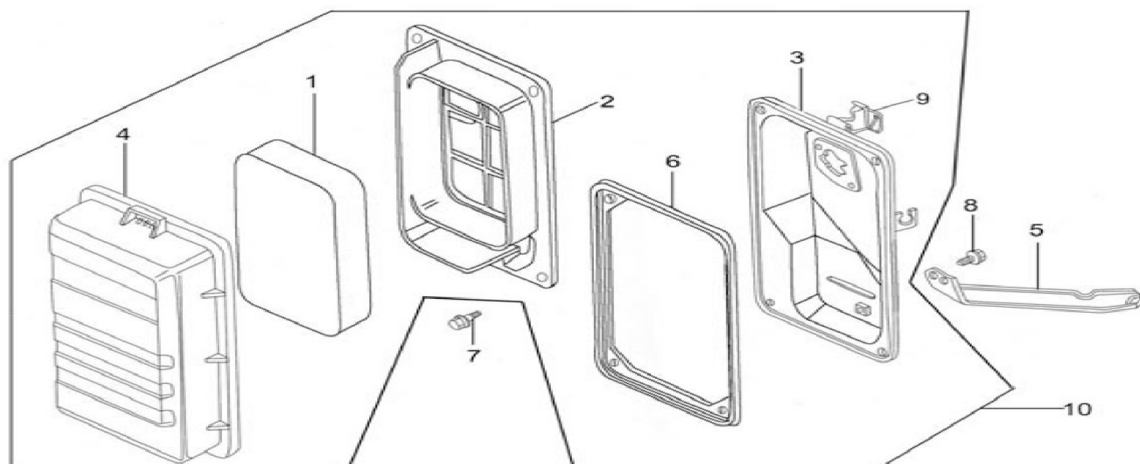
E-12 Air Cleaner Assy

1	990044	Filter element	
2		Retainer, filter element	
3		Air cleaner case	
4		Air cleaner cover	
5		Air cleaner stay	
6	990048	Gasket	
7		Bolt	
8		Bolt M6×12	
9		Hinge	
10	990054	Air cleaner Assy	

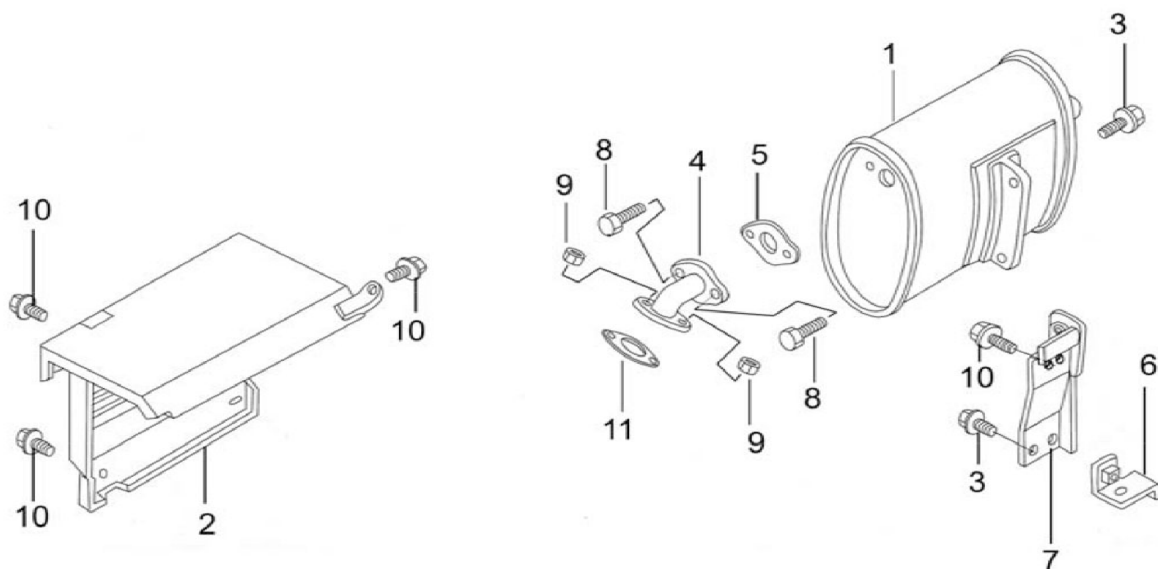E-13 Muffler Assy


1	990084	Muffler	
2	990090	Muffler guard	
3		Flange bolt M8×16	
4	990071	Exhaust pipe comp.	
5	990067	Muffler gasket	
6		Supporting plate	
7		Muffler stay	
8		Bolt M8×25	
9		Nut M8	
10		Flange bolt M6×12	
11	990060	Exhaust pipe gasket	

E-14 Fuel Tank Assy

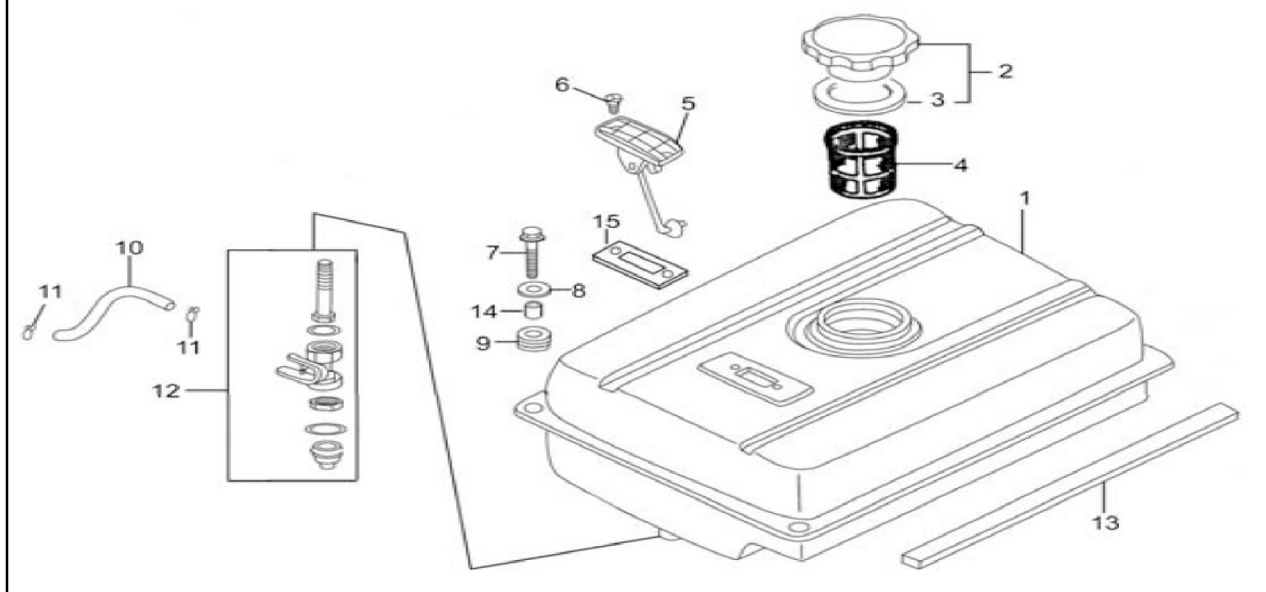


1	990004	Fuel tank	
2	990011	Fuel filler cap comp.	
3		Packing ring	
4		Fuel filter	
5		Fuel sensor	
6		Screw M5×10	
7		Flange bolt M6×22	
8		Washer	
9		Cushion	
10		Outlet pipe (φ9×φ4.5×130)	
11		Tube clip	
12	990021	Fuel cock	
13		Stripe, fuel tank	
14		Fitting brush, fuel tank	
15		Gasket, fuel sensor	

G-01 Control Panel

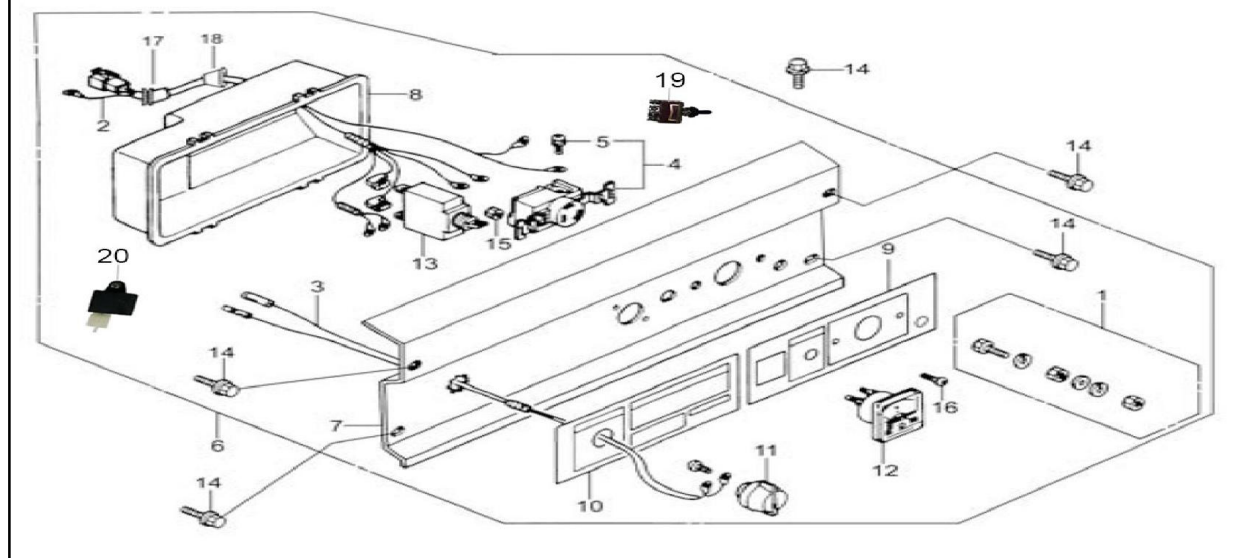


1		Earth terminal set	
2		Wire harness Assy	
3		Switch wire	
4	991000	Consent (30A)	
5		Bolt M4×10	
6	991060	Control panel Assy	
7		Control panel	
8		Control panel case	
9		Panel switch mark,RH	
10		Panel switch mark,LH	
11	990111	Ignition switch	
12	991020	Voltmeter	
13	991030	Circuit protector (6A)	
14		Flange bolt M6×12	
15		Nut M4	
16		Pan screw M4×10	
17		Boot, AC output wire	
18		Boot, main wire harness	
19	991010	Voltage selector	
20	991040	Diode Assy	

G-02 Generator

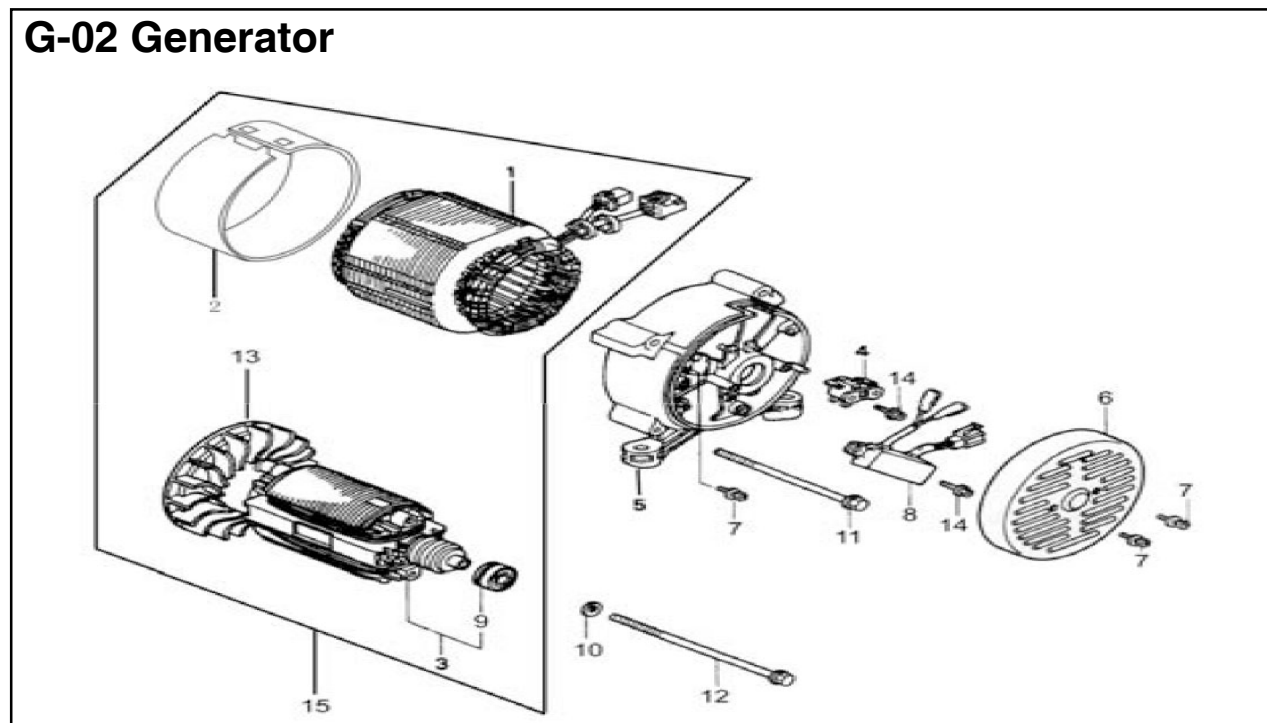

1	991070	Stator Assy	
2		Stator cover	
3	991080	Rotor comp.	
4	991090	Brush Assy	
5	990665	Generator stay	
6	991110	Generator end cover	
7		Bolt M5×12	
8	991050	Voltage regulator	
9		Bearing 6202-2RS	
10		Plain washer	
11		Flange bolt M6×115	
12		Bolt M8×165	
13		Generator fan	
14		Bolt M5×14	
15		Stator & rotor Assy	

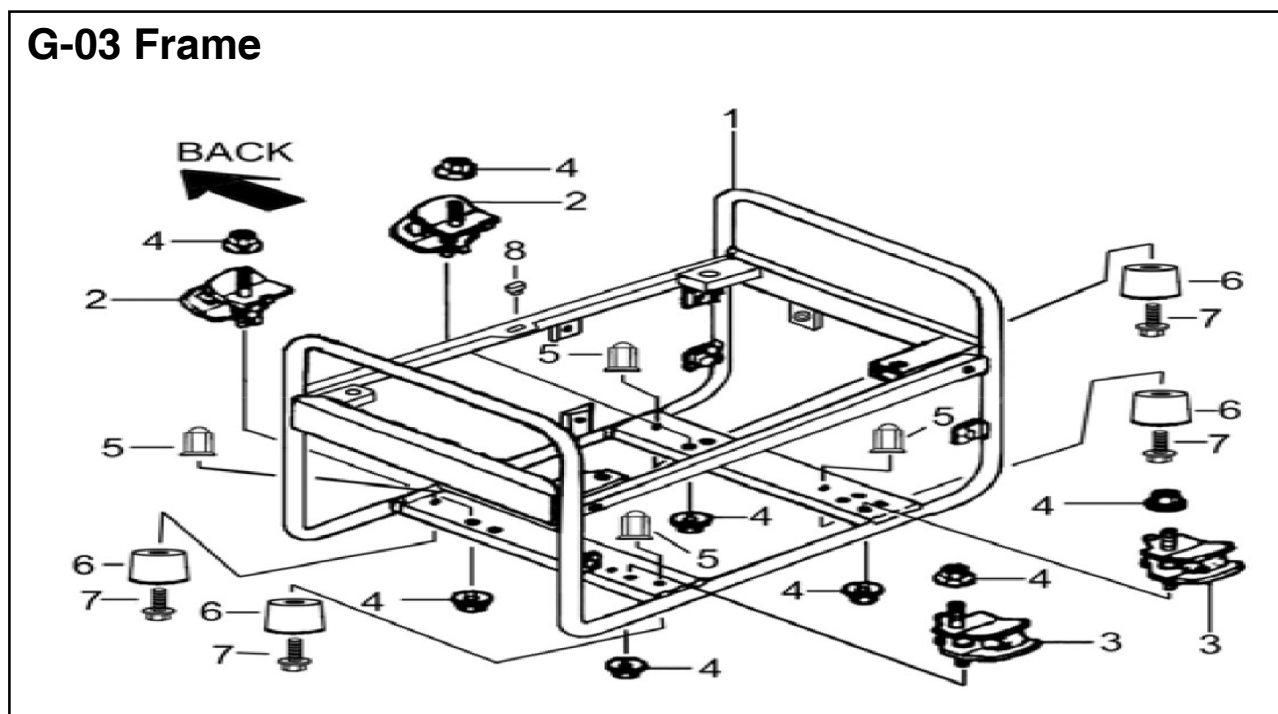G-03 Frame

1		Frame comp	
2	991100	Bottom rubber A	
3	991101	Bottom rubber B	
4		Flange nut M8	
5		Nut M6	
6		Cushion, frame	
7		Bolt M6x12	
8		Rubber pad, frame	