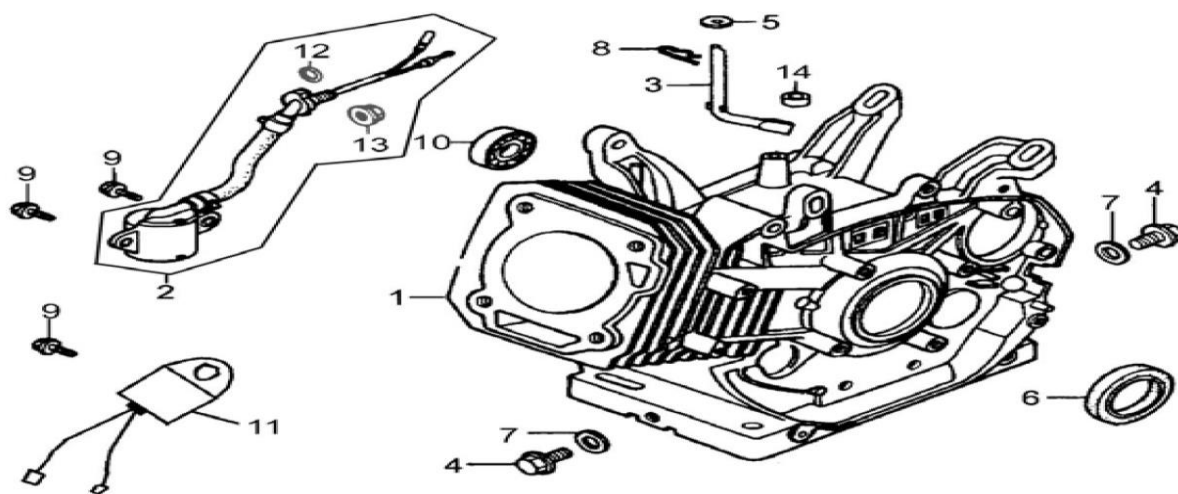
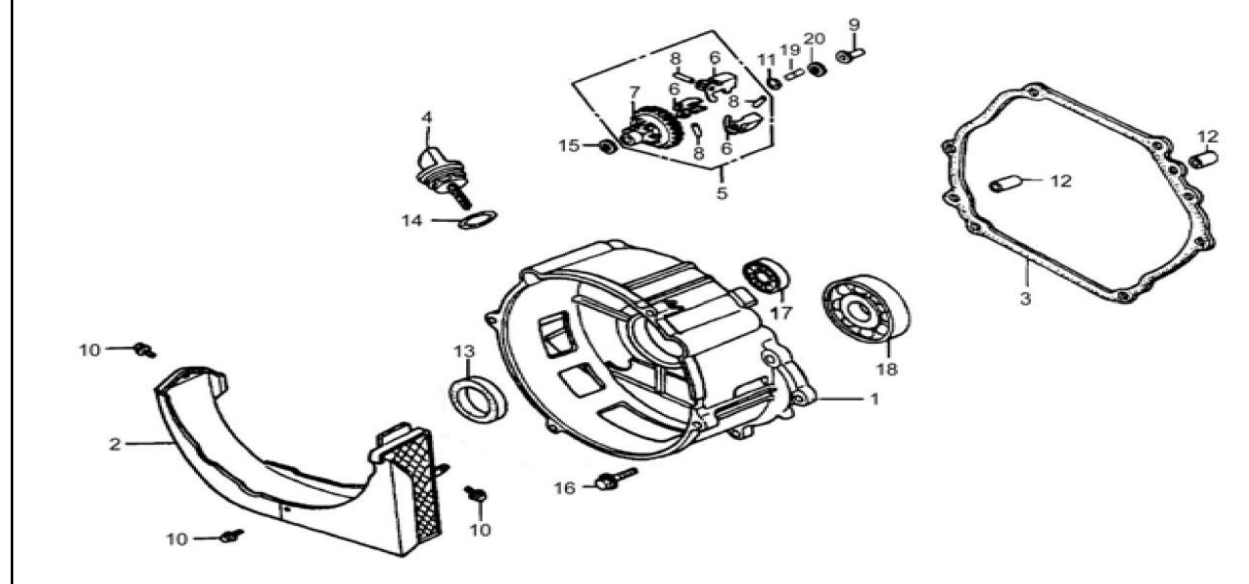



E-1 CRANKCASE ASSY.

1	990635	Crankcase	
2	990691	Oil sensor	
3		Regulating sway bar	
4		Drain plug	
5		Washer	
6	990734	Oil seal, crankshaft	
7		Washer	
8		Split pin	
9		Bolt M6×12	
10	990721	Bearing 6202	
11	990680	Diode	
12		O-ring 13×1.4	
13		Nut M10	
14		Oil seal, regulating sway bar	

E-2 CRANKCASE COVER ASSY.


1	990656	Crankcase cover	
2		Guard,crankcase cover	
3	990703	Gasket, crankcase	
4	990772	Dipstick	
5	990712	Driven gear set, regulator	
6		Flying block	
7		Driven gear, regulator	
8		Pin	
9		Sliding sleeve	
10		Bolt M5×12	
11		Snap ring	
12		Set pin	
13	990734	Oil seal , crankshaft	
14		Seal	
15		Washer, driven gear	
16		Bolt M8×40	
17	990721	Bearing 6202	
18	990725	Bearing 6207	
19		Regulating shaft	
20		Washer, sliding sleeve	

E-3 CYLINDER HEAD & CYLINDER HEAD COVER ASSY

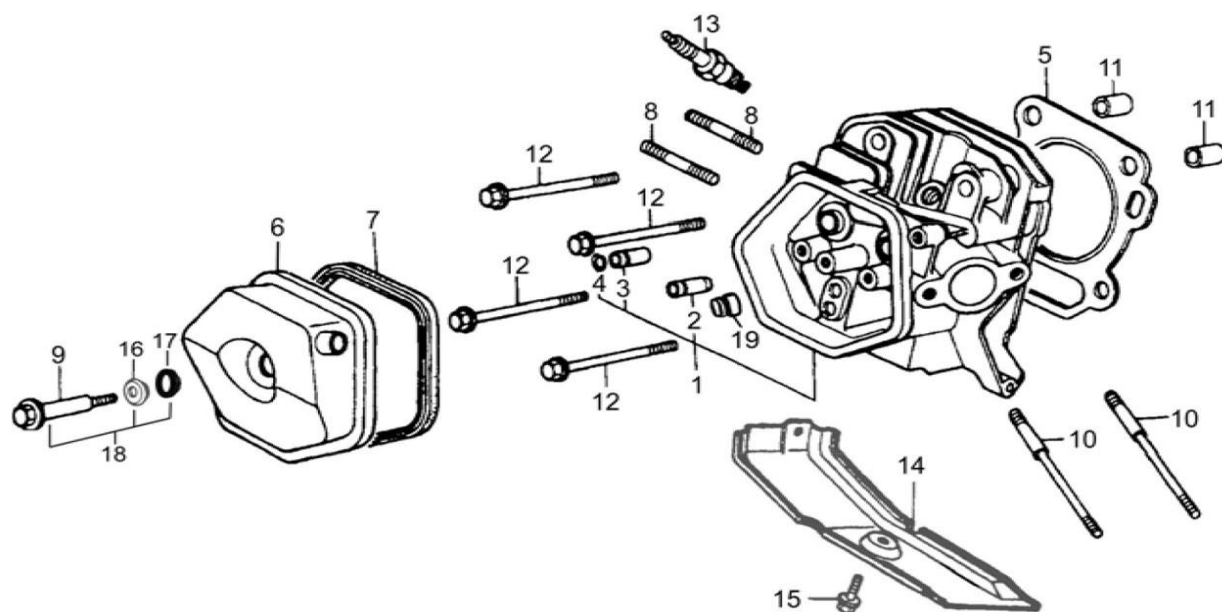


1	990433	Cylinder head Assy	
2		Intake valve guide	
3		Exhaust valve guide	
4		Circip	
5	990373	Gasket, cylinder head	
6	990351	Cylinder head cover Assy	
7	990361	Gasket, cylinder head cover	
8	990410	Stud M8×35	
9		Bolt	
10	990404	Stud M6×M8×106	
11	990381	Set pin	
12		Flange bolt	
13	990420	Spark plug F6RTC	
14		Lead wind cover	
15		Bolt M6×12	
16		Washer	
17	990368	Rubber seal	
18		Bolt	
19	990365	Oil seal, valve stem	

E-4 CRANKSHAFT, PISTON & CONNECTING

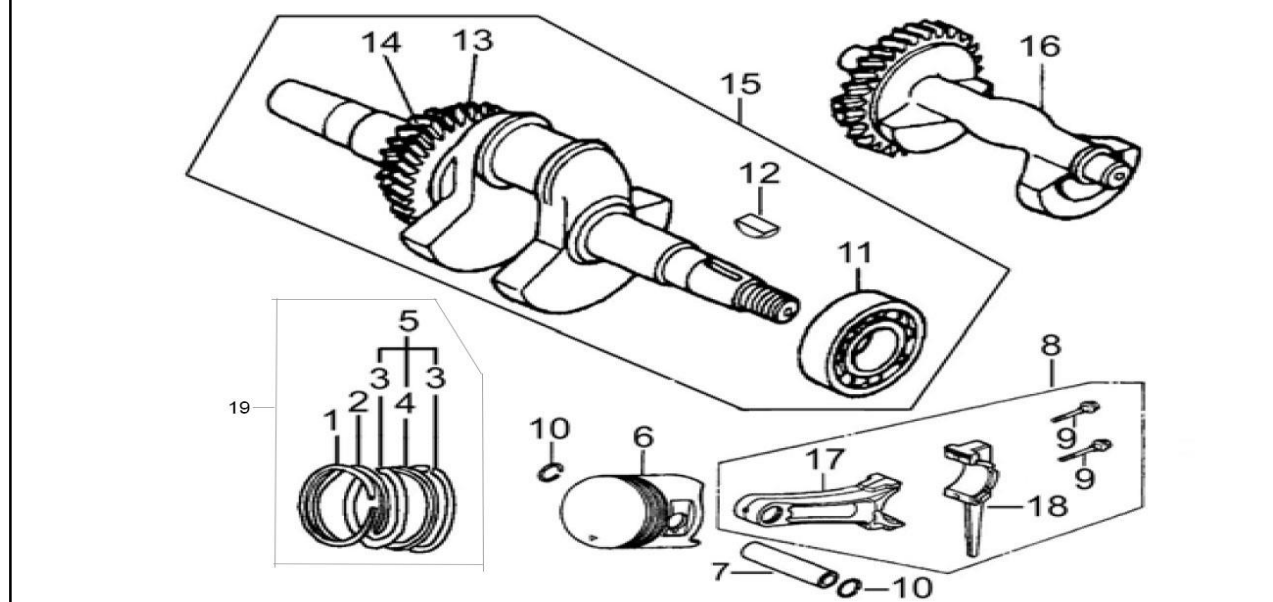


1		Piston ring (I)	
2		Piston ring (II)	
3		Side ring	
4		Wave ring	
5		Scraper ring set	
6	990575	Piston	
7	990583	Piston pin	
8		Connecting rod Assy	
9		Bolt	
10	990562	Piston pin circlip	
11	990725	Bearing 6207	
12		Woodruff key	
13		Drive gear	
14		Timing driving gear	
15	990608	Crankshaft sets	
16	990620	Balancing shaft	
17	990593	Connecting rod	
18		Connecting rod cover	
19	990555	Ring Set	

E-5 COMBINATION OF CAM SHAFT & VALVE ROCKER

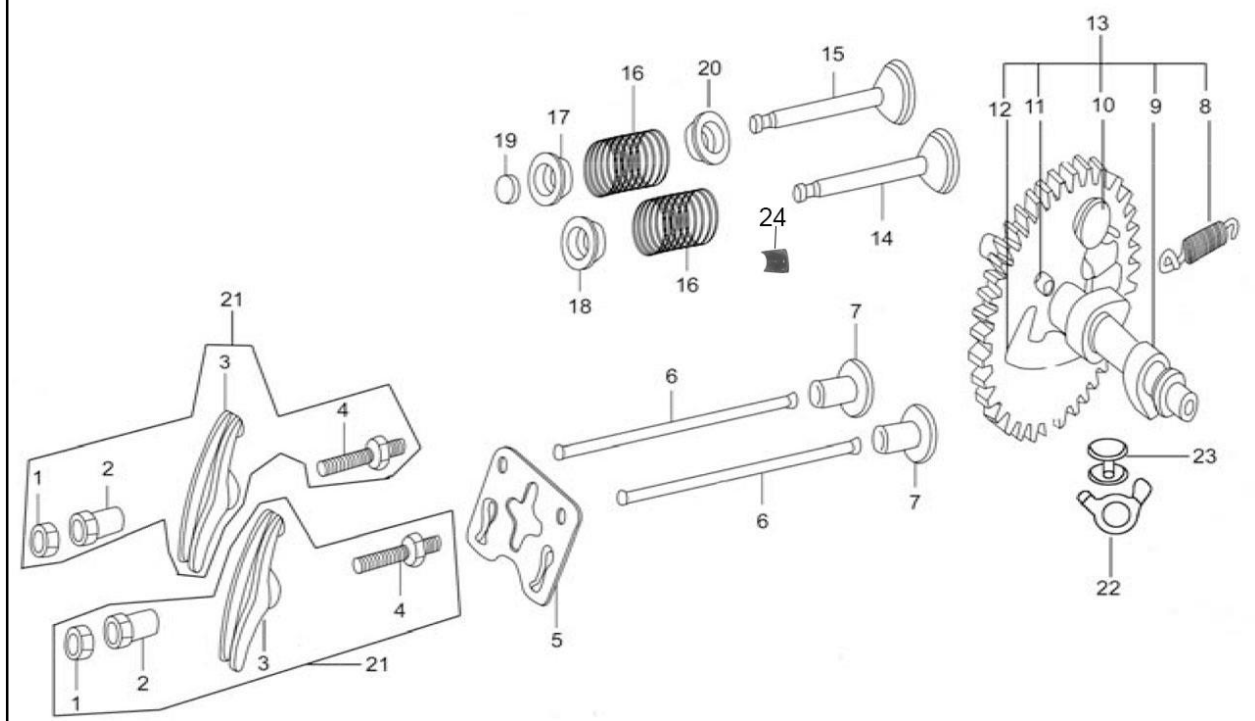


1		Lock nut	
2		Sleeve	
3		Valve rocker	
4		Adjusting bolt for valve gap	
5	990452	Pusher guide	
6	990463	Pusher	
7	990472	Tappet	
8		Extension spring	
9		Camshaft	
10		Pin	
11		Spring hang pin	
12		Auto-reductor subassembly	
13	990482	Camshaft Assy	
14	990503	Intake valve	
15	990493	Exhaust valve	
16	900512	Valve spring	
17	990523	Spring seat, exhaust valve	
18	990523	Spring seat, intake valve	
19	990541	Cap, exhaust valve	
20		Spring retainer, exhaust valve	
21	990441	Valve rocker Assy	
23		Pin	
24	990533	Cone For Valve	

E-6 CARBURETOR ASSY

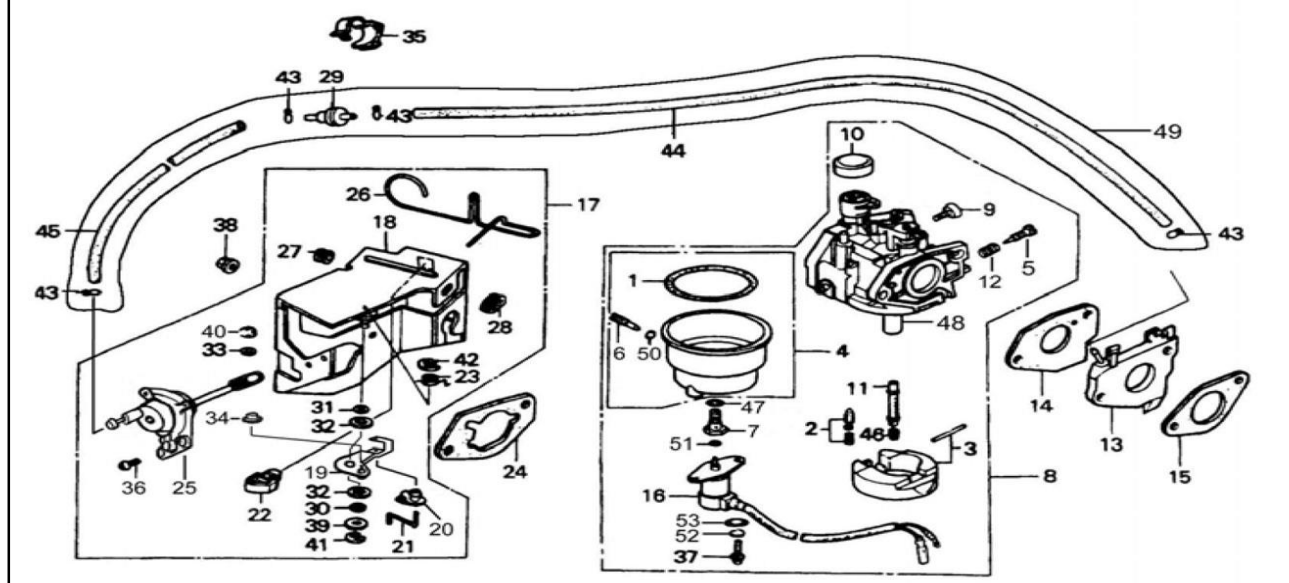


1	990281	Gasket ,float chamber	
2		Float needle	
3		Float	
8	990306	Carburettor Assy	
9		Idle adjustment screw	
10		Dust cover, choke	
11		Pipe, main jet	
13	990254	Connecting block, carburettor	
14	990262	Gasket, carburettor	
15	990242	Gasket, inlet	
16		Magnetic valve, carburettor	
17		Manual choke Assy	
18		Bracket	
19		Choke lever	
20		Joint, choke stem	
21		Choke stem	
22		Stopper, choke rod	
23		Spring, choke	
24	990271	Gasket, air cleaner	

E-7 Kick Starter

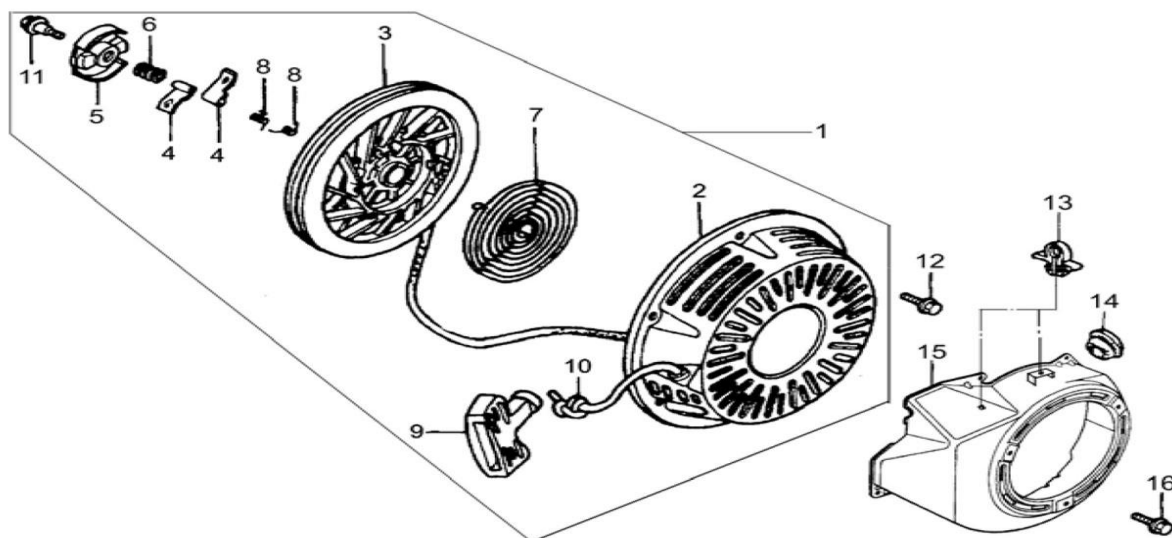


1	990142	Kick starter	
2		Casing	
3	990132	Starting roller	
4	990125	Ratchet	
5	990126	Spring lid	
6	990122	Friction spring	
7	990123	Spiral spring	
8	990121	Spring, ratchet	
9	990108	Handle	
10		Rope	
11	990103	Set screw	
12	990100	Screw M6×8	
13		Wire clamp B	
14		Grommet	
15		Fan case	
16	990102	Screw M6×12	

E-8 Regulating Control System

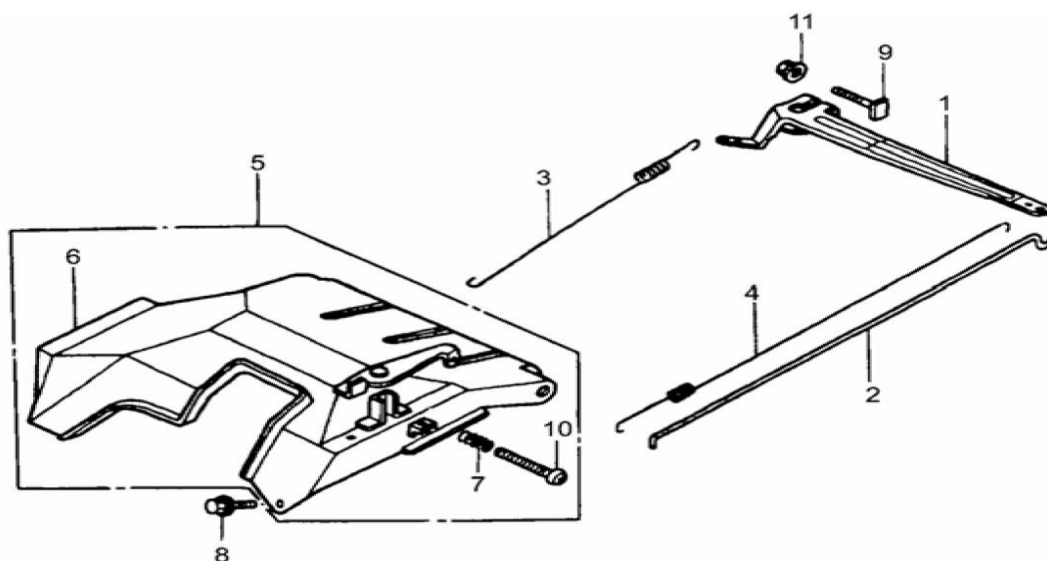


1		Regulating arm	
2		Pulling rod	
3		Back spring	
4	990172	Fine regulating spring	
5	990195	Supporting plate set	
6		Supporting plate	
7		Regulating spring	
8		Bolt M6×12	
9		Lock bolt	
10		Screw M5×35	
11		Nut M6	

E-9 Flywheel

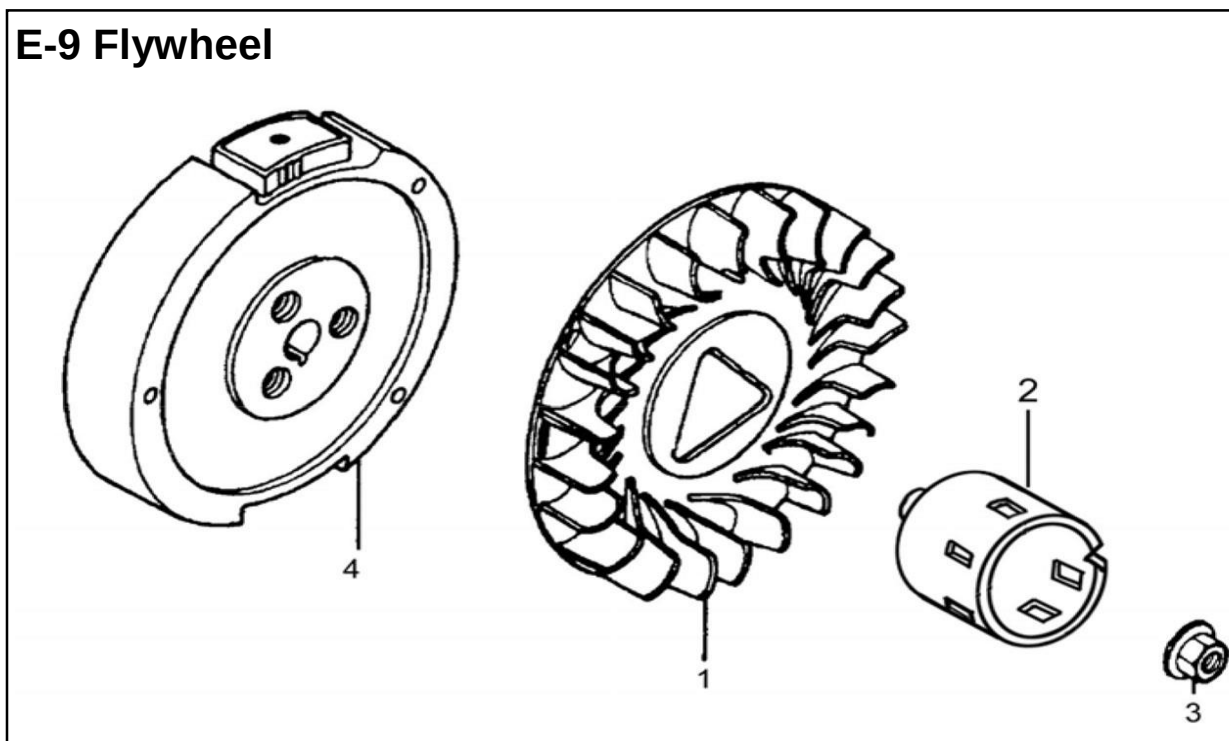


1	990213	Flywheel fan	
2	990223	Starting flange	
3	990231	Nut M16×1.25	
4	990203	Flywheel	

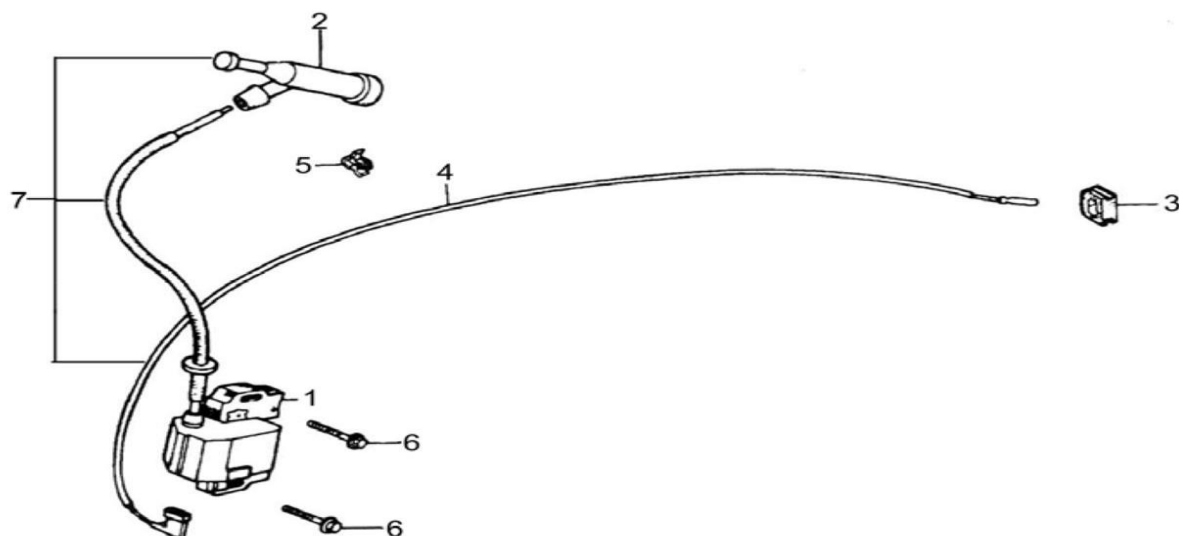
E-10 Ignition Coil

1		Ignition coil	
2		Spark plug cap	
3		Rubber ring, crankcase	
4		Extinguishing cable	
5		Cable tie	
6		Bolt M6×30	
7	990672	Ignition coil unit	

E-11 Air Cleaner Assy

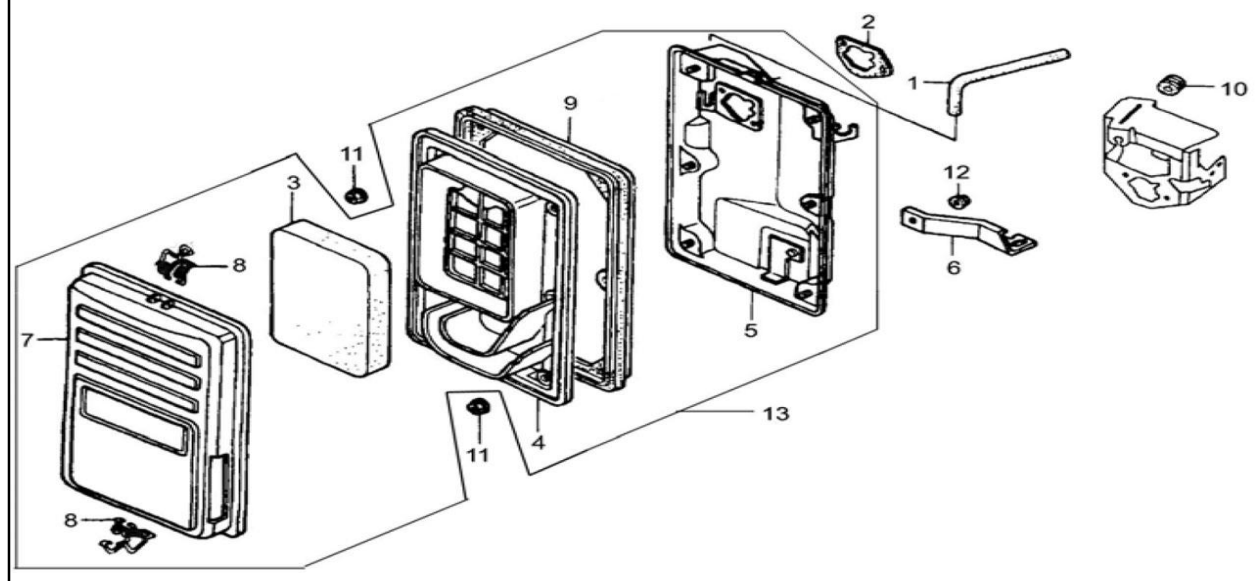


1		Air duck	
2		Gasket, air cleaner	
3	990045	Filter element	
4		Retainer, filter element	
5		Air cleaner case	
6		Air cleaner stay	
7		Air cleaner cover	
8		Hinge	
9	990049	Gasket	
10		Boot, vent pipe	
11		Nut M5	
12		Nut M6	
13	990055	Air cleaner Assy	

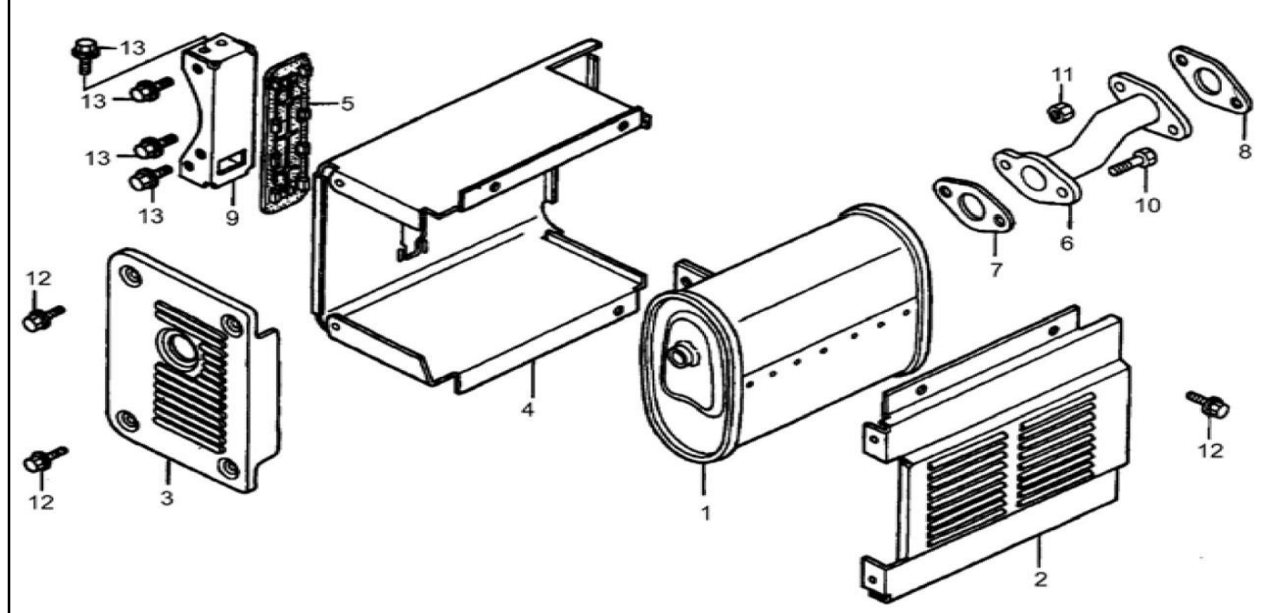E-12 Muffler ASSY


1	990085	Muffler	
2	990091	Outer hood	
3	990092	Side hood	
4	990093	Inner hood	
5		Gasket, inner hood	
6	99072	Exhaust pipe	
7	990067	Gasket, exhaust pipe	
8	990062	Gasket, outlet	
9		Muffler stay	
10		Flange bolt M8×25	
11		Nut M8	
12		Flange bolt M6×12	
13		Flange bolt M8×16	

E-13 Fuel Tank Assy

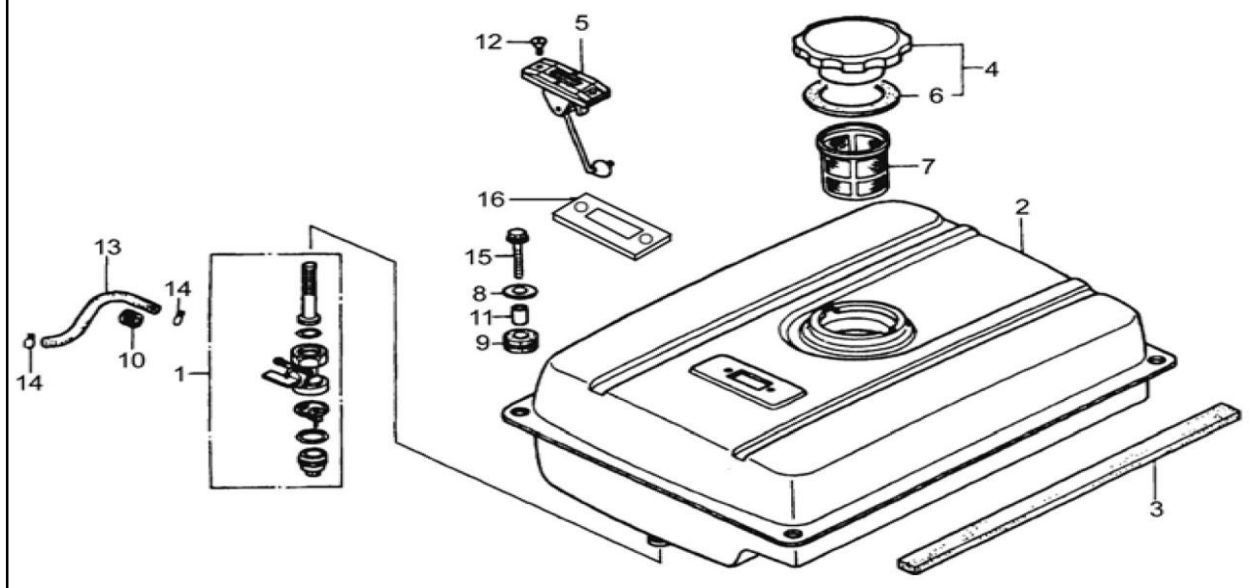


1	990021	Fuel cock	
2	990005	Fuel tank	
3		Stripe, fuel tank	
4	990011	Fuel filler cap comp.	
5		Fuel sensor	
6		Packing ring	
7		Fuel filler	
8		Washer	
9		Cushion	
10		Grommet	
11		Fitting brush, fuel tank	
12		Screw M5×10	
13		Outlet pipe (φ9×φ4.5×160)	
14		Tube clip	
15		Flange bolt M6×22	
16		Gasket, fuel sensor	

G-01 Control Panel

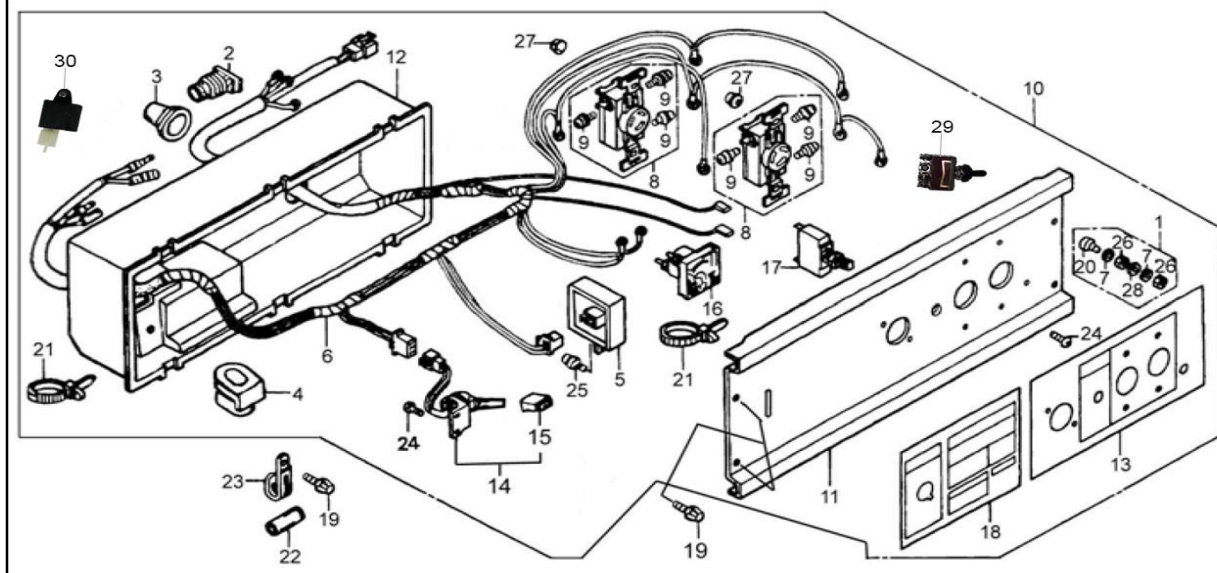


1		Earth terminal set	
5	991040	Diode Assy	
6		Main wire harness Assy	
7		Spring washer 6mm	
8	991000	Consent (30A)	
9		Bolt M4×10	
10	991061	Control panel Assy	
11		Control panel	
12		Control panel case	
13		Panel switch mark,RH	
14	990111	Ignition switch	
15		Handle	
16	991021	Voltmeter	
17	991031	Circuit protector, 19A	
18		Panel switch mark,LH	
19		Bolt M6×12	
21		Wire clamp	
22		Wire grommet	
29	991010	Voltage selector	
30	991041	Regulator	

G-02 Generator

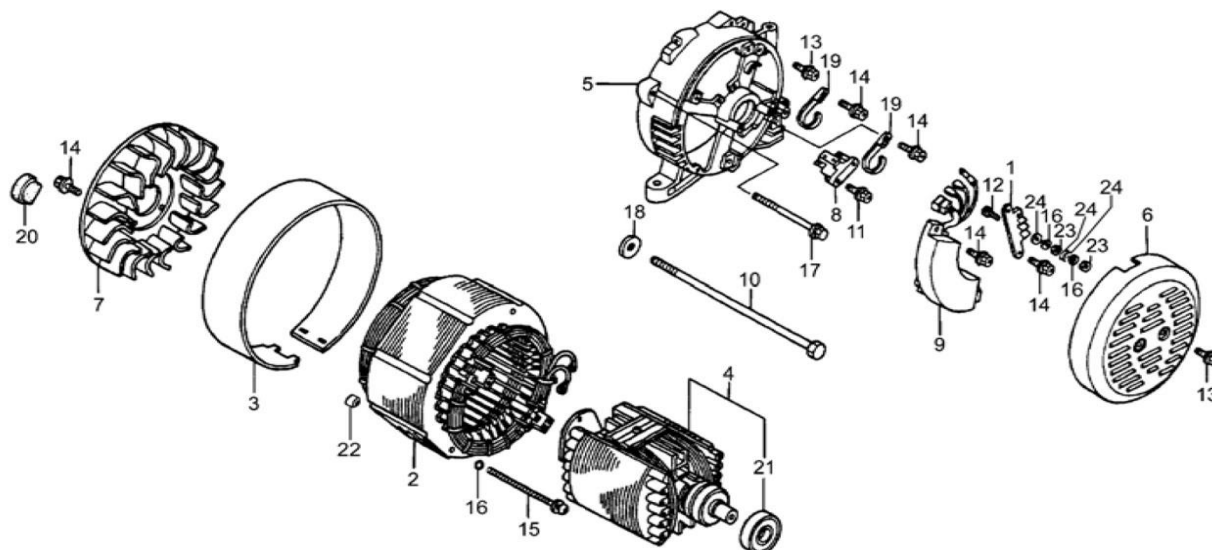

1		Connecting plate	
2	991071	Stator Assy	
3		Stator cover	
4	991081	Rotor Assy	
5	990666	Generator stay	
6	991111	Generator end cover	
7	991115	Generator fan	
8	991091	Brush Assy	
9	991051	Voltage regulator	
10		Bolt M10×250	
11		Screw M5×18	
12		Bolt M5×20	
13		Screw M5×12	
14		Screw M5×14	
15		Bolt M5×198	
16		Spring washer 5mm	
17		Bolt M6×160	
18		Plain washer	
19		Clip A	
20		Plug, sump	

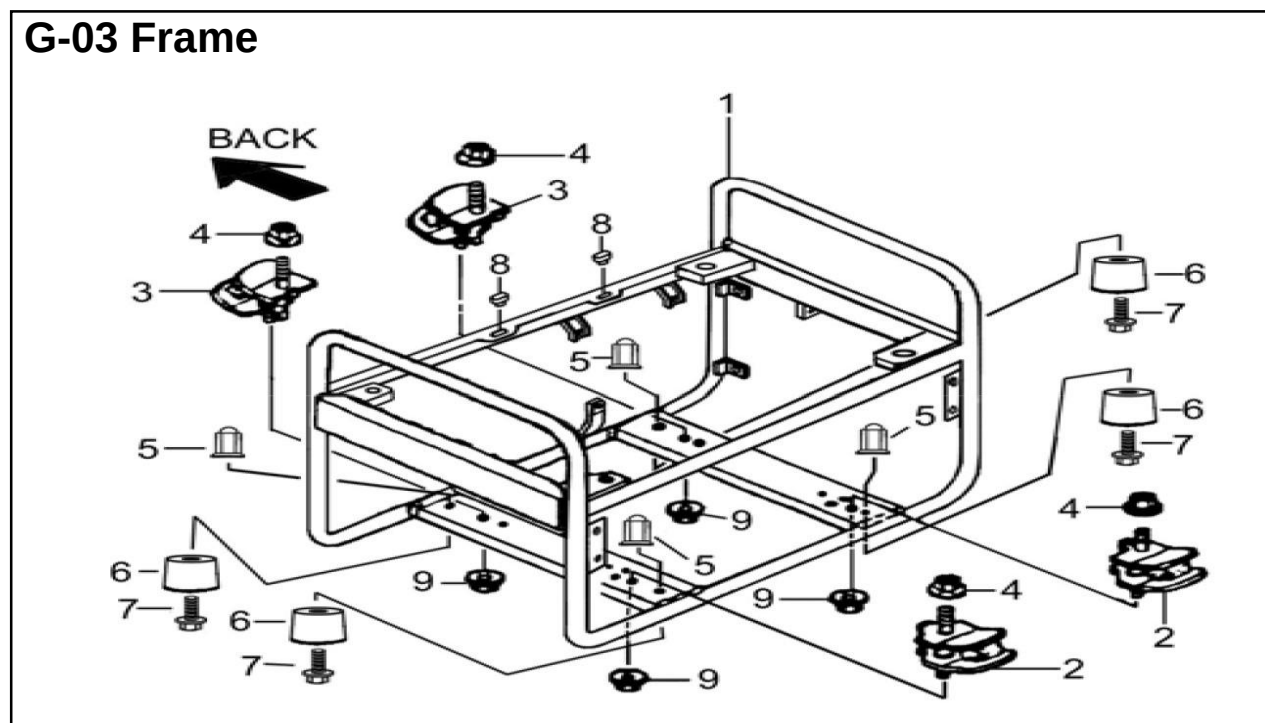G-03 Frame

1		Frame comp.	
2	991102	Bottom rubber A	
3	991103	Bottom rubber B	
4		Nut M10	
5		Nut M6	
6		Cushion, frame	
7		Bolt M6×12	
8		Rubber pad, frame	
9		Nut M8	