

UNIVERSAL

H A R D W A R E®



MOTORCYCLE PARTS CATALOGUE

Model: **LF150-5L**

Spanish Lookout

sales@universalhardware.bz

+501 823 0254 +501 652-9933

Belize City

salesbz@universalhardware.bz

+501 224-4140 +501 667-3937

2025



LIFAN



Model: **LF150-5U**



Model: **LF250GY-4**



Model: **ML125-16D Flash**



Model: **LF150-5L**



Model: **ML250GY-4**



Model: **ML200ZH-3**



Model: **ML200GY-4**



Model: **LF100-A**



Model: **LF110-7A NINJA**



Model: **LF200GY-4**



Model: **LF125-5**



Model: **LF125-7**



Model: **LF150T-12C**



Model: **LF150-7 Retro**



Model: **LF200-14F**

F-01 灯具 LIGHTS



	1505121-1	Headlight Assy	
	1505121-2	Winker, Front, LH	
	1505121-3	Winker, Front, RH	
	1505121-4	Winker, Rear, LH	
	1505121-5	Winker, Rear, RH	
	1505121-6	Taillight Assy	
	1505121-7	License plate lamp Assy.	

F-02 前照灯护罩、仪表 HEADLIGHT HOOD & METER



	1505122-1	Ornament, headlight hood	
	1505122-2	Headlight hood	
	1505122-3	Meter Assy	
	1505122-4	Housing, meter	
	1505122-5	Plate, headlight housing	



	1505123-1	Weight comp., steering bar	
	1505123-2	Grip comp., throttle	
	1505123-3	Switch, handlebar, RH	
	1505123-4	Cable, throttle	
	1505123-5	Cable, clutch	
	1505123-6	Pipe set, steering bar	
	1505123-7	Mirror, rearview	
	1505123-8	Lever comp., clutch	
	1505123-9	Grip comp., LH	
	1505123-10	Switch, handlebar, LH	

F-04 方向柱 STEERING STEM


	1505124-1	Steering stem comp.	
	1505124-2	Bracket, speed sensor	
	1505124-3	Bracket, headlight	
	1505124-4	Clamp I , front brake hose	
	1505124-5	Bearing Set, Steering	
	1505124-6	Hexagon socket ,Stainless steel	
	1505124-7	Clamp, Steering Bar	
	1505124-8	Holder set, steering bar pipe	
	1505124-9	Ornament, steering stem upper	
	1505124-10	Cushion, steering stem upper	
	1505124-11	Bridge Set, Upper	

F-05 前挡泥板、减震器 FRONT FENDER & SHOCK ABSORBER


	1505125-1	Front fender	
	1505125-2	Reflector, front	
	1505125-3	Stay, front fender	
	1505125-4	Clamp II, front brake hose	
	1505125-5	Shock absorber, front, RH	
	1505125-6	Shock absorber, front, LH	
	1505125-7	Shock absorber Assy., rear	

F-06 油箱护罩 ORNAMENT, FUEL TANK



	1505126-1	Ornament, fuel tank, RH	
	1505126-2	lining, Ornament, fuel tank, RH	
	1505126-3	Lining, Ornament, fuel tank, LH	
	1505126-4	Ornament, fuel tank, LH	

F-07 油箱总成 FUEL TANK ASSY



	1505127-1	Fuel tank	
	1505127-2	Sensor, fuel	
	1505127-3	Cock Comp., fuel	
	1505127-4	Grommet, fuel tank upper	
	1505127-5	Bush, fuel tank rear	
	1505127-6	Cushion, fuel tank rear	
	1505127-7	Lock set	
	1505127-8	Hose, fuel	

F-08 前轮 FRONT WHEEL



	1505128-1	Speed sensor	
	1505128-2	Hub comp., front wheel	
	1505128-3	Tyre, front	
	1505128-4	Tube, Front Wheel	
	1505128-5	Disc, front brake	
	1505128-6	Bush, front wheel	
	1505128-7	Axle, front wheel	
	1505128-8	Nut, front axle	
	1505128-9	Front Hydraulic Brake Assy	
	1505128-10	Lever, front brake	
	1505128-11	Pads, front brake	
	1505128-12	Lock plate, front brake disc	

F-09 后轮 REAR WHEEL



	1505129-1	Bush, rear wheel, RH	
	1505129-2	Rear brake	
	1505129-3	Rear brake shoe	
	1505129-4	Tyre, rear	
	1505129-5	Hub comp., Rear wheel	
	1505129-6	Tube, rear wheel	
	1505129-7	Buffer, rear wheel	
	1505129-8	Hub, Rear sprocket	
	1505129-9	Rear sprocket	
	1505129-10	Bush, Rear wheel, LH	
	1505129-11	Axle, rear wheel	
	1505129-12	Nut, rear axle	
	1505129-13	Lock plate, rear sprocket	

F-10 后叉焊接组合 REAR FORK



	15051210-1	Axle, rear fork	
	15051210-2	Nut, rear fork shaft	
	15051210-3	Dust cover set, rear fork shaft	
	15051210-4	Guard, chain	
	15051210-5	Weldment comp., rear fork	
	15051210-6	Connecting plate, rear fender bracket	
	15051210-7	Limited Rod, Rear Brake	
	15051210-8	Adjuster comp., chain	
	15051210-9	Plate, chain adjuster setting	
	15051210-10	Chain case	
	15051210-11	Chian 428H*120	

F-11 侧盖、座垫 SIDE COVER & SEAT



	15051211-1	Side cover, RH	
	15051211-2	Side cover, LH	
	15051211-3	Rear panel, RH	
	15051211-4	Rear panel, LH	
	15051211-5	Seat Assy	

F-12 后挡泥板 REAR FENDER



	15051212-1	Front body, rear fender	
	15051212-2	Strap, tool box	
	15051212-3	Flap, rear mud	
	15051212-4	Bracket, rear fender rear body	
	15051212-5	Guard, rear wheel	
	15051212-6	Bracket, rear fender tail	
	15051212-7	Tail, rear fender	
	15051212-8	Rear reflector	
	15051212-9	Bracket, rear license plate	
	15051212-0	Rubber pad, rear license plate support	

F-13 空气滤清器、排气消声器 AIR CLEANER & EXHAUST MUFFLER



	15051213-1	Air cleaner Assy.	
	15051213-2	Filter, Air cleaner	
	15051213-3	Exhaust muffler Assy.	
	15051213-4	Mantle I , muffler	
	15051213-5	Mantle II , muffler	
	15051213-6	Gasket, Exhaust muffler	
	15051213-7	Oil-gas separator comp.	

F-14 主、侧支架 CENTER & SIDE STAND

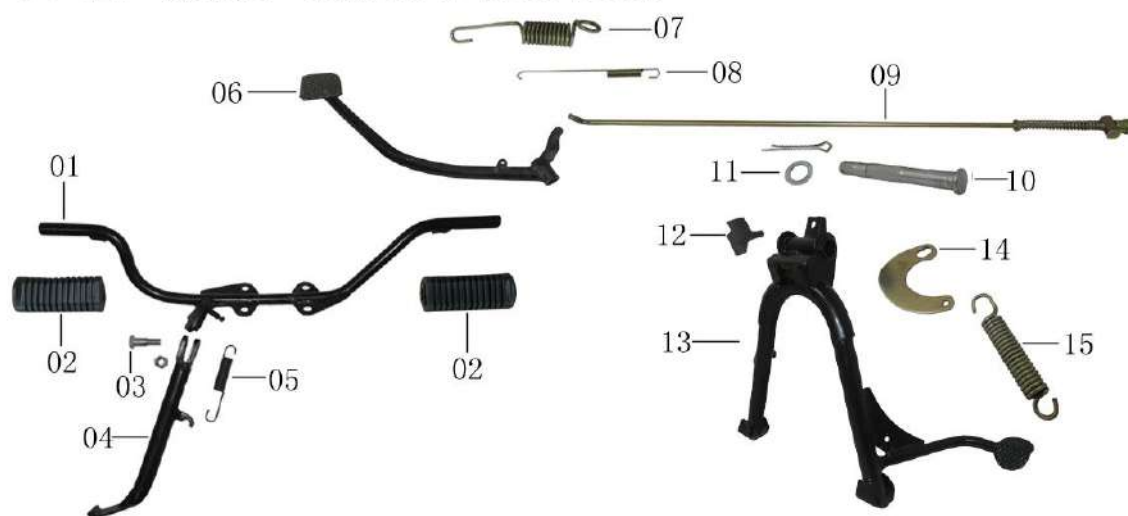


	15051214-1	Bracket, Footrest, Rider	
	15051214-2	Rubber Treale, Rider	
	15051214-3	Bolt, pivot	
	15051214-4	Side stand	
	15051214-5	Spring, side stand	
	15051214-6	Pedal, Rear Brake	
	15051214-7	Spring, Rear Brake Pedal	
	15051214-8	Spring, Rear brake Switch	
	15051214-9	Pull Rod, Rear Brake	
	15051214-10	Axle, Center Stand	
	15051214-11	Washer	
	15051214-12	Rubber, Center Stand	
	15051214-13	Center Stand	
	15051214-14	Spring Hook	
	15051214-15	Spring, Center Stand	

F-15 电器 ELECTRICAL ELEMENTS



	15051215-1	Main cable	
	15051215-2	Switch, rear brake	
	15051215-3	Horn	
	15051215-4	Flash relay	
	15051215-5	Battery	

F-16 车架焊接总成 FRAME WELDMENT

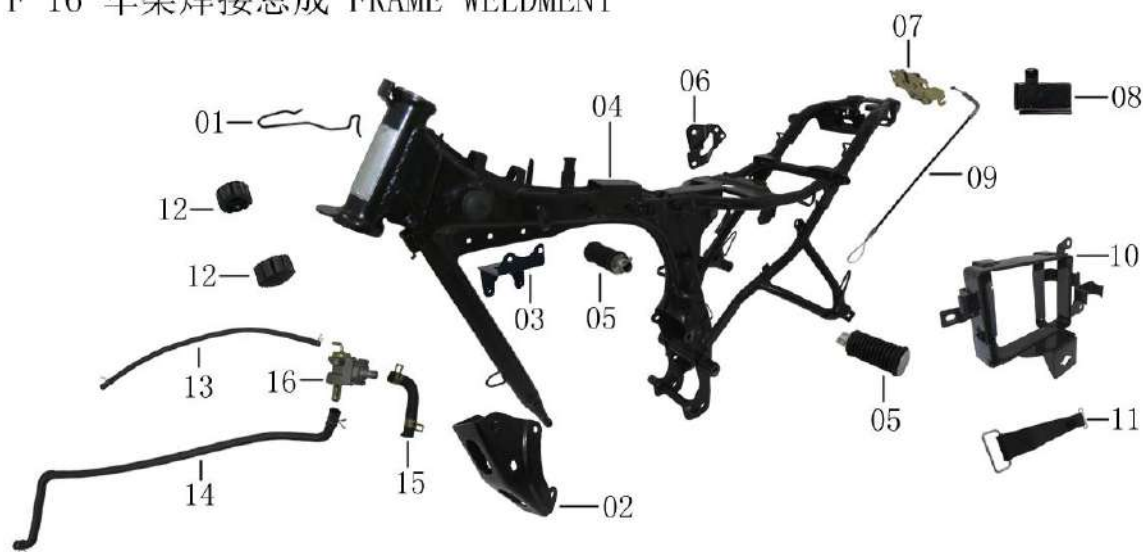

	15051216-1	Hook, clutch cable	
	15051216-2	Plate Set, Engine Front Connecting	
	15051216-3	Bracket, secondary gulp valve	
	15051216-4	Frame weldment Assy	
	15051216-5	Footrest Assy., pillion	
	15051216-6	Stay, air cleaner	
	15051216-7	Seat lock base	
	15051216-8	Protector, seat lock cable	
	15051216-9	Cable, seat lock	
	15051216-10	Bracket, Battery	
	15051216-11	Strap, battery	
	15051216-12	Cushion, fuel tank front	
	15051216-13	Negative Pressure Tube, Secondary air gulp valve	
	15051216-14	Inlet hose, Secondary air gulp valve	
	15051216-15	Outlet hose, Secondary air gulp valve	
	15051216-16	Secondary air gulp valve	

157FMJ-3

Engine Parts

LF150-5L



UNIVERSAL

H A R D W A R E®


Box 585, Center Road
Spanish Lookout
Tel 501 823 0254
sales@universalhardware.bz

3380 Chetumal Street
Belize City
Tel 501 224 4140
salesbz@universalhardware.bz

E-01 气缸、气缸头 CYLINDER BLOCK & CYLINDER HEAD



	1571-1	Check Valve Vent Pipe Comp.	
	1571-2	Check Valve Vent Pipe Shim	
	1571-3	Cap nut M8	
	1571-4	Copper washer, bolt, cylinder	
	1571-5	Head unit, cylinder	
	1571-6	Spark plug	
	1571-7	Inle pipe set	
	1571-8	Block unit, cylinder	
	1571-9	Gasket, cylinder block	
	1571-10	Gasket, cylinder head	
	1571-11	Cover, cylinder head, LH	
	1571-12	Bolt, M8×45	
	1571-13	Gasket, cover, cylinder head, LH	
	1571-14	Retainer, distributing camshaft	
	1571-15	Valve Cover O-Ring	
	1571-16	Cover, valve	
	1571-17	Dowel pin, cylinder headΦ10×20	
	1571-18	Dowel pin, cylinder headΦ10×14	
	1571-19	Washer, Tensioner	
	1571-20	Tensioner Assy	

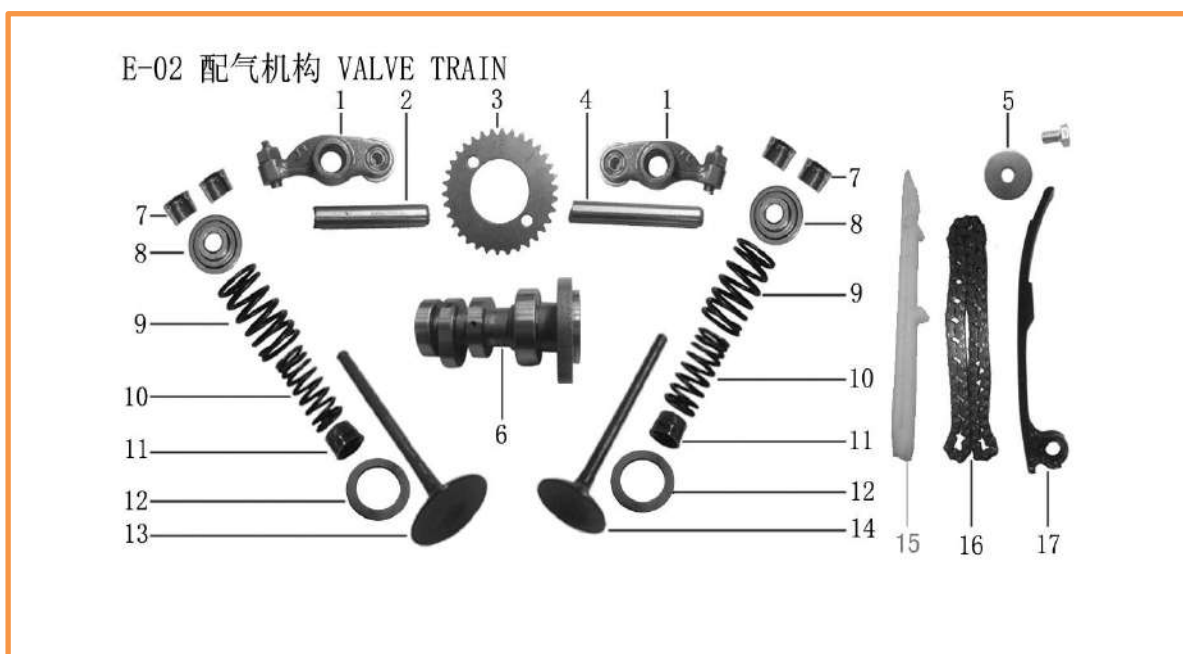


	1572-1	Rocker arm Assy,	
	1572-2	Shaft, rocker arm II	
	1572-3	Sprocket, timing driven	
	1572-4	Shaft, rocker arm I	
	1572-5	Washer, tensioning plate	
	1572-6	Camshaft Assy I	
	1572-7	Split cone, valve	
	1572-8	Seat, spring, upper	
	1572-9	Spring, valve, outer	
	1572-10	Spring, valve, inner	
	1572-11	Oil seal, valve stem	
	1572-12	Valve Outer Spring Seat	
	1572-13	Valve, intake	
	1572-14	Valve, exhaust	
	1572-15	Guiding plate	
	1572-16	Chain, timing	
	1572-17	Tensioner	

E-03 右曲轴箱盖 RIGHT CRANKCASE COVER



	1573-1	Clutch Controlling Rod	
	1573-2	Clutch Lever Oil Seal	
	1573-3	Clutch Lever Spring	
	1573-4	Spring, operating shaft, clutch	
	1573-5	Dipstick comp.	
	1573-6	O-ring, dipstick	
	1573-7	Oil seal, starting shaft	
	1573-8	Cover comp., crankcase, RH	
	1573-9	Stay, clutch cable adjusting	
	1573-10	Gasket, crankcase cover, RH	
	1573-11	Glass, sight	
	1573-12	Head, cylinder Set Pin	

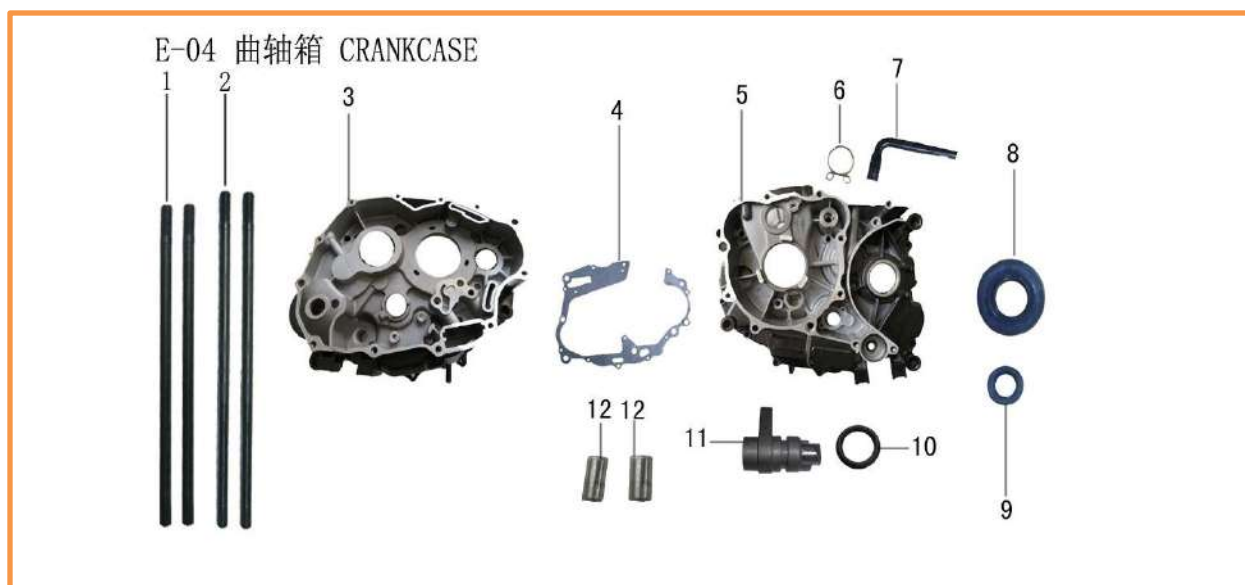

	1574-1	Stud AM8×207	
	1574-2	Stud BM8×212	
	1574-3	Crankcase, RH	
	1574-4	Gasket, crankcase	
	1574-5	Crankcase, LH	
	1574-6	Clip, exhaust pipe	
	1574-7	Pipe, exhaust	
	1574-8	Oil seal,	
	1574-9	Oil seal, gearshift shaft	
	1574-10	pin-keeping O-Ring	
	1574-11	Body comp., pin-keeping	
	1574-12	Dowel pin (Φ10×14)	

E-05 机油泵、起动电机 OIL PUMP & STARTING MOTOR


	1575-1	Oil Pump Assy	
	1575-2	Starting motor	
	1575-3	Shaft, dual-gear I	
	1575-5	Dual-gear comp. I	
	1575-6	Gear set, starting clutch	
	1575-7	Dual-gear comp.II	
	1575-8	Shaft, dual-gear II	
	1575-9	Washer, Dual-gear II	
	1575-10	Oil Pump Gasket	
	1575-11	Oil Filter Assy	
	1575-11	Gauze set	



	1576-1	Stator set, magneto	
	1576-2	Flywheel clutch Assy	
	1576-3	Starting clutch Assy	
	1576-4	Bolt,	
	1576-5	Thrust washer	
	1576-6	Plug, watch hole	
	1576-7	O-ring, watch hole plug	
	1576-8	Cover, crankcase, LH	
	1576-9	O-ring, $\Phi 63 \times \Phi 3$	
	1576-10	Cover, upper	
	1576-11	Gasket, crankcase cover, LH	
	1576-12	Dowel pin, crankcase	
	1576-13	Cover, LH	
	1576-14	O-ring, plug,	
	1576-15	Rear cover, LH	


E-07 离合器 CLUTCH



	1577-1	Body, clutch	
	1577-2	Clutch Pusher	
	1577-3	Bearing, 16003	
	1577-4	Lock nut	
	1577-5	Thrust washer	
	1577-6	Plate, clutch lifter	
	1577-7	Spring, Clutch	
	1577-8	Disc set, clutch friction	
	1577-9	Plate, clutch	
	1577-10	Plate, clutch pressure	
	1577-11	Center comp., clutch	
	1577-12	Clutch Assy	
	1577-13	Outer comp., clutch	
	1577-14	Spline washer	

E-08 曲轴、活塞 CRANKSHAFT & PISTON


	1578-1	Circlip, piston pin	
	1578-2	Pin, piston	
	1578-3	Piston	
	1578-4	Rod comp., crankshaft connecting	
	1578-5	Key, woodruff	
	1578-6	Ring set, piston	
	1578-7	Bearing, crankshaft, RH	
	1578-8	Bearing,	
	1578-9	Shaft, balanced	
	1578-10	Key, woodruff	
	1578-11	Gear, balanced shaft driven Assy	
	1578-12	Gear, balanced shaft drive	
	1578-13	Gear, primary drive	
	1578-14	Thrust washer	
	1578-15	Lock nut	

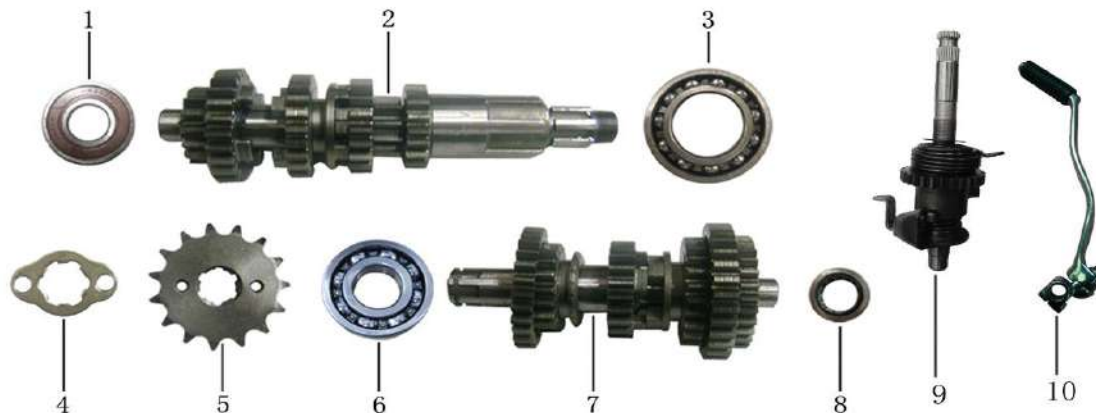E-09 传动装置 TRANSMISSION


	1579-1	Bearing, 6202 RS	
	1579-2	Main shaft Assy	
	1579-3	Bearing, 6006	
	1579-4	Locating plate, sprocket	
	1579-5	Sprocket, output	
	1579-6	Bearing, 6204	
	1579-7	Countershaft Assy	
	1579-8	Bearing, needle, HK152312	
	1579-9	Starting Shaft Assy	
	1579-10	Starting Arm Assy	

E-10 变档机构 GEARSHIFT DEVICE


	15710-1	Cam	
	15710-2	Pin, gear indicating	
	15710-3	Spring, Pin	
	15710-4	Set pin,	
	15710-5	Drum	
	15710-6	Shaft, fork	
	15710-7	Fork (III)	
	15710-8	Fork (II)	
	15710-9	Fork (I)	
	15710-10	Indicator, gear	
	15710-11	Limit plate	
	15710-12	Spring	
	15710-13	Gearshift shaft Assy	
	15710-14	Bearing, needle	

E-11 化油器、变档杆 GEARSHIFT PEDAL & CARBURETOR




	15711-1	Carburetor Assy	
	15711-2	Inlet Pipe Insulator O-Ring	
	15711-3	Inlet Pipe Insulator	
	15711-4	Gearshift pedal Assy	


E-12 电器 ELECTRIC ELEMENTS




	15010618-5	Ignition Controller	
	15010618-6	Start Relay	
	15010618-3	Voltage Regulator	
	15010618-7	Ignition Coil	

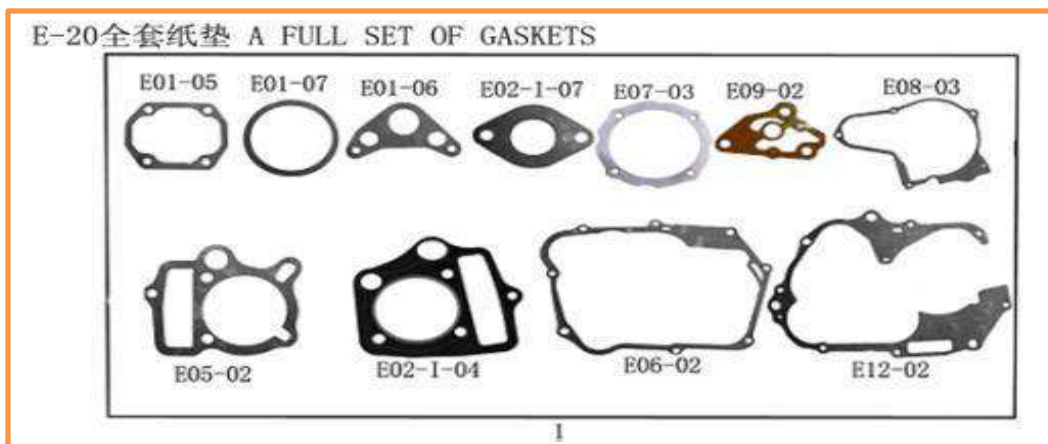

	15712-1	A Full Set Of Gaskets	
--	---------	-----------------------	--

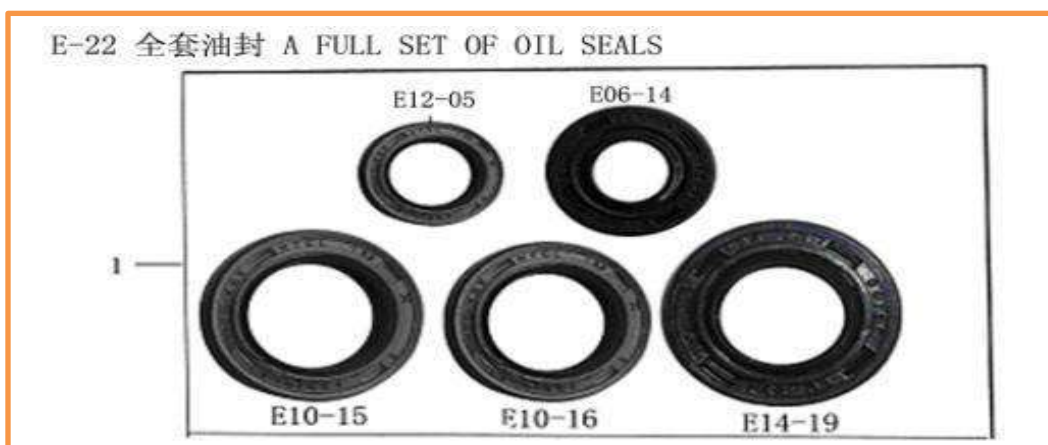

	15715-1	A Full Set Of Oil Seals	
--	---------	-------------------------	--

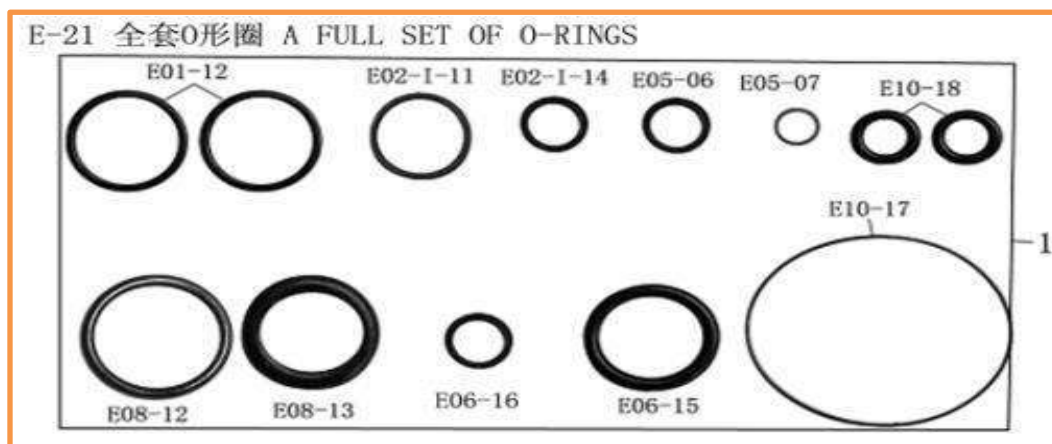

	15713-1	A Full Set Of O-Rings	
--	---------	-----------------------	--



	15714-1	A Full Set Of Bearings	
--	---------	------------------------	--

157FMJ-3

LF150-5L



	157FMJ-3	Engine Complete 157FMJ-3	
--	----------	--------------------------	--



LIFAN Motorcycle Warranty Policy

AUGUST 2024 Edition

LIFAN Motorcycle are covered under a warranty for **6 months or 6,000 kms**, whichever comes first. The specific items under warranty include:

- ❖ **The Engine** and its related parts
- ❖ Any defects or issues resulting from **substandard manufacturing or assembly**.

Items Not Covered Under Warranty:

The following items are not covered under this warranty:

- ❖ Tires & tubes; chain & sprockets; oils; covers & mirrors
- ❖ Any damages or wear and tear resulting from the **owner's handling and maintenance** of the motorcycle

Important Reminders for Safe Riding and Maintenance:

- ✓ Always wear a **helmet** while riding.
- ✓ Always keep your **headlights on**, even during the day, for safety and to prolong battery life.
- ✓ Ensure all **lights** are always functioning properly.
- ✓ Ride with **insurance** and proper **licensing**.
- ✓ **Change the oil** after the first **500 kms** and then every **2,000 kms**.
- ✓ Use **SAE 15W-40 or 10W-40** motor oil.
- ✓ Use **REGULAR** gasoline for small engines like motorcycles, not premium.
- ✓ Regularly **tighten all screws**.
- ✓ Periodically adjust the **tightness of the chain**.
- ✓ Review the Owner's Manual for more details.
- ✓ **Drive safely** within speed limits and always, wear a **helmet**.

By following these guidelines, you can ensure your LIFAN motorcycle remains in good condition and continues to provide a safe and enjoyable riding experience.