

UNIVERSAL

H A R D W A R E®



MOTORCYCLE PARTS CATALOGUE

Model: **LF200-14F**

Spanish Lookout

sales@universalhardware.bz

+501 823 0254 +501 652-9933

Belize City

salesbz@universalhardware.bz

+501 224-4140 +501 667-3937

2025



LIFAN



Model: **LF150-5U**



Model: **LF250GY-4**



Model: **ML125-16D Flash**



Model: **LF150-5L**



Model: **ML250GY-4**



Model: **ML200ZH-3**



Model: **ML200GY-4**



Model: **LF100-A**



Model: **LF110-7A NINJA**



Model: **LF200GY-4**



Model: **LF125-5**



Model: **LF125-7**



Model: **LF150T-12C**



Model: **LF150-7 Retro**



Model: **LF200-14F**


F-01 灯具 LIGHTS


	200141-1	Housing, headlight	
	200141-2	Headlight Assy	
	200141-3	Stay comp., headlight	
	200141-4	Front Winker, LH	
	200141-5	Front Winker,RH	
	200141-6	Rear Winker,LH	
	200141-7	Rear Winker,RH	
	200141-8	Taillight Assy	
	200141-9	Light comp.,license plate	

F-02 握把、开关、拉索 GRIP, SWITCH & CABLES


	200142-1	Steering Bar	
	200142-2	Handlebar Switch,LH	
	200142-3	Handlebar Switch,RH	
	200142-4	Grip Comp.,LH	
	200142-5	Throttle Grip Comp.	
	200142-6	Steering Bar Weight Set	
	200142-7	Stay, front winker, LH	
	200142-8	Bracket, front winker, RH	
	200142-9	Rearview Mirror LH	
	200142-10	Rearview Mirror RH	
	200142-11	Clutch Lever Holder Set	
	200142-12	Clutch Cable	
	200142-13	Throttle Cable	
	200142-14	Rear Brake Cable	
	200142-15	Seat Lock Cable	

F-03 方向柱组件 STEERING STEM

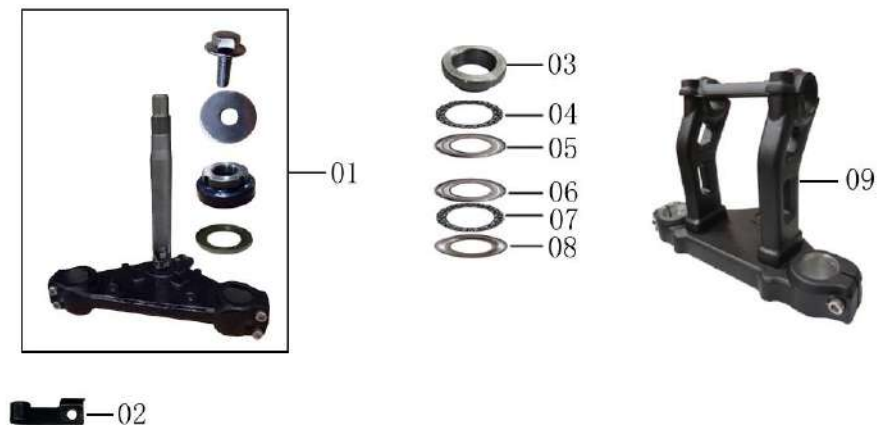

	200143-1	Steering Stem Assy	
	200143-2	Clamp	
	200143-3	Cover, top bearing	
	200143-4	Bearing set, steering stem top	
	200143-5	Race, top bearing	
	200143-6	Cover, bottom bearing	
	200143-7	Bearing set, steering stem bottom	
	200143-8	Race, bottom bearing	
	200143-9	Bridge Comp, steering stem top	

F-04 前挡泥板 减震器 FRONT FENDER & SHOCK ABSORBER



	200144-1	Lining set, front fender	
	200144-2	Front Fender Assy	
	200144-3	Shock absorber Assy, rear	
	200144-4	Shock absorber, front, RH	
	200144-5	Shock absorber, front, LH	
	200144-6	Stay, speed sensor	
	200144-7	Circlip, hose	

F-05 油箱护板 侧盖 FUEL TANK GUARD & SIDE COVER


	200145-1	Ornament II, fuel tank, RH	
	200145-2	Ornament, fuel tank, RH	
	200145-3	Ornament,Cover side, RH	
	200145-4	Cover side, RH	
	200145-5	Ornament, pillion footrest, RH	
	200145-6	Ornament, rear panel, RH	
	200145-7	Ornament II, fuel tank, LH	
	200145-8	Ornament, fuel tank, LH	
	200145-9	Ornament,Cover side, LH	
	200145-10	Cover side, LH	
	200145-11	Ornament, pillion footrest, LH	
	200145-12	Ornament, rear panel, LH	
	200145-13	Reflector, RH	
	200145-14	Reflector, LH	

F-06 油箱总成、仪表 FUEL TANK & METER ASSY


	200146-1	Meter Assy	
	200146-2	Ornament, fuel tank upper	
	200146-3	Cushion, fuel tank front	
	200146-4	Tank weldment, fuel	
	200146-5	Plate II, fuel tank mounting stay backing	
	200146-6	Stay set, rear fuel tank mounting	
	200146-7	Grommet, rear fuel tank rear	
	200146-8	Cushion, fuel tank rear	
	200146-9	Fuel Cock Comp.	
	200146-10	Sensor, fuel	
	200146-11	Lock Assy	

F-07 后挡泥板 REAR FENDER




	200147-1	Tool Box	
	200147-2	Stay, fuse box	
	200147-3	CDI Stay	
	200147-4	Stay, flashing relay	
	200147-5	Head, rear fender	
	200147-6	rear fender bracket	
	200147-7	Body, rear fender mid	
	200147-8	Tail, rear fender	
	200147-9	Reflector, rear	
	200147-10	Bracket, rear license plate	

F-08 排气消声器、空滤器、座垫 EXHUST MUFFLER & AIR CLEANER & SEAT


	200148-1	Pillion Assy.	
	200148-2	Seat Assy., rider	
	200148-3	Cleaner Assy, air	
	200148-4	Plate set, battery stay connecting	
	200148-5	Element, air cleaner	
	200148-6	Muffler Assy, exhaust	
	200148-7	Gasket set, muffler	

F-09 后叉焊接组合 REAR FORK WELDMENT

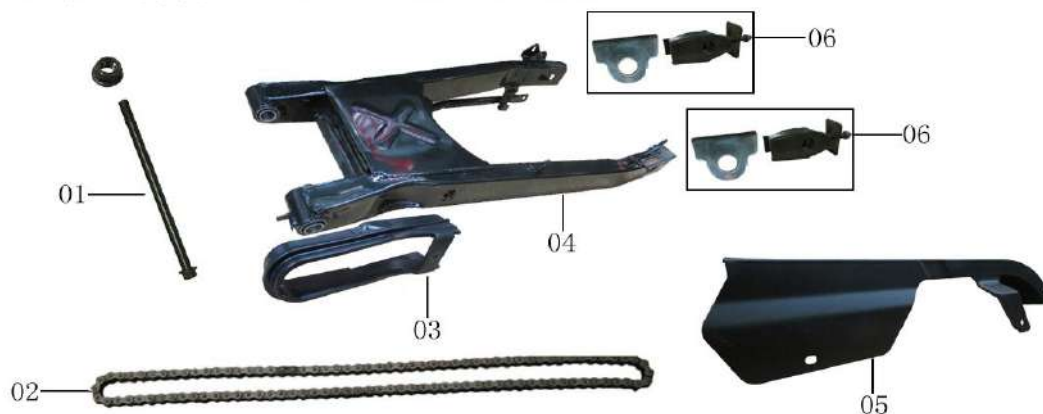

	200149-1	Shaft, rear fork	
	200149-2	Chain,428MH×132	
	200149-3	Guide, chain	
	200149-4	Fork comp., rear	
	200149-5	Chaincase	
	200149-6	Adjuster set, chain	

F-10 前轮总成 FRONT WHEEL ASSY


	2001410-1	Sensor, speed	
	2001410-2	Hub comp., front wheel	
	2001410-3	Tyre, front	
	2001410-4	Disc, front brake	
	2001410-5	Bush, front wheel, LH	
	2001410-6	Axle, front	
	2001410-7	Tube, valve	

F-11 后轮总成 REAR WHEEL ASSY



	2001411-1	Brake, rear	
	2001411-2	Hub, rear wheel	
	2001411-3	Tyre, rear	
	2001411-4	Hub Assy, sprocket	
	2001411-5	Sprocket	
	2001411-6	Shoe, rear brake	
	2001411-7	Buffer, rear wheel	
	2001411-8	Nut,	
	2001411-9	Rear Wheel Bush, RH	
	2001411-10	Rear Wheel Bush,LH	
	2001411-11	Axle, rear	
	2001411-12	Tube, valve	

F-12 主支架 CENTER STAND




	2001412-1	Stand, center	
	2001412-2	Spring, center stand return	
	2001412-3	Stand, center	
	2001412-4	Spring, side stand return	
	2001412-5	Stand, side	
	2001412-6	Switch, rear brake	
	2001412-7	Spring, rear brake switch	
	2001412-8	Bolt, side stand	

F-13 散热器总成 RADIATOR ASSY

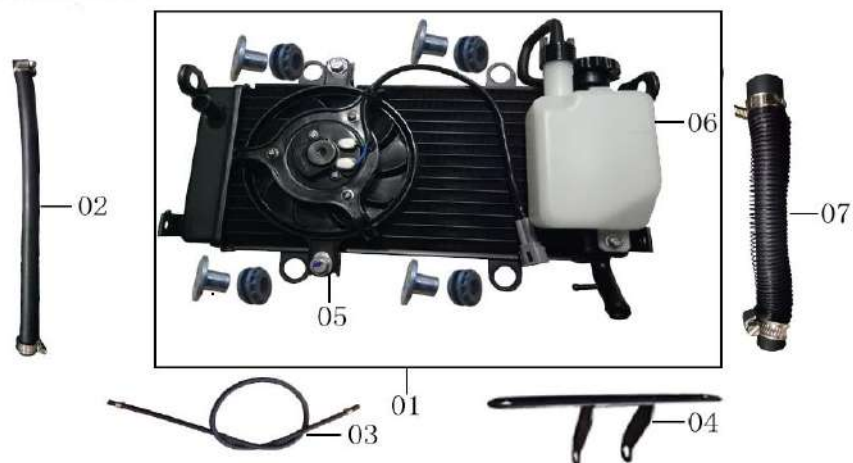

	2001413-1	Radiator comp.	
	2001413-2	Hose set, radiator inlet	
	2001413-3	Hose, thermostat small	
	2001413-4	Lug set, radiator mounting	
	2001413-5	Fan Assy	
	2001413-6	Reservoir, storage	
	2001413-7	Hose set, radiator outlet	

F-14 前液压制动器 FRONT BRAKE

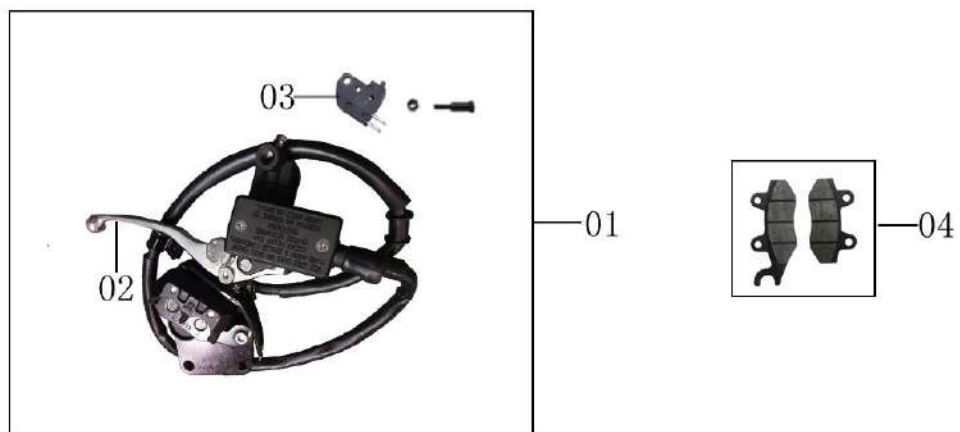

	2001414-1	Brake comp., front hydraulic	
	2001414-2	Front Brake Lever	
	2001414-3	Front Brake Switch	
	2001414-4	Front Brake Shoe Set	

F-15 车架焊接总成 FRAME WELDMENT ASSY


	2001415-1	Body weldment, frame	
	2001415-2	Pedal, rear brake	
	2001415-3	Pedal, Spring rear brake	
	2001415-4	Footrest comp., rider, RH	
	2001415-5	Gearshift Lever Assy	
	2001415-6	Footrest comp., rider, LH	
	2001415-7	Body set, bottom	
	2001415-8	Stay set, front mounting	
	2001415-9	Plate set, battery pressing	
	2001415-10	Stay Set, battery	
	2001415-11	Boot, rear footrest stay	
	2001415-12	Pad, center stand limit	
	2001415-13	Footrest Assy., pillion, LH	
	2001415-14	Footrest Assy., pillion, RH	

F-16 电器 ELECTRICAL ELEMENTS



	2001416-1	Cable, main	
	2001416-2	Horn	
	2001416-3	Relay, flashing	
	2001416-4	Battery	
	2001416-5	Start Relay	
	2001416-6	Voltage Regulator	
	2001416-7	Ignition Coil	

165ML-E

Engine Parts

LF200-14F




UNIVERSAL
H A R D W A R E®

Box 585, Center Road
Spanish Lookout
Tel 501 823 0254
sales@universalhardware.bz

3380 Chetumal Street
Belize City
Tel 501 224 4140
salesbz@universalhardware.bz

E-01 气缸、气缸头 CYLINDER BLOCK & CYLINDER HEAD


165141-1	Cap nut M8	
165141-2	Copper washer, bolt, cylinder Φ10.5×Φ20×2	
165141-3	Spark plug	
165141-4	Thermostat Cover	
165141-5	Block unit, cylinder	
165141-6	Cover, cylinder head, LH	
165141-7	Bolt, M8×45	
165141-8	Gasket, cover, cylinder head, LH	
165141-9	Head unit, cylinder	
165141-10	Retainer, distributing camshaft	
165141-11	Cover, valve	
165141-12	Valve Cover O-Ring	
165141-13	Gasket, cylinder head	
165141-14	Gasket, cylinder block	
165141-15	Dowel pin, cylinder head Φ10×20	
165141-16	Washer, Tensioner	
165141-17	Tensioner Assy	
165141-18	Coolant temperature sensor	
165141-19	Valve, thermostat	

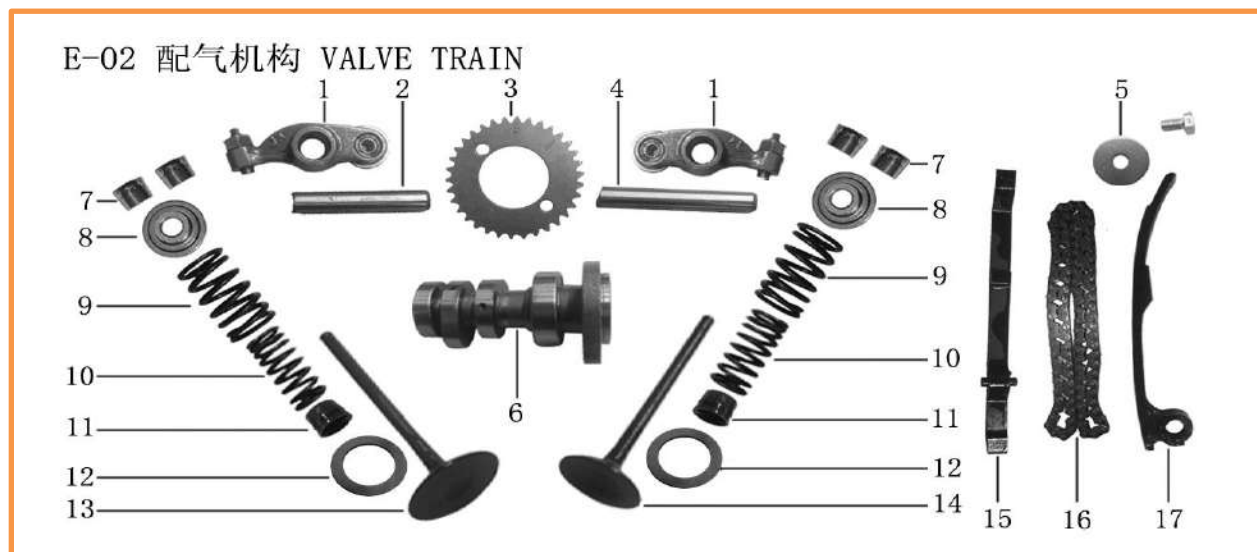

165142-1	Rocker arm Assy,	
165142-2	Shaft, rocker arm II	
165142-3	Sprocket, timing driven	
165142-4	Shaft, rocker arm I	
165142-5	Washer, tensioning plate	
165142-6	Camshaft Assy I	
165142-7	Split cone, valve	
165142-8	Seat, spring, upper	
165142-9	Spring, valve, outer	
165142-10	Spring, valve, inner	
165142-11	Oil seal, valve stem	
165142-12	Valve Outer Spring Seat	
165142-13	Valve, intake	
165142-14	Valve, exhaust	
165142-15	Guiding plate	
165142-16	Chain, timing	
165142-17	Tensioner	

E-03 右曲轴箱盖、水泵组件 RIGHT CRANKCASE COVER & WATER PUMP ASSY


165143-1	Dipstick Assy	
165143-2	O-ring	
165143-3	Cover unit, crankcase, RH	
165143-4	Pump Cover	
165143-5	Dowel PinΦ8×10	
165143-6	Pump Hermetical Circle	
165143-7	Clutch Controlling Rod	
165143-8	Clutch Lever Oil Seal	
165143-9	Clutch Lever Spring	
165143-10	Spring, operating shaft, clutch	
165143-11	Head, cylinder Set Pin	
165143-12	Sight Glass	
165143-13	Crankcase Cover Gasket,RH	
165143-14	Overflow Pipe	
165143-15	Overflow Pipe Clamp	
165143-16	Cover, oil element	
165143-17	O-ring, oil element cover	
165143-18	Element Assy., oil	
165143-19	Gear comp., water pump driven	
165143-20	Pump Assy., water	
165143-21	Clamp Comp, Water Pipe	
165143-22	Water pipe	
165143-23	Oil seal, crankshaft, RH	



165144-1	Stud B (M8×196.5)	
165144-2	Stud A (M8×205)	
165144-3	Adjusting support, clutch cable	
165144-4	Crankcase, RH	
165144-5	Dowel pin (Φ10×14)	
165144-6	Gasket, crankcase	
165144-7	Crankcase, LH	
165144-8	Clip, exhaust pipe	
165144-9	Pipe, exhaust	
165144-10	Timing Chain Limited Plate	
165144-11	Pin-Keeping	
165144-12	Pin-Keeping Spring	
165144-13	Pin-Keeping Spring Plate	
165144-14	Oil seal, 20×34×7	
165144-15	Oil seal, gearshift shaft	
165144-16	Gauze filter	
165144-17	Spring	
165144-18	O-ring, cover gauze(Φ35×Φ3)	
165144-19	Cover, gauze filter	

E-05 机油泵、起动电机 OIL PUMP & STARTING MOTOR


165145-1	Oil Pump Assy	
165145-2	O-Ring (φ9.4×φ2.4)	
165145-3	Shaft, dual-gear I	
165145-4	Washer, Dual-gear	
165145-5	Dual-gear comp. I	
165145-6	Starting motor	
165145-7	Dual-gear comp. II	
165145-8	Shaft, dual-gear II	
165145-9	Gear set, starting clutch	
165145-10	Washer, gear, starting clutch	

E-06 磁电机 MAGNETO




165146-1	Stator set, magneto	
165146-2	Flywheel clutch Assy	
165146-3	Rotor set, magneto	
165146-4	Starting clutch Assy	
165146-5	Plug, watch hole	
165146-6	O-ring, watch hole plug	
165146-7	Cover, crankcase, LH	
165146-8	O-ring, $\Phi 63 \times \Phi 3$	
165146-9	Cover, upper	
165146-10	Clip, magneto wire	
165146-11	Stopper, magneto wiring harness	
165146-12	Bolt, M10×45	
165146-13	Thrust washer	
165146-14	Gasket, crankcase cover, LH	
165146-15	Dowel pin, crankcase	
165146-16	Cover, LH	
165146-17	O-ring, plug,	
165146-18	Rear cover, LH	

E-07 离合器 CLUTCH




165147-1	Clutch Mandrel	
165147-2	Clutch Pusher	
165147-3	Bearing, 16003	
165147-4	Lock nut	
165147-5	Thrust washer	
165147-6	Plate, clutch lifter	
165147-7	Spring, Clutch	
165147-8	Disc set, clutch friction	
165147-9	Plate, clutch	
165147-10	Plate, clutch pressure	
165147-11	Center comp., clutch	
165147-12	Clutch Assy	
165147-13	Outer comp., clutch	
165147-14	Body, clutch	
165147-15	Spline washer	
165147-16	Bush, clutch	
165147-17	Collar, clutch	

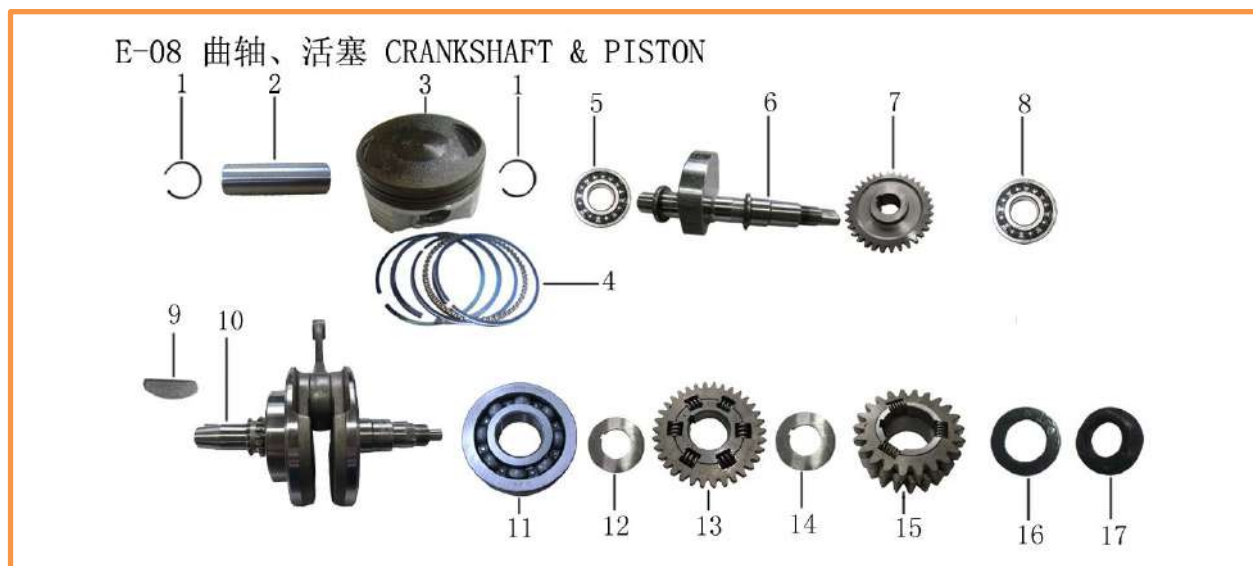

165148-1	Circlip, piston pin	
165148-2	Pin, piston	
165148-3	Piston	
165148-4	Ring set, piston	
165148-5	Bearing,6204/P6/FJK	
165148-6	balance shaft	
165148-7	Gear, balance shaft driven	
165148-8	Bearing,6302/CJB	
165148-9	Key, woodruff	
165148-10	Crankshaft & connecting rod	
165148-11	Bearing, crankshaft, RH	
165148-12	Washer, balance shaft drive gear	
165148-13	Gear comp., balance shaft drive	
165148-14	Washer II, balance shaft drive gear	
165148-15	Gear comp., primary drive	
165148-16	Washer, primary drive gear spring	
165148-17	Nut, primary drive gear fastening	

E-09 传动装置 TRANSMISSION

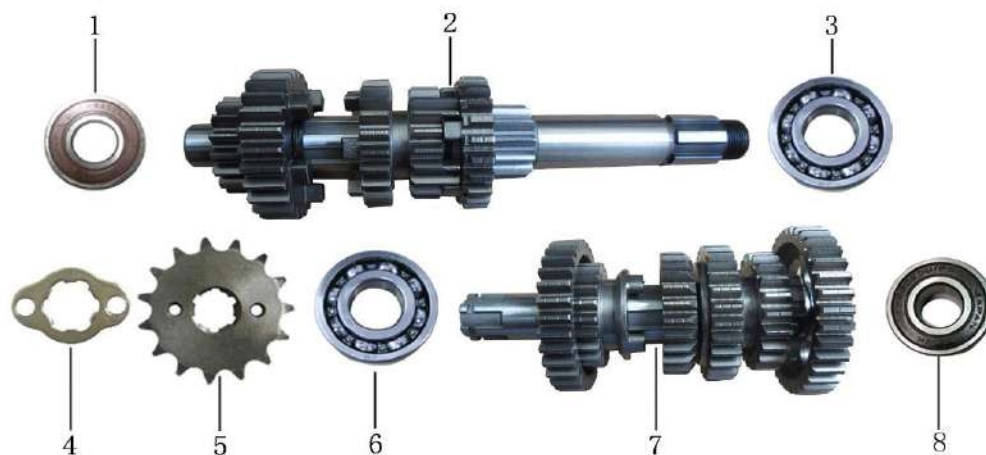

165149-1	Bearing, 6202 RS	
165149-2	Main shaft Assy	
165149-3	Bearing, 6204/P6/FJK	
165149-4	Locating plate, sprocket	
165149-5	Sprocket, output	
165149-6	Bearing, 6204/P6/FJK	
165149-7	Countershaft Assy	
165149-8	Bearing, needle,6203\FJK	

E-10 变档机构 GEARSHIFT DEVICE




1651410-1	Shaft comp., gearshift	
1651410-2	Set pin, 4×10	
1651410-3	Drum	
1651410-4	Shaft, fork	
1651410-5	Fork (I)	
1651410-6	Fork (II)	
1651410-7	Gear Indicator Contact Point Comp	
1651410-8	O-ring, gear indicator	
1651410-9	Gear Indicating Wire Harness	
1651410-10	Limit plate	
1651410-11	Spring, locating plate torsion	
1651410-12	Gearshif Shaft Washer	
1651410-13	Gearshift shaft Assy	
1651410-14	Shaft, fork II	

E-11 变档杆 GEARSHIFT PEDAL




1651411-1	Gearshift pedal Assy	
-----------	----------------------	--

E-13 全套密封垫 A FULL SET OF GASKET

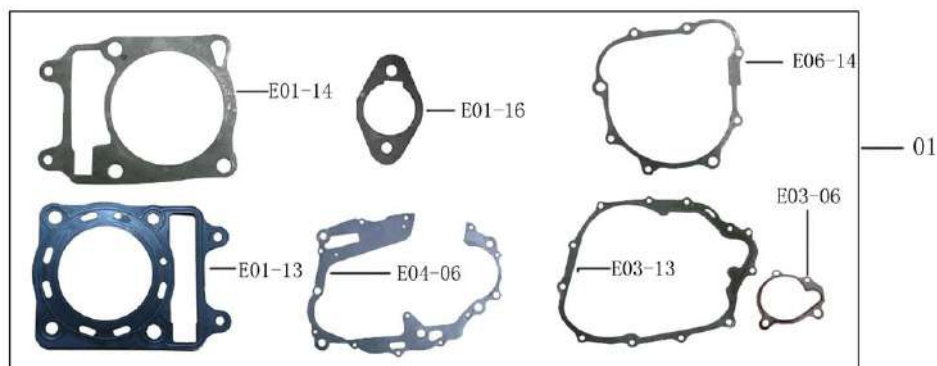


1651413-1	A Full Set Of Gaskets	
-----------	-----------------------	--

E-14 全套油封 A FULL SET OF SEAL

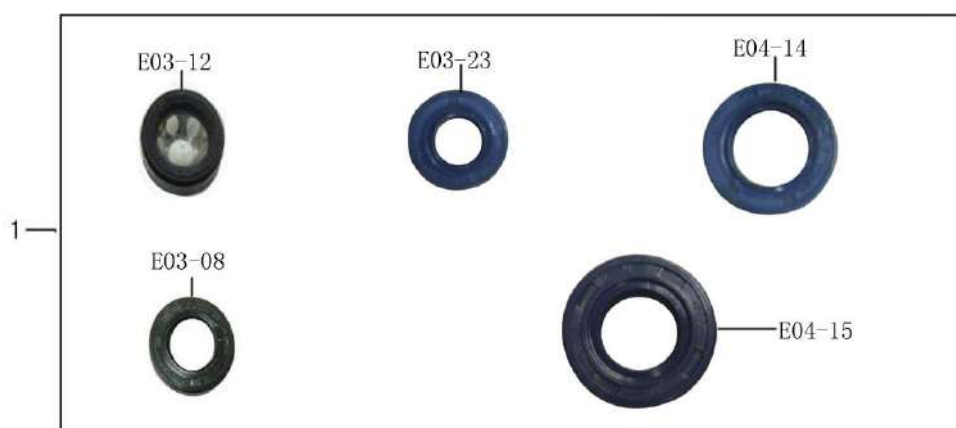

1651414-1	A Full Set Of Seals	
-----------	---------------------	--

E-15 全套 O 型圈 A FULL OF O-RING

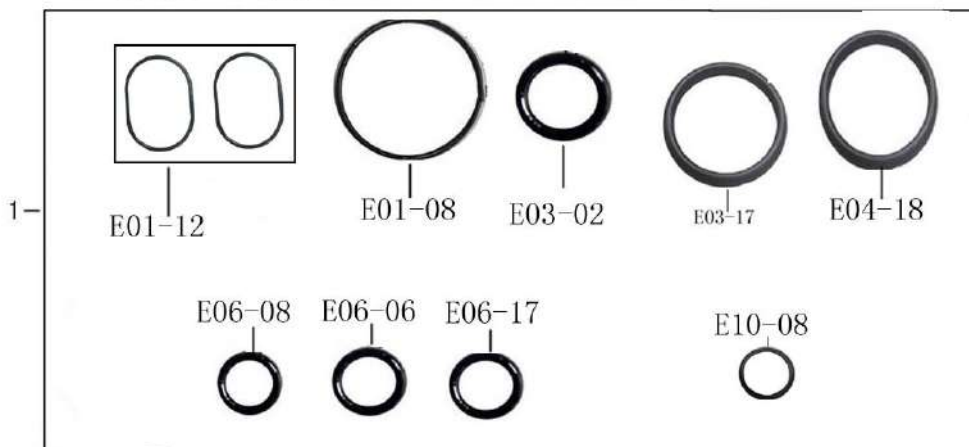

1651415-1	A Full Set Of O-Rings	
-----------	-----------------------	--

E-16 全套轴承 A FULL SET OF BEARING



1651416-1	A Full Set Of Bearings	
-----------	------------------------	--

165ML-E

LF200-14F



165ML-E	Complete Engine 165ML-E	
---------	-------------------------	--



LIFAN Motorcycle Warranty Policy

AUGUST 2024 Edition

LIFAN Motorcycle are covered under a warranty for **6 months or 6,000 kms**, whichever comes first. The specific items under warranty include:

- ❖ **The Engine** and its related parts
- ❖ Any defects or issues resulting from **substandard manufacturing or assembly**.

Items Not Covered Under Warranty:

The following items are not covered under this warranty:

- ❖ Tires & tubes; chain & sprockets; oils; covers & mirrors
- ❖ Any damages or wear and tear resulting from the **owner's handling and maintenance** of the motorcycle

Important Reminders for Safe Riding and Maintenance:

- ✓ Always wear a **helmet** while riding.
- ✓ Always keep your **headlights on**, even during the day, for safety and to prolong battery life.
- ✓ Ensure all **lights** are always functioning properly.
- ✓ Ride with **insurance** and proper **licensing**.
- ✓ **Change the oil** after the first **500 kms** and then every **2,000 kms**.
- ✓ Use **SAE 15W-40 or 10W-40** motor oil.
- ✓ Use **REGULAR** gasoline for small engines like motorcycles, not premium.
- ✓ Regularly **tighten all screws**.
- ✓ Periodically adjust the **tightness of the chain**.
- ✓ Review the Owner's Manual for more details.
- ✓ **Drive safely** within speed limits and always, wear a **helmet**.

By following these guidelines, you can ensure your LIFAN motorcycle remains in good condition and continues to provide a safe and enjoyable riding experience.