

UNIVERSAL

H A R D W A R E®

MEILUN



MOTORCYCLE PARTS CATALOGUE

Model: **ML250GY-4**

Spanish Lookout

sales@universalhardware.bz

+501 823 0254 +501 652-9933

Belize City

salesbz@universalhardware.bz

+501 224-4140 +501 667-3937

2025



Model: **LF150-5U**



Model: **LF250GY-4**



Model: **ML125-16D Flash**



Model: **LF150-5L**



Model: **ML250GY-4**



Model: **ML200ZH-3**



Model: **ML200GY-4**



Model: **LF100-A**



Model: **LF110-7A NINJA**



Model: **LF200GY-4**



Model: **LF125-5**



Model: **LF125-7**




Model: **LF150T-12C**



Model: **LF150-7 Retro**



Model: **LF200-14F**

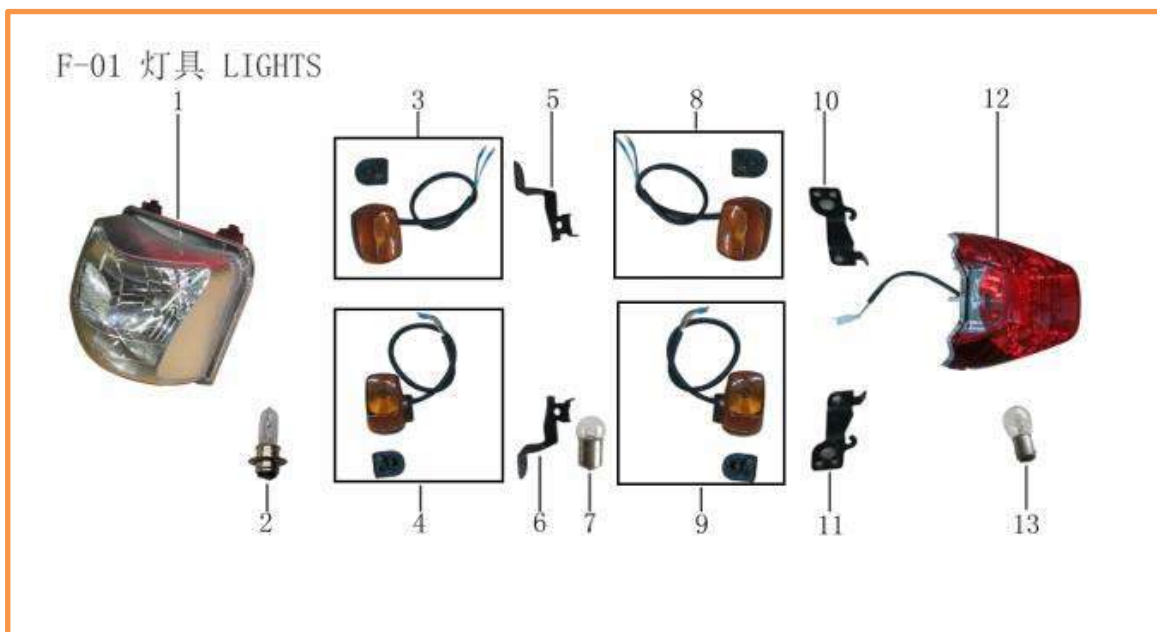

20041-1	Headlight Assy	
20041-2	Bulb	
20041-3	Winker, Front, RH	
20041-4	Winker, Front, LH	
20041-5	Bracket, Left Front Turn Signal	
20041-6	Bracket, Right Front Turn Signal	
20041-7	Bulb, Turn Signal	
20041-8	Signal Assy.,Left Rear Turn	
20041-9	Signal Assy.,Right Rear Turn	
20041-10	Bracket, Left Rear Turn Signal	
20041-11	Bracket, Right Rear Turn Signal	
20041-12	Light Unit,Tail	
20041-13	Bulb,Tail Light	


F-01-II 灯具 LIGHTS (250CC)




2501-6	Winker, Front, RH	
2501-7	Winker, Front, LH	
2501-8	Left Rear Turn Signal	
2501-9	Right Rear Turn Signal	
2501-10	Light Unit, Tail	
2501-11	Bulb, Tail Light	

F-02 仪表 & 拉索 METER & CABLE


20042-1	Meter Assy. (200CC)	
20042-2	Bracket,Meter	
20042-3	I-Rubber	
20042-4	Cable Comp,Clutch	
20042-5	Cable Comp, Choke	
20042-6	Cable Comp,Throttle	
20042-7	Cable Comp,Speedometer	
20042-8	Stay,Speedometer Cable	
2502-9	Meter Assy.(250CC)	

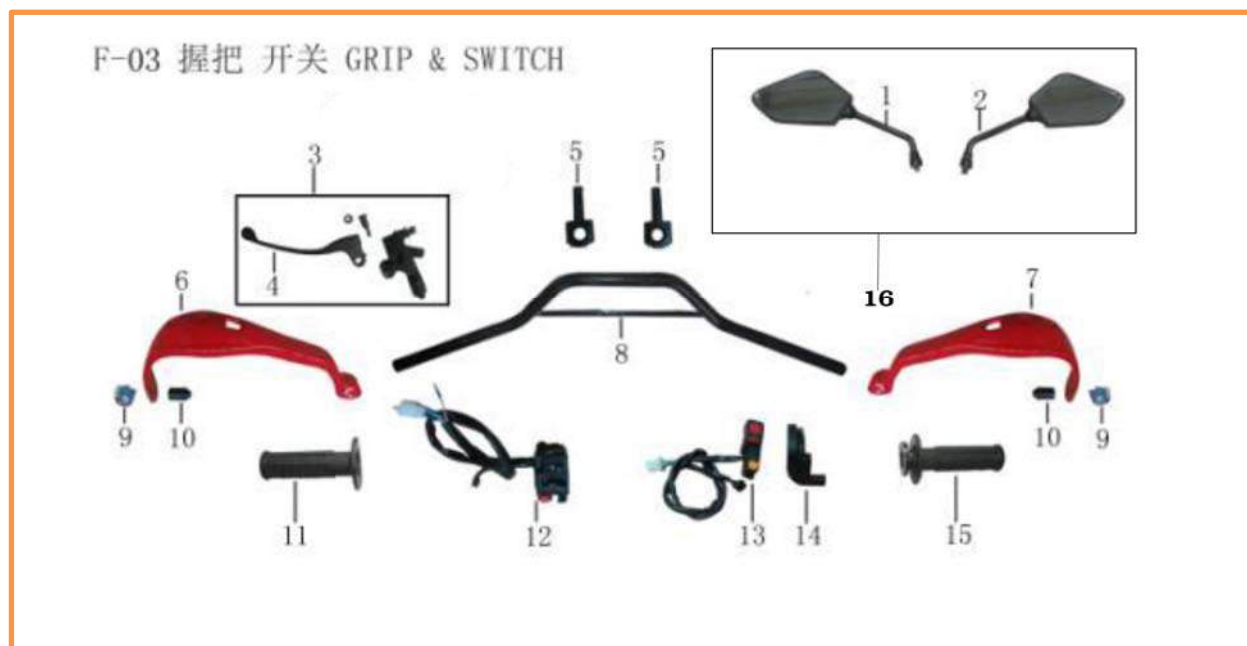

20043-1	Rearview Mirror, LH	
20043-2	Rearview Mirror, RH	
20043-3	Lever Set, Clutch	
20043-4	Lever, Clutch	
20043-5	Deck Hand Guard	
20043-6	Handle Guard, Left	
20043-7	Handle Guard, Right	
20043-8	Pipe Comp, Steering Handle	
20043-9	Hand Block Guard Decorated	
20043-10	Weight, Left Handle	
20043-11	Grip, LH	
20043-12	Handlebar Switch, LH	
20043-13	Handlebar Switch, RH	
20043-14	Seat, Greaser	
20043-15	Grip Comp., Throttle	
20043-16	Mirror - LF200GY-4 2pc set	

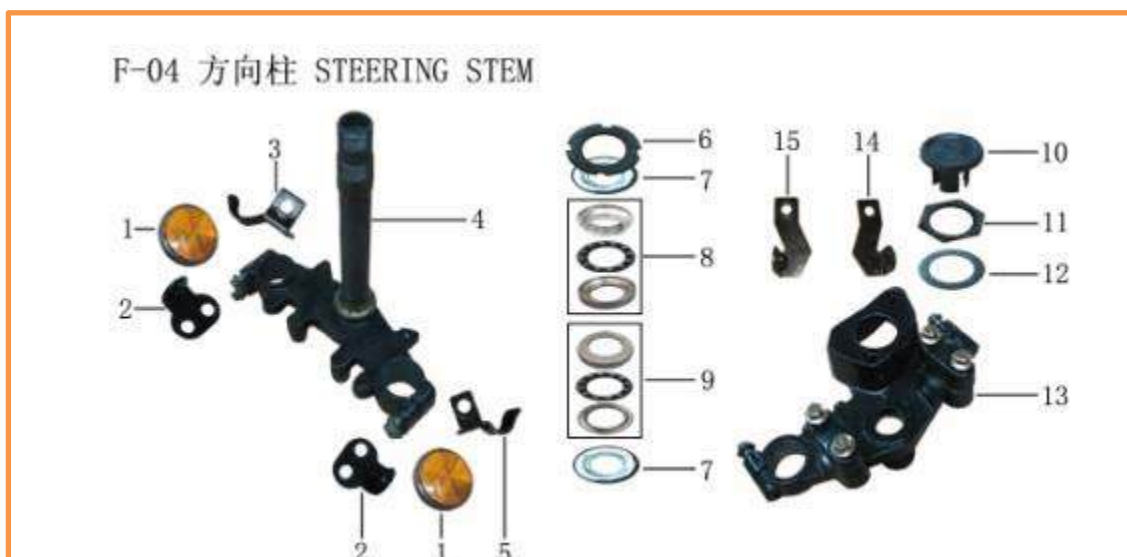


20044-1	Side Reflector	
20044-2	Bracket Side Reflector	
20044-3	Wire Clip I	
20044-4	Body Set,Steering Stem	
20044-5	Circlip, Hose I	
20044-6	Adjust Nut,Steering Stem	
20044-7	Dust Cap,Steering Stem	
20044-8	Upper Bearing,Steering Stem	
20044-9	Lower Bearing,Steering Stem	
20044-10	Hole Plug	
20044-11	Acorn Nut,Steering Stem	
20044-12	Washer,Steering Stem	
20044-13	Plate, Connecting Upper	
20044-14	Headlight Bracket, LH	
20044-15	Headlight Bracket, RH	



	Bracket,Side Reflector	
	Side Reflector	
	Wire Clip I	
2504-4	Body Set,Steering Stem	
	Circlip, Hose I	
	Adjust Nut,Steering Stem	
	Dust Cap,Steering Stem	
	Upper Bearing,Steering Stem	
	Lower Bearing,Steering Stem	
	Hole Plug	
	Acorn Nut,Steering Stem	
	Washer,Steering Stem	
2504-13	Plate, Connecting Upper	
	Headlight Bracket, LH	
	Headlight Bracket, RH	

F-05 减震器 SHOCK ABSORBER

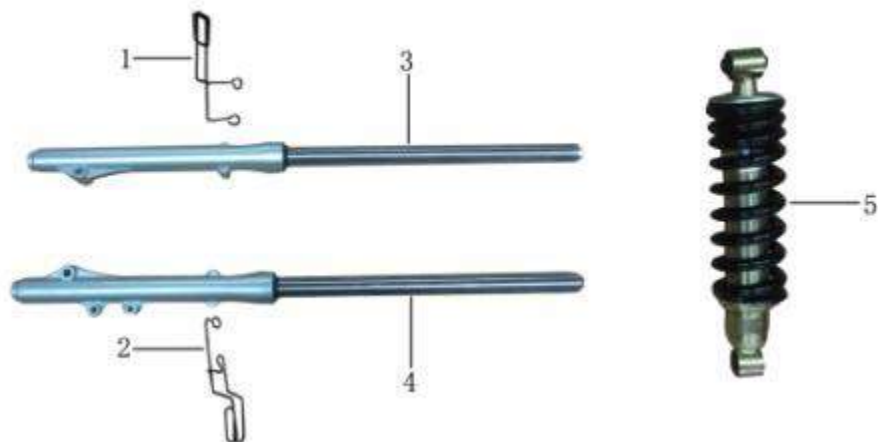

20045-1	Wire Clip li	
20045-2	Circlip, Hose li	
20045-3	Front Shock Absorber,RH	
20045-4	Front Shock Absorber,LH	
20045-5	Absorber Assy.,Rear Shock	



20045-1	Wire Clip li	
20045-2	Circlip, Hose li	
25045-3	Front Shock Absorber,RH	
25045-4	Front Shock Absorber,LH	
20045-5	Absorber Assy.,Rear Shock	
25045-6	Plastic Cover RH	
25045-7	Plastic Cover LH	



20046-1BA	Front Fender Black	
20046-1BU	Front Fender Blue	
20046-1R	Front Fender Red	
20046-2	Front Fender Lining	
20046-3	Seat	
20046-4	Seat Mounting Bracket	
20046-5	Rear Handrail,RH	
20046-6	Rear Handrail,LH	
20046-7	Rear Fender	
20046-8	Bracket,Rear Registration Plate	
20046-9	Rear Handrail,RH(250CC)	
20046-10	Rear Handrail,LH(250CC)	
2506-11	Bracket,Rear Registration Plate(250CC)	



20047-1BA	Fairing Black	
20047-1BU	Fairing Blue	
20047-1R	Fairing Red	
20047-2	Connecting Block Of Headlight Bracket	
20047-3BA	Cover,Fuel Tank Right Decorative Black	
20047-3BU	Cover,Fuel Tank Right Decorative Blue	
20047-3R	Cover,Fuel Tank Right Decorative Red	
20047-4BA	Cover,Fuel Tank Left Decorative Black	
20047-4BU	Cover,Fuel Tank Left Decorative Blue	
20047-4R	Cover,Fuel Tank Left Decorative RED	
20047-5	Cover,Right Side	
20047-6	Cover,Left Side	
20047-7BA	Body Cover,Right Black	
20047-7BU	Body Cover,Right Blue	
20047-7R	Body Cover,Right Red	
20047-8BA	Body Cover,Left Black	
20047-8BU	Body Cover,Left Blue	
20047-8R	Body Cover,Left Red	
20047-9BA	Cover Comp.,Tail (White W4) Black	
20047-9BU	Cover Comp.,Tail (White W4) Blue	
20047-9R	Cover Comp.,Tail (White W4) Red	



20048-1	Lock Kit	
20048-2	Rubber Jacket,Fuel Tank Prop	
20048-3	Fuel Tank Comp.	
20048-4	Sensor, Fuel Level	
20048-5	Fuel Switch Assy.	
20048-6	Pad,Fuel Tank Cushion	
20048-7	Washer,Flange	



20049-1	Tube,Front Wheel	
20049-2	Tire,Front Wheel	
20049-3	Wheel,Front	
20049-4	Disk Comp.,Front Brake	
20049-5	Axle,Front Wheel	
20049-6	Washer,Flange	
20049-7	Speed Counter	
20049-8	Disc-Brake Assy.,Front	
20049-9	Pad Comp.,Front Brake	
20049-10	Lever Comp.,Right Steering Handle	
20049-11	Switch, Brake	
20049-12	Bolt set brake Disc	
20049-13	Spoke - LF200GY-4 inside 18pc front	
20049-14	Spoke - LF200GY-4 outside 18pc front	
20049-15	Front Brake Hose	




2509-1	Tube,Front Wheel	
2509-2	Tire,Front Wheel	
2509-3	Wheel,Front	
2509-4	Disk Comp.,Front Brake	
2509-5	Axle,Front Wheel	
2509-6	Washer,Flange	
2509-7	Speed Counter	
2509-8	Disc-Brake Assy.,Front	
2509-9	Pad Comp.,Front Brake	
2509-10	Lever Comp.,Right Steering Handle	
2509-11	Switch, Brake	
20049-12	Bolt set brake Disc	
2509-13	Spoke - LF250GY-4 inside 18pc front	
2509-14	Spoke - LF250GY-4 outside 18pc front	




200410-1	Tube,Rear Wheel	
200410-2	Tire,Rear Wheel	
200410-3	Wheel,Rear	
200410-4	Rear Wheel Buffer	
200410-5	Sprocket Comp.,Final Driven	
200410-6	Sprocket,Final Driven	
200410-7	Axle,Rear Wheel	
200410-8	Rear Wheel Bush, LH	
200410-9	Sprocket Hub Inner Bush	
200410-10	Rear Wheel Bush,RH	
200410-11	Rear Brake	
200410-12	Rear Brake Shoe	
200410-13	Spoke - LF200GY-4 inside 18pc rear	
200410-14	Spoke - LF200GY-4 outside 18pc rear	



25010-1	Tube,Rear Wheel	
25010-2	Tire,Rear Wheel	
25010-3	Wheel,Rear	
25010-4	Sprocket Comp.,Final Driven	
25010-5	Collar	
25010-6	Pad Comp.,Rear Brake	
25010-7	Axle,Rear Wheel	
25010-8	Rear Wheel Bush, LH	
25010-9	Disk Comp.,Rear Brake	
25010-10	Rear Brake Caliper Plate	
25010-11	Rear Hydraulic Disc Brake Assy	
25010-12	Bolt set brake Disc	
25010-13	Spoke - LF200GY-4 inside 18pc rear	
25010-14	Spoke - LF200GY-4 outside 18pc rear	
25010-15	Rear Hub	

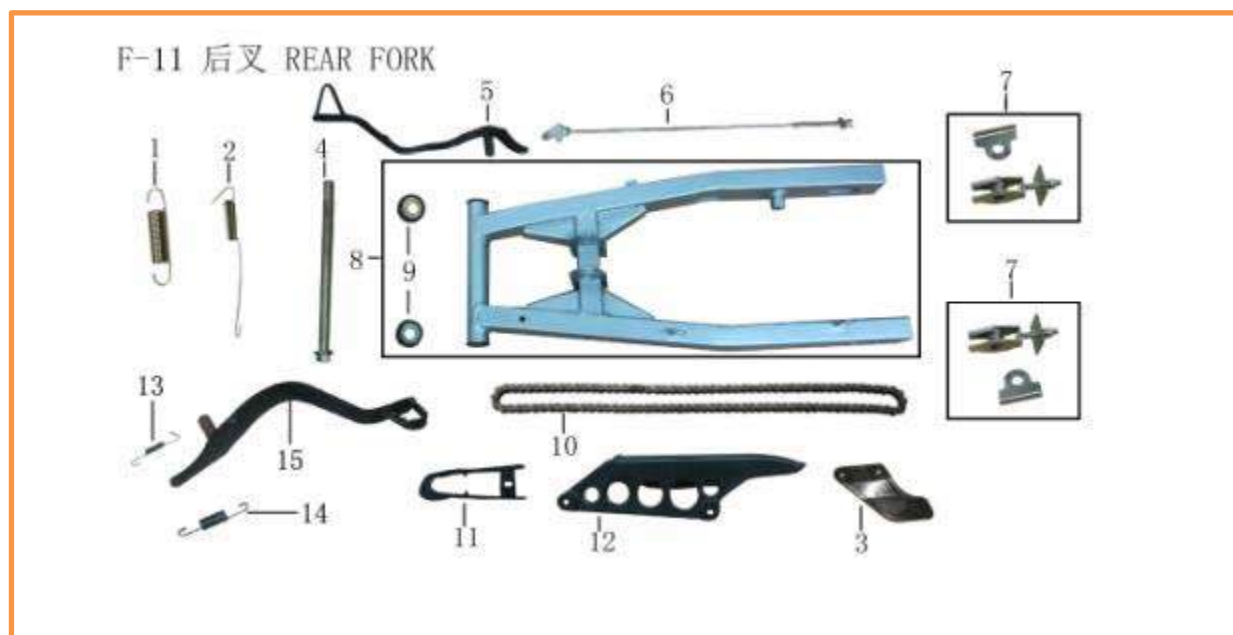


200411-1	Return Spring,Rear Brake Pedal	
200411-2	Extension Spring,Rear Brake Switch	
200411-3	Chain Link Guard Shield	
200411-4	Bolt, Rear Fork Pivot	
200411-5	Pedal Comp.,Rear Brake	
200411-6	Rod Comp.,Rear Brake	
200411-7	Adjuster,Drive Chain	
200411-8	Welding Comp.,Rear Fork	
25011-8	Fork - LF250GY-4 Rear	
200411-9	Cap,Rear Fork Dust Seal	
200411-10	Chain,Drive	
200411-11	Slider,Drive Chain	
200411-12	Case,Drive Chain	
25011-13	Extension Spring,Rear Brake Switch (250CC)	
25011-14	Return Spring,Rear Brake Pedal (250CC)	
25011-15	Pedal Comp.,Rear Brake (250CC)	

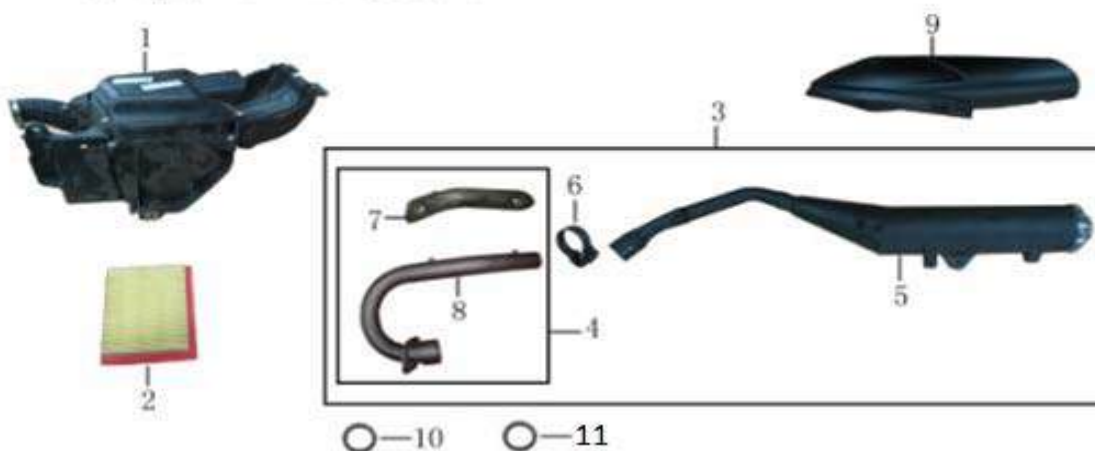F-12 排气消声器、空气滤清器 MUFFLER & AIR CLEANER


200412-1	Air Cleaner Comp.	
200412-2	Element,Air Cleaner	
200412-3	Muffler Assy.,Exhaust	
200412-4	Front Muffler	
200412-5	Rear Section Muffler	
200412-6	Clamp	
200412-7	Muffler Before The Decorative Cover	
200412-8	Exhaust Pipe	
200412-9	Muffler Shroud	
200412-10	Gasket,Exhaust Opening	
200412-11	Internal Muffler Gasket	



200413-1	Harness,Wire	
200413-2	Battery Assy.	
200413-3	Horn Assy.	
200413-4	Coil Assy.,Ignition	
200413-5	Unit Assy,C.D.I.	
25013-5	Unit Assy,C.D.I. (250CC)	
200413-6	Relay Assy.,Starting	
25013-6	Relay Assy.,Starting (250CC)	
200413-7	Rectifier Regulate Assy.	
200413-8	Flasher	
200413-9	Switch Assy.,Rear Brake	
25013-10	Harness,Wire (250 cc)	

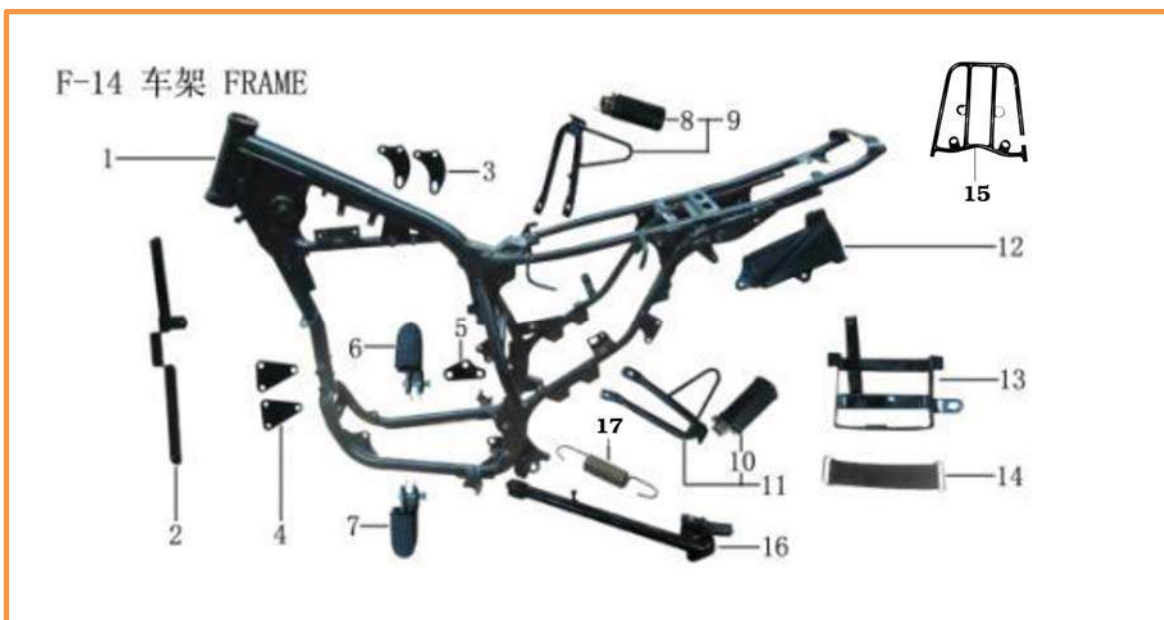

200414-1	Body Comp.,Frame	
25014-1	Body Comp.,Frame (250CC)	
200414-2	Bracket Of Fuel Tank's Decorative Cover	
200414-3	Plate,Upper Engine Hanger	
200414-4	Plate,Front Engine Hanger	
200414-5	Plate,Rear Engine Hanger	
200414-6	Step Assy.Right	
200414-7	Step Assy.Left	
200414-8	Step,Right Pillion	
200414-9	Step Assy.,Right Pillion	
200414-10	Step,Left Pillion	
200414-11	Step Assy.,Left Pillion	
200414-12	Tool Box	
200414-13	Bracket,Battery	
200414-14	Band,Battery	
200414-15	Carrier - Rear	
200414-16	Stand Side	
200414-17	Spring Side stand	

167FMM-M

ML250GY-4 Engine Parts



UNIVERSAL

H A R D W A R E®

Box 585, Center Road
Spanish Lookout
Tel 501 823 0254
sales@universalhardware.bz

3380 Chetumal Street
Belize City
Tel 501 224 4140
salesbz@universalhardware.bz

E-01 气缸体、气缸头 CYLINDER BLOCK & CYLINDER HEAD



1671-1	Cylinder Head Comp	
1671-2	Cylinder Block Comp	
1671-3	Cylinder Head Cover	
1671-4	Cylinder Head Gasket Comp	
1671-5	Gasket, Ylinder Block	
1671-6	Cylinder Head Cover Gasket	
1671-7	Cylinder Head Dowel Pin Φ10×20	
1671-8	Stud M8×40	
1671-9	Crankcase Cover Dowel Pin Φ10×14	
1671-10	Damping Rubber II	
1671-11	Damping Rubber, Cylinder Block	
1671-12	Damping Rubber, Cylinder Head	
1671-13	Cylinder Head Washer	
1671-14	Cylinder Head Screw M8×89	
1671-15	Nut Cap	
1671-16	Cylinder Bolt Steel Washer	
1671-17	Ignition Coil Wire Clip	
1671-18	Inlet Pipe	
1671-19	Spark Plug D8TC	
1671-20	Cylinder Head Cover Oil Passage Washer	



1672-1	Rocker Bracket Comp	
1672-2	Intake Valve	
1672-3	Exhaust Valve	
1672-4	Valve Split Cone	
1672-5	Valve Spring Retainer	
1672-6	Valve Stem Seal	
1672-7	Valve Inner Spring Seat	
1672-8	Valve Spring Outer Seat	
1672-9	Valve Outer Spring	
1672-10	Valve Inner Spring	
1672-11	Timing Driven Gear Set	
1672-12	Camshaft Adjusting Shim	
1672-13	Camshaft	
1672-14	Camshaft O-Ring	
1672-15	Camshaft Spring	
1672-16	Camshaft Stopper	
1672-17	Rocker Arm Pusher	
1672-18	Lower Rocker O-Ring	
1672-19	Lower Rocker Shaft	
1672-20	Lower Rocker	
1672-21	Lower Rocker Wave Washer	



1673-1	Crankcase Cover Comp RH	
1673-2	Plasitc Dipstick	
1673-3	Dipstick O-Ring	
1673-4	Starting Shaft Oil Seal	
1673-5	Sight Glass	
1673-6	Small Lid,RH	
1673-7	Clutch Lever Comp	
1673-8	Clutch Lever O-Ring	
1673-9	Clutch Lever Spring	
1673-10	Spring-Type Straight Pin	
1673-11	Cylinder Head Dowel PinΦ8×14	
1673-12	Clutch Cable Adjusting Stay	
1673-13	Crankcase Cover Gasket RH	

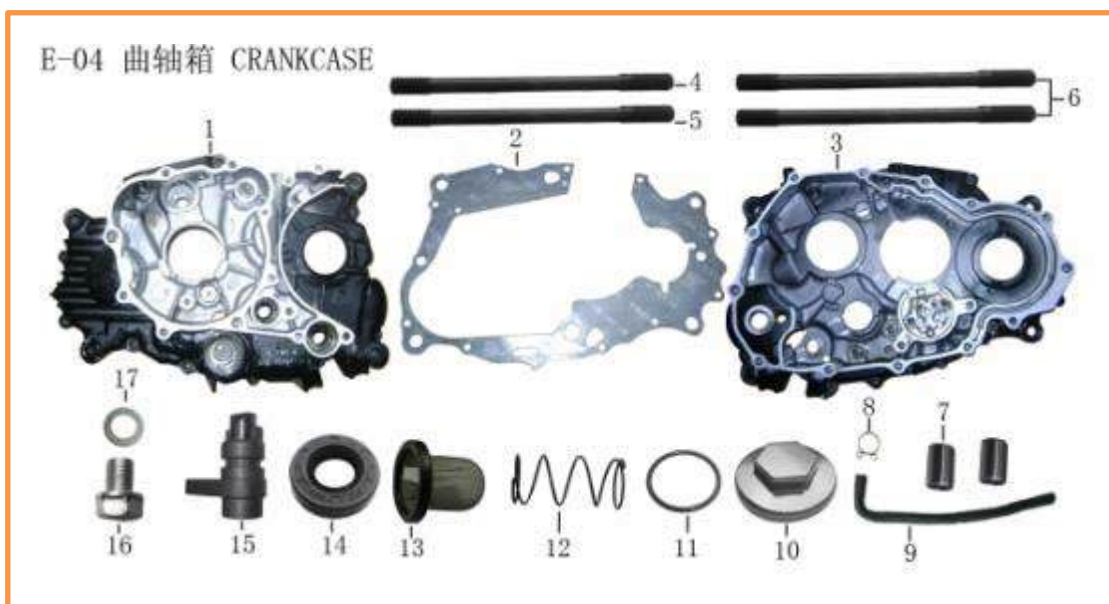

1674-1	Crankcase Comp LH	
1674-2	Crankcase Gasket	
1674-3	Crankcase Comp RH	
1674-4	Cylinder Bolt A	
1674-5	Cylinder Bolt C	
1674-6	Cylinder Bolt B	
1674-7	Crankcase Dowel PinΦ10×14	
1674-8	Crankcase Waste Pipe Clip	
1674-9	Crankcase Waste Pipe	
1674-10	Gauze Cover	
1674-11	Gauze Cover O-Ring	
1674-12	Gauze Spring	
1674-13	Gauze Set	
1674-14	Gearshift Shaft Oil Seal	
1674-15	Pin-Keeping Body Comp	
1674-16	Crankcase Drain Plug	
1674-17	Plug Drain Washer	

E-05 机油泵、机油滤清器 OIL PUMP & OIL FILTER


1675-1	primary drive gear Locknut	
1675-2	Primary Drive Gear Thrust Washer	
1675-3	Oil Filter Assy	
1675-4	Oil Pump Driving Sprocket	
1675-5	primary drive Gear	
1675-6	Oil Pump Gasket	
1675-7	Oil Pump Assy	
1675-8	Oil Pump Driven Gear	
1675-9	Oil Pump Chain	
1675-10	Oil Pump Chain Limiter	



1676-1	Clutch Main Body	
1676-2	Bearing 16003	
1676-3	Clutch Pusher	
1676-4	Clutch Lifter	
1676-5	Collar 17	
1676-6	Splined Washer	
1676-7	Clutch Bush	

E-07 左曲轴箱盖、磁电机 LEFT CRANKCASE COVER & MAGNETO




1677-1	Magenta Stator Comp	
1677-2	Magneto Rotor Assy	
1677-3	Starting Clutch Comp.	
1677-4	View Hole Plug	
1677-5	View Hole Plug O-Ring	
1677-6	Crankcase Cover LH	
1677-7	Idler Cover O-Ring	
1677-8	Idlercover	
1677-9	Rear Cover,LH	
1677-10	Plug O-Ring	
1677-11	Small Lid,RH	
1677-12	Crankcase Cover Gasket LH	
1677-13	Crankcase Dowel PinΦ10×14	
1677-14	Magneto Screw	
1677-15	Crankshaft Oil Seal,LH	
1677-16	Ignition Coil Wire Clamp	

E-08 曲轴、活塞 CRANKSHAFT & PISTON



1678-1	Crankshaft & Connecting Rod	
1678-2	Piston Pin Circlip	
1678-3	Piston Pin	
1678-4	Piston	
1678-5	Piston Ring Set	
1678-6	Timing Drive Gear	
1678-7	Bearing63/28	
1678-8	Balanced Shaft Driving Gear	
1678-9	Bearing6203	
1678-10	Balanced Shaft	
1678-11	Bearing6303	
1678-12	Balanced Shaft Driven Gear	
1678-13	Washer, Balanced Shaft	
1678-14	Locknut	

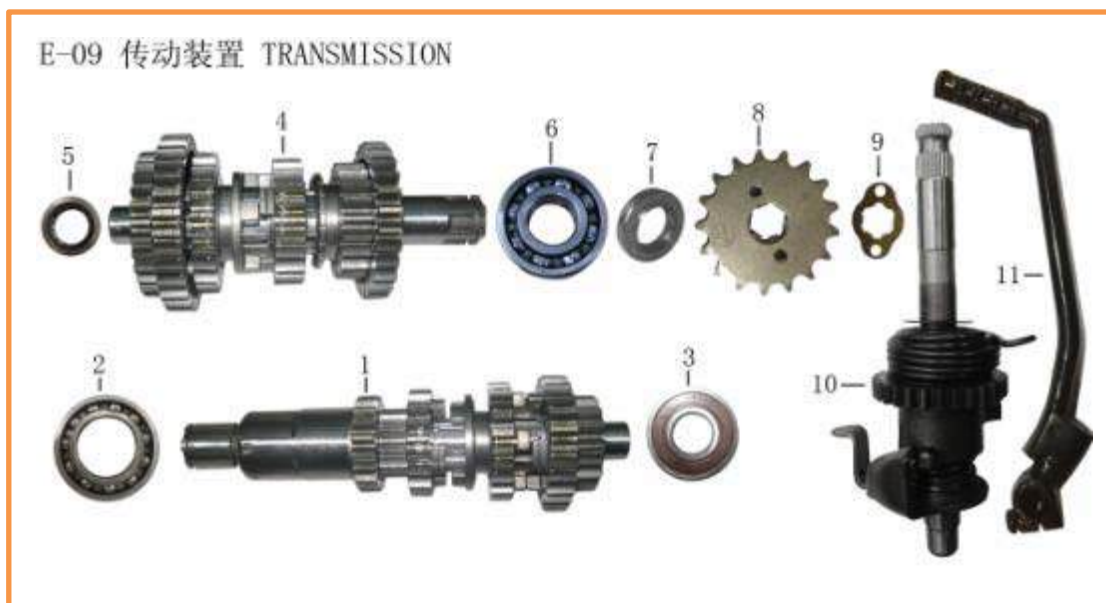

1679-1	Mainshaft Comp		
1679-2	Bearing 6006		
1679-3	Bearing 6202-RS		
1679-4	Countershaft Comp		
1679-5	Needle Bearing NK152312		
1679-6	Bearing 6204/P6		
1679-7	Countershaft Oil Seal		
1679-8	Output Sprocket		
1679-9	Output Sprocket Locating Plate		
1679-10	Starting Shaft Assy		
1679-11	Kick-Starter Assy		



16710-1	Gearshift Rod Assy	
16710-2	Gearshift Shaft Assy	
16710-3	Fork Shaft	
16710-4	Fork III	
16710-5	Fork II	
16710-6	Fork I	
16710-7	Gearshift Cam	
16710-8	Needle Bearing NK2110	
16710-9	Gearshift Drum Comp	
16710-10	Gear Setting Plate Comp	
16710-11	Setting Plate Torsion Spring	
16710-12	Indicator Oil Seal	
16710-13	Gear Indicator Contact Point Comp	
16710-14	Gear Indicator Comp	

E-11 起动电机 STARTING MOTOR




16711-1	Electric Starter	
16711-2	Dual-Gear Comp. I	
16711-3	Dual-Gear Shaft	
16711-4	Dual-Gear II	
16711-5	Dual-Gear Washer	
16711-6	Needle Bearing HK1010	
16711-7	Starting Clutch Gear Comp	


E12 Carburettor



16712-5	Carburetor	
---------	------------	--

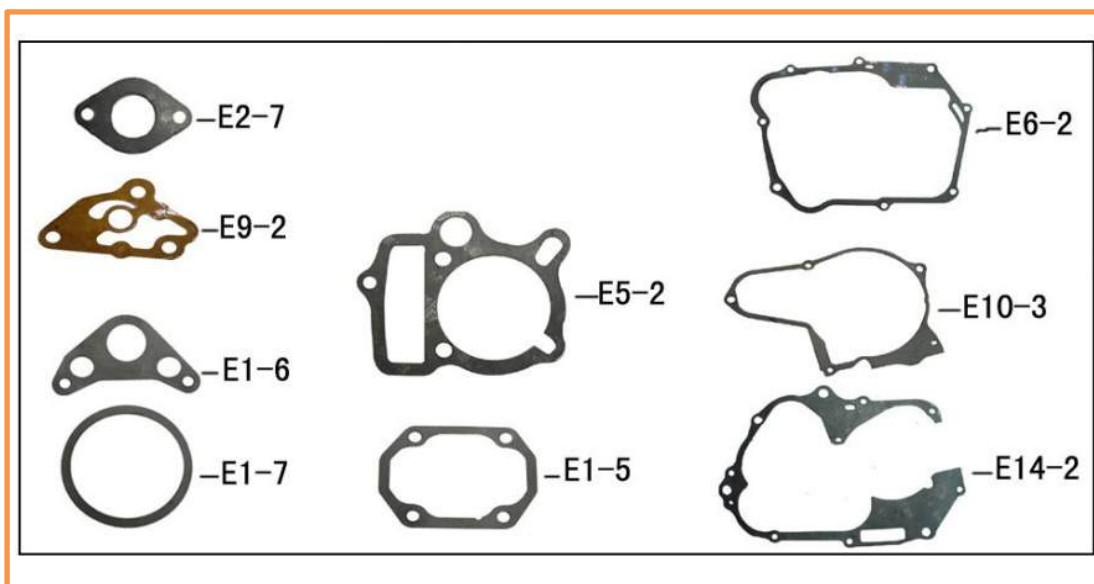

16713-1	Full Set Of Gaskets	
---------	---------------------	--

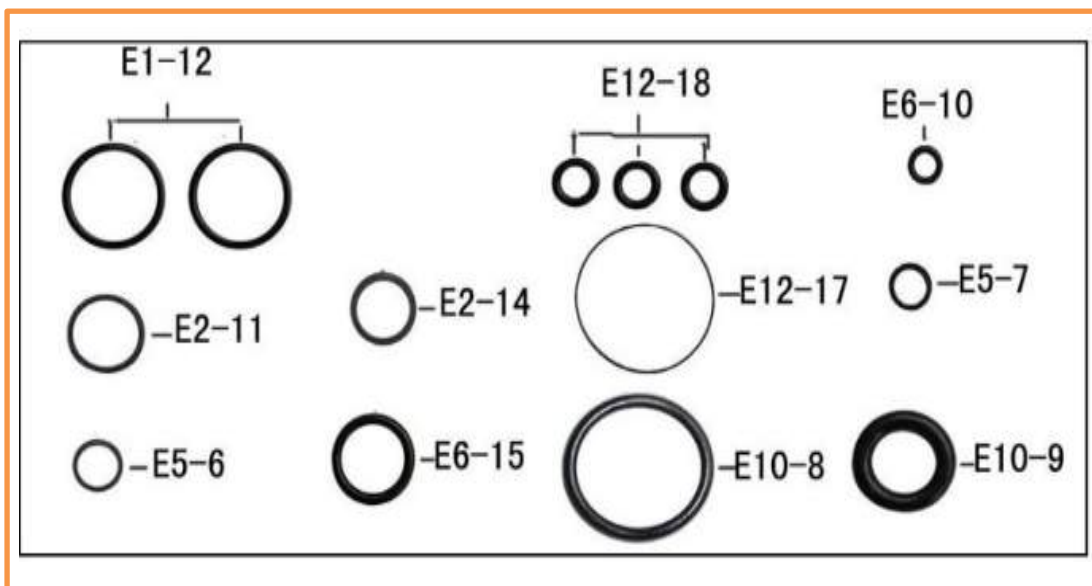

16714-1	Full Set Of O-Rings	
---------	---------------------	--



16715-1	Full Set Of Seals	
---------	-------------------	--

E-23 全套轴承 A FULL SET OF BEARINGS



16716-1	Full Set Of Bearings	
---------	----------------------	--

167FMM-M

ML250GY-4



167FMM-M	Complete Engine	
----------	-----------------	--



LIFAN Motorcycle Warranty Policy

AUGUST 2024 Edition

LIFAN Motorcycle are covered under a warranty for **6 months or 6,000 kms**, whichever comes first. The specific items under warranty include:

- ❖ **The Engine** and its related parts
- ❖ Any defects or issues resulting from **substandard manufacturing or assembly**.

Items Not Covered Under Warranty:

The following items are not covered under this warranty:

- ❖ Tires & tubes; chain & sprockets; oils; covers & mirrors
- ❖ Any damages or wear and tear resulting from the **owner's handling and maintenance** of the motorcycle

Important Reminders for Safe Riding and Maintenance:

- ✓ Always wear a **helmet** while riding.
- ✓ Always keep your **headlights on**, even during the day, for safety and to prolong battery life.
- ✓ Ensure all **lights** are always functioning properly.
- ✓ Ride with **insurance** and proper **licensing**.
- ✓ **Change the oil** after the first **500 kms** and then every **2,000 kms**.
- ✓ Use **SAE 15W-40 or 10W-40** motor oil.
- ✓ Use **REGULAR** gasoline for small engines like motorcycles, not premium.
- ✓ Regularly **tighten all screws**.
- ✓ Periodically adjust the **tightness of the chain**.
- ✓ Review the Owner's Manual for more details.
- ✓ **Drive safely** within speed limits and always, wear a **helmet**.

By following these guidelines, you can ensure your LIFAN motorcycle remains in good condition and continues to provide a safe and enjoyable riding experience.